



# Broadcast Spreader

APPROX. **15 LBS.** CAPACITY




4400707



## ASSEMBLY AND OPERATING INSTRUCTIONS BE SURE TO FOLLOW INSTRUCTIONS CAREFULLY

### ASSEMBLY

1. Align the coupling on the end of the crank with the threaded end of the crank shaft as shown (FIG. A). Screw the crank onto the shaft securely.


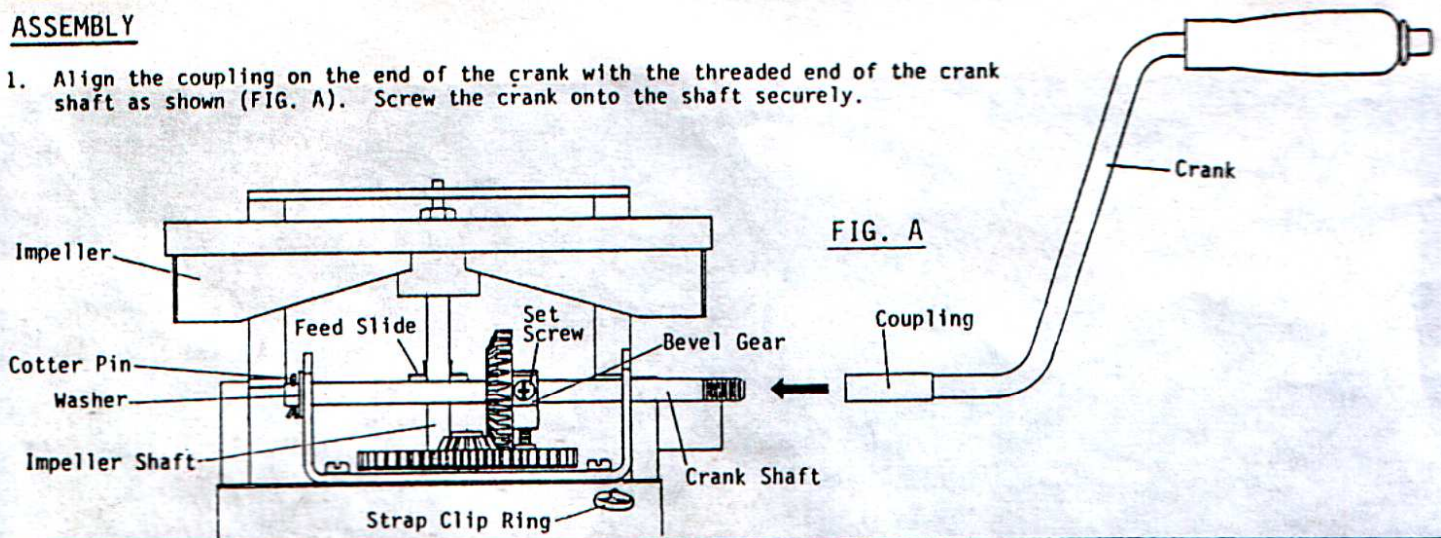


### OPERATION

#### SETTING INSTRUCTIONS

NOTE: Be sure to set the feed slide opening before filling the bag with seeds. Set the opening as follows:

1. Refer to the label on the bottom of the seeder for the recommended setting for the type of seed being sown.
2. Loosen the wing nut that secures the flow adjustment bracket to the side of the seeder as shown (FIG. B).
3. Move the spring loaded flow control arm to the desired setting number and hold there. Slide the flow adjustment bracket over against the flow control arm and hold. Tighten the wing nut securely. Let go of the flow control arm and bracket. The bracket should hold the arm in place.
4. To close the feed slide, simply push down on the eyed portion of the adjustment bracket. The control arm will snap back, closing the slide. To reopen the slide, pull back on the control arm to the desired setting position. The flow adjustment bracket will snap in place, holding the arm in position.

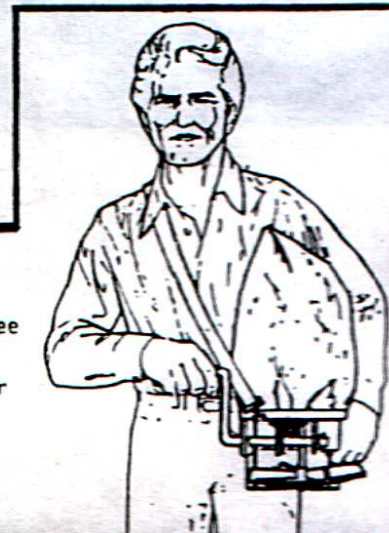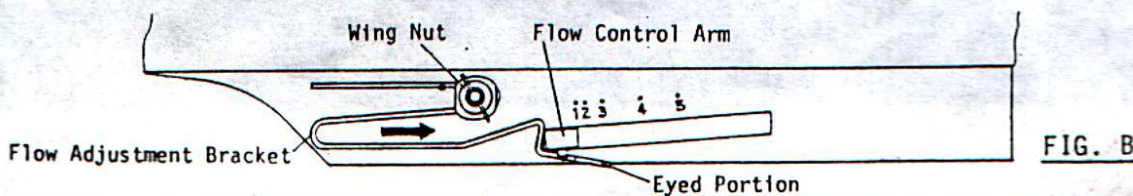

#### TO OPERATE

1. Clip the end of the shoulder strap into the ring at the crank end of the seeder. (See Fig. A). Adjust the strap to the desired length.
2. Before filling, make sure the feed slide is in the closed position. Open the zipper in the top of the bag and fill approximately 1/2 to 2/3 full. Close the zipper.
3. Carry the seeder in a level position. Walk at a normal pace, turning the crank a full turn every other step at a constant rate.
4. Always start turning the crank and walk forward before opening the feed slide.