



HOW TO USE

1. Depending on your angle with the dual head, firmly press or pull the tire gauge head onto the tire valve stem.
2. Read tire pressure off the measurement stick when it pops out.
3. Push in measurement stick to take another reading.

NOTE: For the most accurate reading, check your air pressure when tires are cold. For accuracy \leq 10 PSI, pull tongue of gauge out and push back completely before use.