

# THE ULTIMATE TRAILER JACK MODEL RDJ-2K (Tri-Base & Side Mount)

## Read, Understand, Follow and Save These Instructions

Read, understand and follow all of these instructions and warnings (Instructions) before installing and using this product. Install and use this product only as specified in these instructions. Improper installation or use of this product may result in property damage, serious injury, and/or death. NEVER allow installation or use of this product by anyone without providing them with these instructions. You must, read, understand and follow all instructions and warnings for any product(s) to which this product is used in conjunction with or installed. Save these instructions with the product for use as a reference for any future installation and use of the product.



## WARNING

Failure to follow these warnings and instructions may result in property damage, serious bodily injury, and/or death.

- \* Purchaser/owner must ensure that product is installed according to these instructions and must NOT alter or modify product.
- \* Operator and bystanders should NEVER position any part of body under any portion of this product or the load being supported.
- \* Fully retract or lift jack for towing.
- \* When using the drop foot or drop leg, make certain the supplied pin is fully inserted through both sides of the inner tube and the drop tube before using the jack.
- \* If using optional drop foot or caster, always remove drop foot or caster before towing to maximize ground clearance.

- \* This product is NOT intended to be used as a transport device for implement to which it is attached. Minimize movement of the implement while jack is under load.
- \* Secure the load, vehicle and trailer from rolling by blocking the wheels when operating jack or coupling trailer.
- \* Jack capacity is limited to the lesser of the jack, footplate, or caster wheel capacity.
- \* NEVER exceed maximum rated capacity. Refer to stamped markings or decals on product to obtain rated capacity. If uncertain, contact us at [www.future2solutions.com](http://www.future2solutions.com).

- \* These jacks are NOT designed for mounting to round tongues.
- \* All welding must be performed by an AWS certified welder.
- \* Always replace bend, broken or worn parts before using this product.
- \* Do NOT attempt to weld "Bolt-On" brackets or straps to the tongue.
- \* If this product has a drop foot or drop leg, NEVER attempt to adjust the drop foot or drop leg when there is any load on the jack.
- \* Do NOT allow children to play on or around this product or the load being supported.

**HOW TO USE:** The Rapid Deployment Jack can be quickly lowered or raised approximately 12 inches when the jack is not loaded or the trailer is not moving. To use the rapid deployment feature, remove the hitch pin clip then firmly grip the jack post while rotating the swivel handle 180 degrees. Lower or raise the jack post to the desired elevation, rotate the swivel handle back into place and position the jack up or down until the pin engages a hole in the jack post. **Replace the hitch pin clip to lock the swivel handle.** NEVER turn or pull the swivel handle while jack is supporting load or trailer is moving! The swivel handle MUST be secured by the hitch pin clip at all times except when the jack post is being lowered or raised using the rapid deployment feature. The hitch pin clip must be installed when the jack is supporting a load, when the jack is "jacking" the trailer or the trailer is hitched to a tow vehicle. Illustrations showing dimensions of the RDJ-2K and a photo of the swivel handle with hitch pin clip installed are presented below.

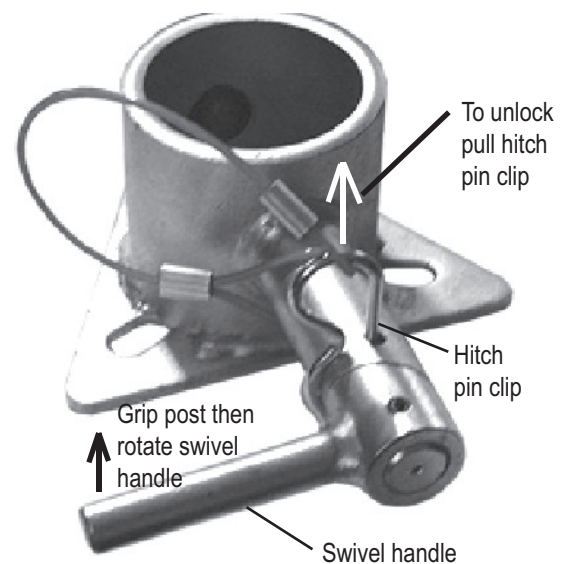
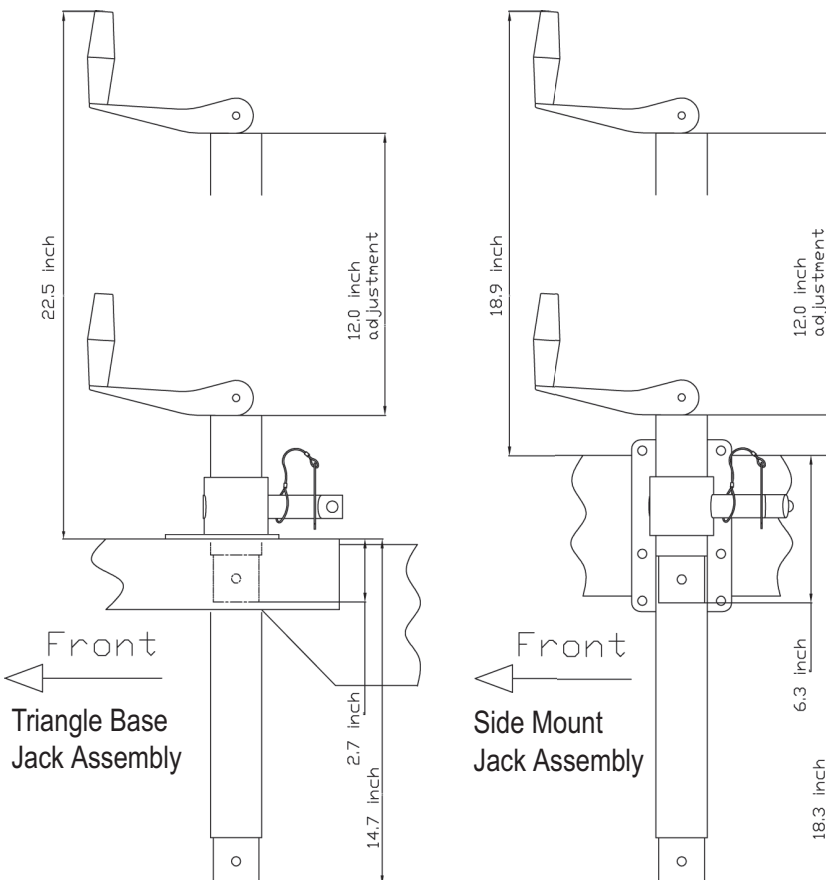


Photo of Triangle Base showing swivel handle locked with hitch pin clip installed. To unlock, pull hitch pin clip upward until removed. Firmly grip jack post before rotating swivel handle 180 degrees. The hitch pin clip MUST be installed at all times except when using the rapid deployment feature of the RDJ-2K as explained above.