





Wood Nesting Hutch
Assembly Instructions

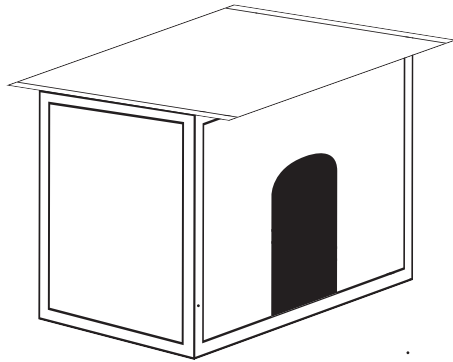

Complete your Wood Hutch by attaching to the Universal Welded Wired Pen!!

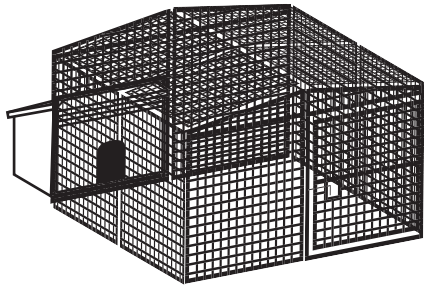

Shown with optional Universal Welded Wire Pen.


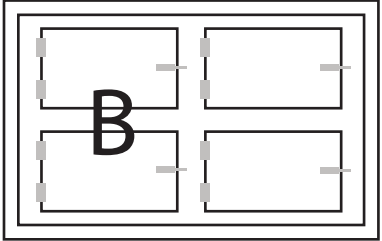
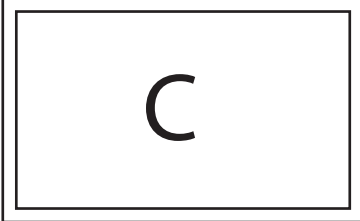
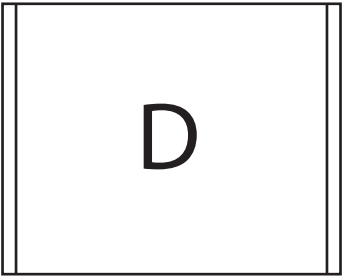



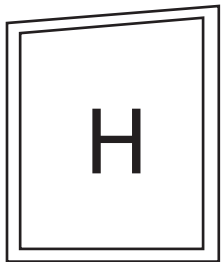
 

 
Important Notes:

Lay out all components prior to start of assembly.

Flat level surface recommended for assembly.

If any components are missing or damaged do not return to retailer. Please call Rugged Ranch Products at: 760-734-3748.

Please visit our website to see our complete line of Rugged Ranch Products.
www.ruggedranch.net

 <p data-bbox="1171 365 1297 389">Front Panel</p>	 <p data-bbox="1722 357 1848 381">Back Panel</p>	
 <p data-bbox="1165 690 1312 714">Bottom Panel</p>	 <p data-bbox="1717 698 1848 722">Roof Panel</p>	
 <p data-bbox="1123 925 1354 950">Nesting Box Floor (2)</p>	 <p data-bbox="1675 901 1885 925">Nesting Box Lip (2)</p>	
 <p data-bbox="1071 1258 1228 1282">Center Divide</p>	 <p data-bbox="1417 1274 1575 1299">Side Panel (2)</p>	 <p data-bbox="1806 1104 1911 1128">1 7/8" (5)</p>  <p data-bbox="1816 1266 1900 1291">2" (19)</p>
 <p data-bbox="1081 1453 1953 1534">2" x 10" Block (2) - These are used in conjunction with the Universal Welded Wire Pen. If you attach the Wood Hutch to the Welded Wire Pen, these blocks should be screwed on to the back edge to level the hutch and keep it off of the ground.</p>		