

OWNER'S MANUAL & OPERATING INSTRUCTIONS



Rated Pulling Capacity 2000 lb.

Rated Marine Capacity 5000 lb./Rated Rolling Capacity 6000 lb.



SAVE THESE INSTRUCTIONS
Important Safety Instructions
are included in this manual.

MADE IN CHINA
REV 12090-20160516

12039 Smith Ave.
Santa Fe Springs CA 90670
USA / 1-877-338-0999
www.championpowerequipment.com

Have questions or need assistance?

Do not return this product to the store!

WE ARE HERE TO HELP!

Visit our website:

www.championpowerequipment.com

for more info:

- Product Info & Updates
- Tech Bulletins
- Frequently Asked Questions
- Product Registration

– or –


Call our Customer Care Team Toll-Free at:

1-877-338-0999

FOR RESIDENTS OF CALIFORNIA:

WARNING: This product contains chemicals known to the State of California to cause cancer and birth defects and other reproductive harm.

*We are always working to improve our products. Therefore, the enclosed product may differ slightly from the image on the cover.

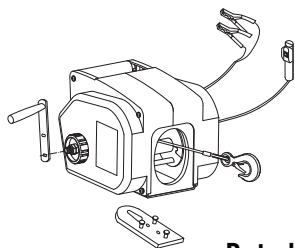

Utility Winch

Rated Pulling Capacity 2000 lb.
Rated Marine Capacity 5000 lb./Rated Rolling Capacity 6000 lb.

TABLE OF CONTENTS

| | | | |
|--|----------|---|-----------|
| Introduction | 1 | Operation | 9 |
| Introduction | 1 | Inspection | 9 |
| This Booklet | 1 | Connecting a Load | 9 |
| Website | 1 | General Tips for Safe Operation | 10 |
| Manual Conventions | 2 | Manual Operation | 10 |
| Safety Rules | 3 | Winching Techniques | 11 |
| Controls and Features | 5 | Maintenance | 12 |
| Utility winch | 5 | Cleaning | 12 |
| Assembly | 6 | Lubrication | 12 |
| Contents of the Box | 6 | Cable Assembly Replacement | 12 |
| Utility Winch Location | 6 | Storage | 12 |
| Mounting the Winch Permanently | 6 | Troubleshooting | 13 |
| Adapter Plate | 7 | Specifications | 14 |
| Battery Connections | 7 | Performance Specifications | 14 |
| Temporarily Wiring the Winch | 8 | Parts Diagram | 15 |
| Remote Control | 8 | Parts List | 16 |

INTRODUCTION

Introduction

Congratulations on your purchase of a Champion Power Equipment utility winch. CPE designs and builds winches to strict specifications. With proper use and maintenance, this winch will bring years of satisfying service.

Website

Champion Power Equipment manufactures and supports every product we sell. To find out more about your utility winch please visit our website at:

→ www.championpowerequipment.com

This Booklet

Every effort has been made to ensure the accuracy and completeness of the information in this manual. We reserve the right to change, alter and/or improve the product and this document at any time without prior notice.

Record the model and serial numbers as well as date and place of purchase for future reference. Have this information available when ordering parts and when making technical or warranty inquiries.

| Champion Power Equipment Support |
|----------------------------------|
| 1-877-338-0999 |
| Model Number |
| 12090 |
| Serial Number |
| |
| Date of Purchase |
| |
| Purchase Location |
| |

This manual uses the following symbols to help differentiate between different kinds of information. The safety symbol is used with a key word to alert you to potential hazards in operating and owning power equipment.

Follow all safety messages to avoid or reduce the risk of any damage, serious injury or death.

DANGER

DANGER indicates an imminently hazardous situation which, if not avoided, **will** result in death or serious injury.

CAUTION

CAUTION used without the safety alert symbol indicates a potentially hazardous situation which, if not avoided, **may** result in property damage.

WARNING

WARNING indicates a potentially hazardous situation which, if not avoided, **could** result in death or serious injury.

NOTE

If you have questions regarding your winch, we can help. Please call our help line at **1-877-338-0999**

CAUTION

CAUTION indicates a potentially hazardous situation which, if not avoided, **may** result in minor or moderate injury.

SAFETY RULES

WARNING

Read this manual thoroughly before operating your winch. Failure to follow instructions could result in damage, serious injury or death.

WARNING

Do not exceed the rated capacities.

DANGER

Do not use this winch for lifting or moving people or animals.

DANGER

Keep yourself and others a safe distance to the side of the cable when under tension.

DANGER

Never step over or under a cable or near a cable under load.

WARNING

The wire cable may break before the motor stalls. For heavy loads at or near rated capacity, use a pulley block/snatch block to reduce the load on the wire cable.

WARNING

Winch is NOT waterproof and is NOT for use underwater. DO NOT mount in a location that could have the winch submerged in water.

DANGER

Do not use any vehicle to aid or help the winch pull any loads.

WARNING

Do not use the winch to secure an item(s) for transport.

WARNING

Disconnect the winch from power source when not in use.

WARNING

Never leave an item(s) attached to the wire cable, hook, or loaded when not in use.

WARNING

Do not use for overhead lifting.

CAUTION

Use gloves to protect hands when handling the hook or cable. Never let the cable slide through your hands.

CAUTION

Do not wrap the cable around any object and hook it back onto itself.

DANGER

Do not install or have crank handle installed if the winch is connected to a power source.

DANGER

Do not operate if cable is worn, frayed or appears damaged. Replace cable before use.

⚠ WARNING

When re-spooling the cable, ensure that the cable spools in the over-wind position with the cable entering the drum from the top, not the bottom.

To re-spool correctly, and while wearing gloves, keep a slight load on the cable while pushing the remote button to draw in the cable. Do not let your hands get within 12 in. (30.5 cm) of the winch while re-spooling. Turn off the winch and repeat the procedure until a few inches of cable are left before the stop bracket. Keep hands clear of the winch, cable and slight load which winch is under power.

⚠ DANGER

Do not anchor or mount winch in any overhead position. Overhead use not recommended.

⚠ DANGER

Do not lift any loads over people, animals, or property that cannot be damaged. Falling loads may result in property damage, injury or death.

⚠ WARNING

Use only supplied or manufacturer replacement power cables. Do not connect other cables to a power source and winch, as this may damage the winch and power source.

⚠ WARNING

Any support structure the winch will be mounted to must be designed to withstand any load or forces that the load and winch may apply to the structure. All mounting hardware must also be able to withstand all load weights and forces.

⚠ CAUTION

Duration of winching pulls should be kept as short as possible.

If the motor becomes uncomfortably hot to the touch, stop winching immediately and let it cool down for a few minutes. Do not pull for more than one minute at or near the rated load.

⚠ CAUTION

If the motor stalls, do not maintain power to the winch.

Utility winches are designed and made for intermittent use and should not be used in constant duty applications.

CAUTION

Never disengage clutch under load. Only engage or disengage clutch before connection of loads.

⚠ DANGER

Do not use damaged or broken equipment.

Before each use inspect the winch and equipment for any damage to the following:

- Winch
- Wire cable
- Hook
- Battery or Remote cables

If any of the above items or any other items appear to be damaged or broken then replace or fix before use.


⚠ WARNING

Never operate a damaged or malfunctioning winch. If winch appears damaged or is malfunctioning, disconnect power source and disconnect load.

CONTROLS AND FEATURES

Read this owner's manual before operating your winch. Familiarize yourself with the location and function of the controls and features. Save this manual for future reference.

Utility winch

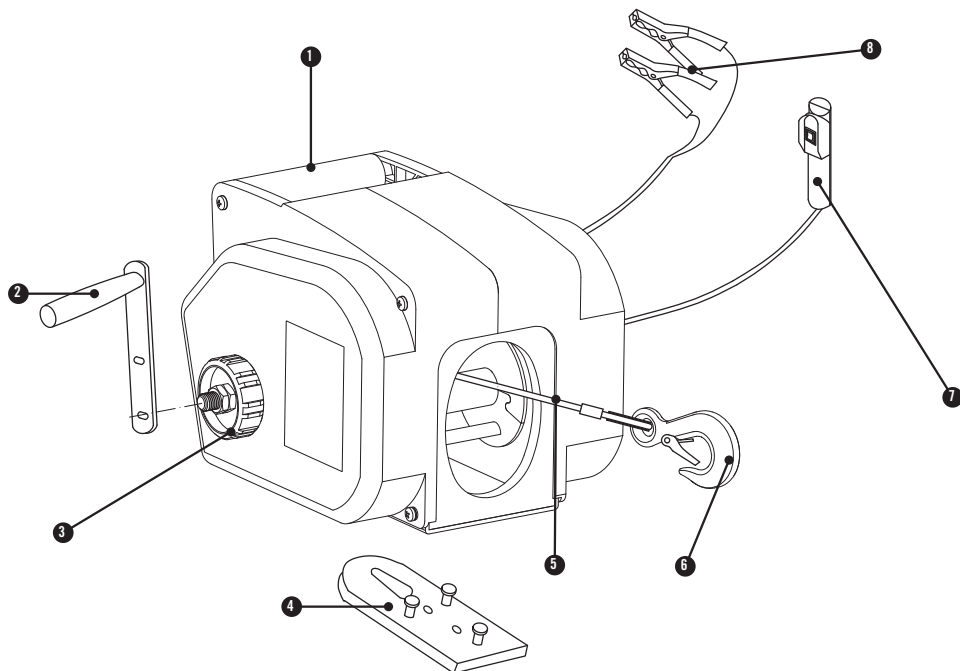

- | | |
|---|--|
| <p>(1) Carry Handle – Can be used to carry the winch when not mounted or in use.</p> <p>(2) Crank Handle – Used to manually retract or extend wire cable.</p> <p>(3) Clutch – Used to engage or disengage wire cable.</p> <p>(4) Adapter Plate – Used to temporarily mount winch.</p> | <p>(5) Wire Cable</p> <p>(6) Hook – Used to secure wire cable to load.</p> <p>(7) Remote Control – Used to electronically retract or extend wire cable.</p> <p>(8) Battery Cables – Used to connect the winch to 12V automotive battery.</p> |
|---|--|

Contents of the Box

This CPE 2000 lb./5000 lb./6000 lb. utility winch comes with the wire cable and hook already attached. The box will also contain the remote control, battery cables, adapter plate and crank handle. Please make sure to remove all contents from the box before assembly or operation.

Utility Winch Location

When choosing an anchor (permanent or temporary) for the utility winch location please keep these safety points in mind.

- The winch area must not be accessible to children or animals. Loads may be very heavy and property damage, injury or death may occur if distractions are present.
- Make sure the winch is not installed on any support structure that is located overhead.
- The winch should be located in an area that has enough clearance on all sides of it, to avoid any accidental breaking of the wire cable.
- Do not choose an area where the winch can or will be submerged in water.
- Do not winch at any angle. Winching at any angle can damage the wire cable and winch.

DANGER

Do not use the winch handle to anchor the winch at any time.

Mounting the Winch Permanently

This CPE 2000 lb./5000 lb./6000 lb. utility winch can be securely mounted to a fixed anchor point before operation. Mounting hardware is not included. Mounting hardware must be strong enough to withstand all loads and forces imposed on it and the winch. Anchor point must also be strong enough to withstand all forces imposed on it from the loads and winch.

1. Find a secure and suitable anchor.
2. Using the holes at the bottom of the winch frame, take a marker and mark “spot” holes on the anchor.
3. Measure each hole on the winch frame and choose the correct drill bit for each one.
4. Drill through all “spot” holes in the anchor.
5. Secure winch to anchor through all holes using rated bolts, washers, and nuts able to withstand any loads and forces imposed on them by the loads and winch.
6. Make sure all bolts and nuts are tightened.

CAUTION

Always double check anchor before drilling to ensure there are no hidden compartments or panels that may be damaged or cause structural damage by drilling.

NOTE

If a mounting channel (not included) is used, make sure it is rated to take any load weight or force the winch and loads may impose on it.

NOTE



The length of bolts needed for mounting will vary based on the thickness of the anchor used. Measure anchor accordingly.

ASSEMBLY

Adapter Plate

The adapter plate can be used to temporarily mount the winch to any 2 in. (5,1 cm) ball hitch receiver.

1. Align the keyslot holes on the bottom of the winch over the mounting bolts already on the adapter plate. (A)
2. Place the winch onto the adapter plate, keyslot holes over the bolts and then slide the plate until the winch is secure on the bolts. (B)
3. Place the adapter plate hole over any 2 in. (5.1 cm) ball hitch, making sure it is secure.

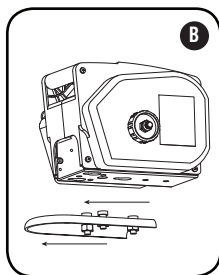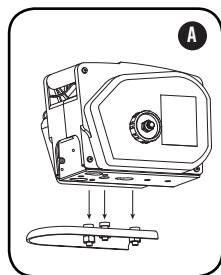

WARNING

Do not use adapter plate and/or winch to tow any vehicle, boat or other object.

WARNING

Before attaching winch to the adapter plate, make sure all bolts and nuts on the plate are tightened and secure.

Battery Connections

Before wiring the winch to any battery powered source, please heed these safety warnings.

DANGER

Never use or connect the battery cables or winch to a damaged battery or one with signs of corrosion.

WARNING

Use only a 12V automotive or equivalent battery to supply power to the winch.

WARNING

When working with batteries always make sure to use eye protection, gloves and safety gear, and never lean directly over the battery.

WARNING

Do not place the battery cables near any moving or rotating parts, heat, or water.

CAUTION

Make sure the battery cables are tied up at all times and are not left to "dangle" or hang.


DANGER

Never use the winch if it does not have a safe and proper ground. Any metal that is coated or painted is not a proper ground.

Temporarily Wiring the Winch

Your utility winch can be temporarily wired to a 12V battery.

1. Find a safe location for the winch so the battery cables will not be pinched, cut or damaged.
2. Remove the protective plastic covering on the winch that covers the socket that houses the male ends.
3. Plug in the female ends of the battery cable into the socket. (A)
4. Route the battery cables from the winch location to the battery location, securing them along an anchor or frame.
5. Use the Red positive (+) battery clamp and attach the clamp to the Red positive (+) terminal of the battery.
6. Use the Black negative (-) battery clamp from the wire and attach the clamp to a bare metal part of the frame of the vehicle or another bare metal part not on the battery or winch, to create a secure and safe electrical ground.

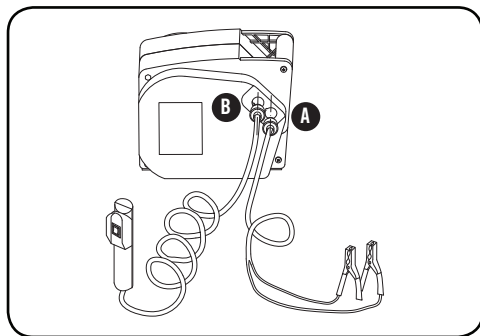

Remote Control

Your utility winch comes with a handheld wired remote control. The remote control is easy to connect. Once the winch has been connected to a battery and properly grounded, remove the plastic protective piece on the winch. Next take the male ends of the remote control cord and plug them into the female end connectors in the winch. (B) Test the remote by using the clutch to draw out some wire cable and then winching the wire cable in about 1 to 2 in. (2.5 to 5.1 cm).

WARNING

Never leave the battery clamps hooked up to a live battery. Always disconnect battery clamps from battery when not in use.

NOTE

The male plug end of the remote cable will only fit into the socket one way. (B)

CAUTION

Battery clamps may become hot during use. Please exercise caution when touching or removing them after they have been hooked up to a battery.

NOTE

The remote will only draw in the wire cable onto the spool. It will not feed out the wire cable.


NOTE

The female plug end of the battery cables will only fit into the socket one way. (A)


OPERATION

Inspection

Before use of the utility winch, always inspect the winch, power connections, wire cable, load connections, and winch area for any possible damage or hazards. Never connect a load to or operate a winch, if it or any of its parts appear to be worn or damaged.

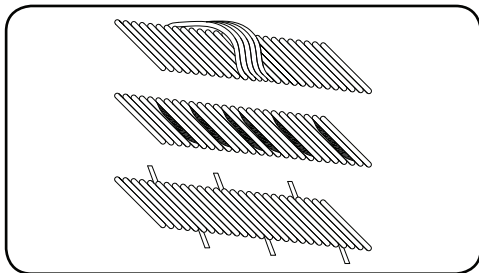

Always check the wire cable for any wear, fraying or damage. Only wire cable in good condition should be used. If the wire cable appears worn, frayed or damaged, DO NOT connect any load to or use, replace immediately.

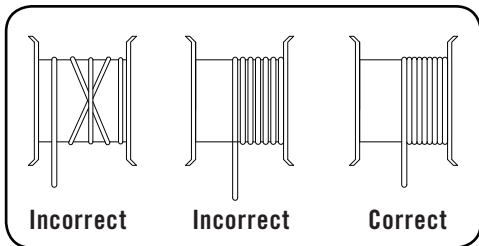

Inspect the wire cable to make sure it is spooled correctly. The wire cable should not be overlapping on itself, have space between the rolls or slack in it. If the wire cable is spooled incorrectly do not connect a load to it or use it until the wire cable has been re-spooled correctly.

NOTE

It is highly recommended that random inspections also be done during operation.

Connecting a Load

During connection of a load and operation of the winch, the user should keep hands and fingers clear of pinch points, moving parts, the wire cable and hook. Loose clothing and jewelry should not be worn, and long hair should be tied back while connecting a load and operation. Gloves and safety goggles should be worn at all times when connecting or winching a load. The cable should never be allowed to slide through the users hands. The user should only grab the hook, using a hook strap (not included) when loading/unloading an item. Never grab the wire cable directly. Attach the load to the hook using only rated equipment, such as slings, chains or winching shackles. Connection to the hook must be completely secure to prevent any accidental disconnection. Make sure the connection device is properly seated in the base of the hook and that the safety clasp closes fully.

CAUTION

If the wire cable becomes kinked or twisted during operation stop use immediately.

Once a load has been properly connected, drape a blanket or jacket over the wire cable approximately 5 to 6 ft. (1.5 to 1.8 m) from the hook. In the event of a broken cable it will dampen the snap back. Make sure and do a test. Winch the load 1 to 2 in. (2.5 to 5.1 cm) and pause a moment to inspect all connections and that the equipment can handle the load.

WARNING

Do not exceed rated load capacity, even while testing a load.

General Tips for Safe Operation

Your 12090 utility winch is rated at a 2000 lb. (907 kg) max standard rated pull, 5000 lb. (2,268 kg) max rated marine pull and 6000 lb. (2,722 kg) max rated rolling pull. Overloads can damage the winch, motor, wire cable, and/or create a possible hazard for property damage, injury or death.

For loads over 1000 lb. (454 kg) standard, 2500 lb. (1,134 kg) marine, 3000 lb. (1,361 kg) rolling, the use of a snatch block/pulley system (not included) to double the wire cable line must be used. This will aid in two ways:

- (a) reduce the number or cable layers on the drum, as well as,
- (b) reduce the load on the wire cable by as much as 50%.

When doubling the line back to the winch, run the wire cable through the snatch block and attach the hook to a suitable anchor. Make sure the safety clasp on the hook closes before operation.

Get to know your winch before you actually need to use it. We recommend that you set up a few test runs to familiarize yourself with rigging techniques, the sounds your winch makes under various loads, the way the cable spools on the drum, etc.



Inspect the wire cable and equipment before each use. A frayed or damaged cable shall be replaced immediately. Use only manufacturer's identical replacement cable with the exact specifications. Inspect the winch installation and bolts to ensure that all bolts are tight before each operation. Store the winch indoors and in a place that it will not be damaged.

Any winch that appears to be damaged in any way, is found to be worn, or operates abnormally **MUST BE REMOVED FROM SERVICE UNTIL REPAIRED**. It is recommended that the necessary repairs be made by a manufacturer's authorized repair facility.

Only attachments and/or adapters supplied by the manufacturer are to be used.

Manual Operation

If the winch is not hooked up to a battery, the wire cable can be drawn in and out by releasing the clutch and using the hand crank. Always keep tension on the wire cable. Rotating the clutch will allow the user to access the winch cable manually. (A) Disengage the clutch by turning it counterclockwise. This will allow the user to draw out the wire cable. Use a hook strap (not included) on the hook when drawing out the cable. Once the hook has been attached to the load, and the safety clasp fully closed, the hand crank can be attached to the winch. Remove the outer nut on the bolt in the center of the clutch. (B) Only remove the outer nut, leave the inner nut on the bolt. Place the hand crank on the bolt, then reinsert and tighten the outer nut onto the bolt. When manual winching is done, engage the clutch by turning it clockwise. Once the clutch has been engaged, remove the hand crank.

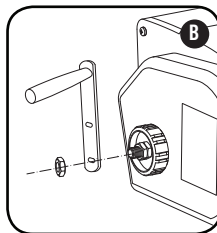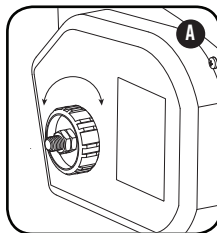

DANGER

Do not install or have hand crank installed if the winch is connected to a power source.

WARNING

Do not use the hand crank to try and assist the winch while it is operating electronically.

CAUTION

If hand crank is installed on the winch, do not pull wire cable out at any time.

OPERATION

Winching Techniques

1. Take time to assess your winch area, and make sure it is free of any debris and other possible hazards and distractions.
2. Take time to assess your situation and plan your winch.
3. Put on safety goggles to protect your eyes, gloves to protect your hands, tie back any long hair and remove jewelry.
4. Inspect winch, power cords and wire cable for excessive wear or damage.
5. Double check your anchors and make sure all connections are secure.
6. Attach the battery cables to a battery and properly ground the connection.
7. Test the winch without a load connected. Make sure the wire cable extends and retracts properly without any problems.
8. Connect desired load using only properly rated winching slings, chains or shackles.
9. Once a load has been properly connected, drape a blanket or jacket over the wire cable approximately 5 to 6 ft. (1.5 to 1.8 m) from the hook. In the event of a broken cable it will dampen the snap back.
10. Make sure hook clasp is closed fully.
11. Clear the area. Make sure all operators and bystanders stand clear and that no one is directly above, underneath, or to the direct side of the load or wire cable.
12. Begin winching. Be sure that the wire cable is winding evenly and tightly around the drum. Avoid shock loads; keep the wire cable under tension.
13. The winch is meant for intermittent use. Winch for a short time and then let the motor rest if needed before restarting.
14. If the winch must be stopped, with a load connected to it, support anchors should be placed until the winch is going again.
15. The winching operation is complete once the load is on stable ground and/or has anchors for support placed under it.

Winching Techniques Cont'd.

16. Disconnect the wire cable from the anchor, but still maintain tension.
17. Rewind the wire cable. Make sure that any wire already on the drum has spooled tightly and neatly. If not, draw out the wire and re-spool from the point where the cable is tight.
18. Keep your hands clear of the winch drum, wire cable, and hook as the cable is being drawn in.
19. Secure the hook and hook strap.
20. Clean and inspect connections and mounting hardware for next winching operation.

DANGER

Users and bystanders must keep a minimum distance of 12 in. (30.5 cm) at all times from the winch and load. If the wire cable breaks serious injury or death could occur if the broken cable "whips" around. More distance is advised as the cable length increases.

WARNING

Support anchors are highly recommended if a load can not be placed on stable ground. Make sure the support anchors can withstand the full weight of the load being anchored.

WARNING

Maintain at least 4 wraps (coils) of cable on the drum during operation. Operating with fewer than 4 wraps of cable on the drum can cause the cable to pull off the drum.

The owner/operator is responsible for all periodic maintenance.

WARNING

Never operate a damaged or defective winch.

WARNING

Improper maintenance will void your warranty.

Complete all scheduled maintenance in a timely manner. Correct any issue before operating the winch.

NOTE

For service or parts assistance, contact our help line at **1-877-338-0999**

Cleaning

Use a damp cloth to clean the exterior surfaces of the winch. Use a soft bristle brush to remove excess dirt and oil. Use an air compressor (25 PSI) to clear dirt and small debris from the wire cable spool and other tight places.

CAUTION

DO NOT spray water directly on the winch or wire cable. DO NOT wipe the wire cable with the damp cloth. Use only compressed air to clean the wire cable.

Lubrication

All moving parts within the Utility winch having been Lubricated using high temperature lithium grease at the factory. No internal lubrication is required. Lubricate cable assembly periodically using a light penetrating oil.

Cable Assembly Replacement

It is recommended that any wire cable or spool modifications be performed by a manufacturer's authorized repair facility, and that only manufacturer-supplied parts be used.

Storage

It is recommended the utility winch is stored indoors, in a clean dry place, free from sunlight and moisture.

1. Make sure the winch is properly cleaned before storage.
2. Make sure the wire rope is drawn onto the spool as much as it can be without damage.
3. Make sure to tie up all cords.
4. Store in a place that moisture can not damage the winch.
5. Store in place that excess dust or debris can not damage the winch.

TROUBLESHOOTING

| Problem | Cause | Solution |
|---|---------------------------------|--|
| Motor does not turn | No electrical power | Make sure battery cables are connected to a live 12V automotive battery or equivalent and to the winch |
| | Pinched battery cable | Check all battery cable connections and make sure nothing is resting on top of, or pinching the battery cables |
| | Defective remote control | Replace remote control |
| Motor runs slowly or without normal power | Insufficient current or voltage | The voltage supply is weak. Check to make sure voltage supply is 12V |
| Motor overheating | Winch running time is too long | Allow winch to cool down |

For further technical support:

Technical Service

Mon – Fri 8:30 AM – 5:00 PM (PST/PDT)

Toll Free: 1-877-338-0999

tech@championpowerequipment.com

Performance Specifications

| | |
|-------------------------------------|--|
| – Max Rated Standard Pull | 2000 lb. (907 kg) |
| – Max Rated Marine Pull | 5000 lb. (2268 kg) |
| – Max Rated Rolling Pull | 6000 lb. (2722 kg) |
| – Max Boat Size | 18 ft. (5.5 m) |
| – Motor | 0.3 Hp/ 0.2 Kw, 12V DC |
| – Cable | 1/5 in. (D) x 30 ft. (L) [5.1 mm (D) x 9.1 m (L)] |
| – Battery Cable | 20 ft./6 m (L) Positive Lead, 20 ft./6 m (L) Negative Lead |
| – Gross Weight | 25 lb. (11.3 kg) |
| – Net Weight | 22 lb. (10 kg) |
| – Height | 7.5 in. (19.1 cm) |
| – Width | 10 in. (25.4 cm) |
| – Length | 9.5 in. (24.1 cm) |

| Line Speed and Motor Current (First Layer) | | | | | | |
|--|---------|-----|-----|------|------|------|
| Line pull Max | lb. | 0 | 500 | 1000 | 1500 | 2000 |
| | kg | 0 | 227 | 454 | 680 | 907 |
| Line speed (DC12V) | FPM | 4.5 | 3.6 | 2.9 | 2.3 | 1.7 |
| | MPM | 1.4 | 1.1 | 0.9 | 0.7 | 0.5 |
| Max current | A | 3 | 6 | 11 | 17 | 21 |
| Running Time* | minutes | 1 | 1 | 1 | 1 | 1 |
| Cooling Time** | minutes | 5 | 5 | 5 | 5 | 5 |


*If the motor becomes uncomfortably hot to the touch, stop winching immediately and let it cool down for 5 minutes. Do not pull for more than one minute at or near the rated load.

**Electric winches are designed and made for intermittent use and should not be used in constant duty applications.

| Line Pull and Cable Capacity Per Layer | | | | | | |
|--|-----|------|------|------|------|-----|
| Line of Cable | | 1 | 2 | 3 | 4 | 5 |
| Max pulling capacity per layer | lb. | 2000 | 1520 | 1226 | 1027 | 884 |
| | kg | 907 | 689 | 556 | 466 | 401 |
| Cable capacity per layer | ft. | 4.7 | 10.8 | 18.4 | 27.5 | 30 |
| | m | 1.4 | 3.3 | 5.6 | 8.4 | 9.1 |

SPECIFICATIONS

Parts Diagram

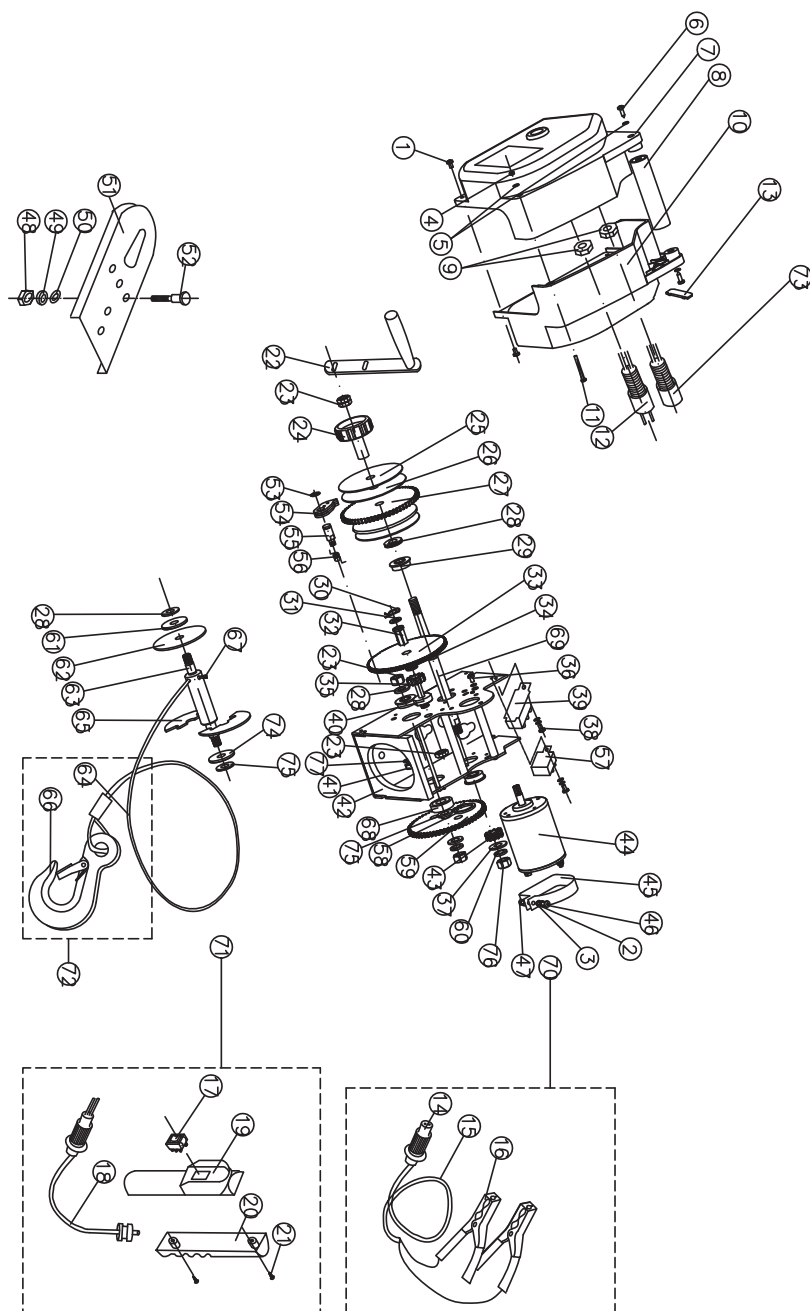

| # | Part Number | Description | Qty |
|----|-------------|-------------------------------|-----|
| 1 | 12090-001 | Screw (M5 x 8) | 4 |
| 2 | 12090-002 | Lock Washer (ø5) | 6 |
| 3 | 12090-003 | Washer (ø5) | 6 |
| 4 | 12090-004 | Nut (M4) | 1 |
| 5 | 12090-005 | Washer (ø4) | 3 |
| 6 | 12090-006 | Screw (ST3.9 x 15) | 2 |
| 7 | 12090-007 | Right Shell | 1 |
| 8 | 12090-008 | Handle | 1 |
| 9 | 12090-009 | Nut (M16), PVC | 2 |
| 10 | 12090-010 | Left Shell | 1 |
| 11 | 12090-011 | Screw (M4 x 80) | 1 |
| 12 | 12090-012 | Battery Cable Socket | 1 |
| 13 | 12090-013 | Socket Cover | 1 |
| 14 | 12090-014 | Battery Cable Plug | 1 |
| 15 | 12090-015 | Battery Cable | 1 |
| 16 | 12090-016 | Battery Clamp | 2 |
| 17 | 12090-017 | Button Switch | 1 |
| 18 | 12090-018 | Remote Control Cable Assembly | 1 |
| 19 | 12090-019 | Front Remote Control Housing | 1 |
| 20 | 12090-020 | Rear Remote Control Housing | 1 |
| 21 | 12090-021 | Screw (ST3.9 x 13) | 2 |
| 22 | 12090-022 | Hand Crank | 1 |
| 23 | 12090-023 | Thin Nut (M12) | 4 |
| 24 | 12090-024 | Clutch Knob | 1 |
| 25 | 12090-025 | Friction plate cover | 2 |
| 26 | 12090-026 | Friction plate | 2 |
| 27 | 12090-027 | Large Gear Assembly II | 2 |
| 28 | 12090-028 | Washer (ø13 x 23 x 1.5) | 3 |
| 29 | 12090-029 | Bearing | 3 |
| 30 | 12090-030 | Pin | 1 |
| 31 | 12090-031 | Washer (ø9) | 1 |
| 32 | 12090-032 | Shaft Assembly | 1 |
| 33 | 12090-033 | Large Gear Assembly I | 1 |
| 34 | 12090-034 | Washer | 4 |
| 35 | 12090-035 | Small Gear Assembly II | 3 |
| 36 | 12090-036 | Screw (M5 x 16) | 3 |
| 37 | 12090-037 | Washer (ø13 x 23 x 2) | 3 |
| 38 | 12090-038 | Screw (M5 x 10) | 2 |
| 39 | 12090-039 | Circuit Breaker 25A | 1 |

| # | Part Number | Description | Qty |
|----|-------------|-----------------------------|-----|
| 40 | 12090-040 | Shaft | 1 |
| 41 | 12090-041 | Nut (M8) | 1 |
| 42 | 12090-042 | Frame Assembly | 1 |
| 43 | 12090-043 | Small Gear Assembly III | 3 |
| 44 | 12090-044 | Motor | 1 |
| 45 | 12090-045 | Motor Clamp | 1 |
| 46 | 12090-046 | Screw (M5 x 25) | 1 |
| 47 | 12090-047 | Nut (M5) | 3 |
| 48 | 12090-048 | Nut (M10) | 3 |
| 49 | 12090-049 | Lock Washer (ø10) | 3 |
| 50 | 12090-050 | Washer (ø10) | 3 |
| 51 | 12090-051 | Adapter Plate | 1 |
| 52 | 12090-052 | Plate Stud Bolt | 3 |
| 53 | 12090-053 | Circirip(ø12) | 1 |
| 54 | 12090-054 | Claw Lock | 1 |
| 55 | 12090-055 | Shaft Lock | 1 |
| 56 | 12090-056 | Spring | 1 |
| 57 | 12090-057 | Relay | 1 |
| 58 | 12090-058 | Circirip(ø35) | 1 |
| 59 | 12090-059 | Large Gear Assembly III | 1 |
| 60 | 12090-060 | Lock Washer (ø12) | 2 |
| 61 | 12090-061 | Washer (ø13 x 28 x 2) | 1 |
| 62 | 12090-062 | Left Plate | 1 |
| 63 | 12090-063 | Drum Shaft | 1 |
| 64 | 12090-064 | Wire Rope | 1 |
| 65 | 12090-065 | Right Plate | 2 |
| 66 | 12090-066 | Hook | 1 |
| 67 | 12090-067 | Screw (M5 x 10) | 1 |
| 68 | 12090-068 | Bearing (6202-ZN) | 1 |
| 69 | 12090-069 | Shaft | 1 |
| 70 | 12090-100 | Battery Cable Assembly | 1 |
| 71 | 12090-200 | Hand Remote Assembly | 1 |
| 72 | 12090-300 | Wire Rope Assembly | 1 |
| 73 | 12090-070 | Remote Control Cable Socket | 1 |
| 74 | 12090-071 | Washer (ø15 x 28 x 2) | 1 |
| 75 | 12090-072 | Washer (ø15 x 23 x 1.5) | 2 |
| 76 | 12090-073 | Thick Nut (M12) | 2 |
| 77 | 12090-074 | Lock washer (ø8) | 1 |

WARRANTY

WARRANTY

CHAMPION POWER EQUIPMENT
2 YEAR LIMITED WARRANTY

Warranty Qualifications

Champion Power Equipment (CPE) will register this warranty upon receipt of your Warranty Registration Card and a copy of your sales receipt from one of CPE's retail locations as proof of purchase.

Please submit your warranty registration and your proof of purchase within ten (10) days of the date of purchase.

Repair/Replacement Warranty

CPE warrants to the original purchaser that the mechanical and electrical components will be free of defects in material and workmanship for a period of two years (parts and labor) from the original date of purchase and 180 days (parts and labor) for commercial and industrial use. Transportation charges on product submitted for repair or replacement under this warranty are the sole responsibility of the purchaser. This warranty only applies to the original purchaser and is not transferable.

Do Not Return The Unit To The Place Of Purchase

Contact CPE's Technical Service and CPE will troubleshoot any issue via phone or e-mail. If the problem is not corrected by this method, CPE will, at its option, authorize evaluation, repair or replacement of the defective part or component at a CPE Service Center. CPE will provide you with a case number for warranty service. Please keep it for future reference. Repairs or replacements without prior authorization, or at an unauthorized repair facility, will not be covered by this warranty.

Warranty Exclusions

This warranty does not cover the following repairs and equipment:

Normal Wear

Products with mechanical and electrical components need periodic parts and service to perform well. This warranty does not cover repair when normal use has exhausted the life of a part or the equipment as a whole.

Installation, Use and Maintenance

This warranty will not apply to parts and/or labor if the product is deemed to have been misused, neglected, involved in an accident, abused, loaded beyond the product's limits, modified, installed improperly or connected incorrectly to any electrical component. Normal maintenance is not covered by this warranty and is not required to be performed at a facility or by a person authorized by CPE.

Other Exclusions

This warranty excludes:

- Cosmetic defects such as paint, decals, etc.
- Wear items such as filter elements, o-rings, etc.
- Accessory parts such as starting batteries, and storage covers.
- Failures due to acts of God and other force majeure events beyond the manufacturer's control.
- Problems caused by parts that are not original Champion Power Equipment parts.

Limits of Implied Warranty and Consequential Damage

Champion Power Equipment disclaims any obligation to cover any loss of time, use of this product, freight, or any incidental or consequential claim by anyone from using this product. THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

A unit provided as an exchange will be subject to the warranty of the original unit. The length of the warranty governing the exchanged unit will remain calculated by reference to the purchase date of the original unit. This warranty gives you certain legal rights which may change from state to state or province to province. Your state or province may also have other rights you may be entitled to that are not listed within this warranty.

Contact Information

Address

Champion Power Equipment, Inc.
Customer Service
12039 Smith Ave.
Santa Fe Springs, CA 90670 USA
www.championpowerequipment.com

Customer Service

Mon – Fri 8:30 AM – 5:00 PM (PST/PDT)
Toll Free: 1-877-338-0999
info@championpowerequipment.com
Fax no.: 1-562-236-9429

Technical Service

Mon – Fri 8:30 AM – 5:00 PM (PST/PDT)
Toll Free: 1-877-338-0999
tech@championpowerequipment.com
24/7 Tech Support: 1-562-204-1188