



THIS  
END  
DOWN

# QUICK-SET™

BY **CLAM™**

**CONGRATULATIONS ON  
YOUR NEW QUICK-SET!**



**BEFORE YOU GET STARTED, PLEASE READ CAREFULLY.**

When you first open the bag on your new Quick-Set shelter, it may appear inside out. It is not inside out, but is designed to fold into a compact bag.



**Step 1.** Remove the loose fabric wrapped around each of the hubs.

**Step 2.**



Stand shelter up on the center hub.

**Step 3.**



Open with roof facing up with Poles on the inside.

**Step 4.**



With poles on the inside, reach handle at panel center and pull while holding roof line with opposite hand.

**Step 5.**



Continue around shelter repeating the previous step until all panels are erect.

**Step 6.**



Enter through door and push roof center hub up until erect.

Now you are ready to enjoy a bug free, shade filled Summer!

**TO WATCH A VIDEO OF HOW  
TO SET UP YOUR QUICK-SET.  
GO TO:  
<http://bit.ly/2rMygm2>**



Part #: 109870, 109881

**Center Height:** 82 inches

**Foot Print:** 36 total square feet

**Hub-to-Hub:** 72 x 72 inches

**Weight:** 20 lbs.



Instruction #: 104666

Model #: 9870, 9881

## WARRANTY INFORMATION



Please contact customer service directly at the E-mail or phone number listed below for any quality issues. **ONCE USED THIS PRODUCT CANNOT BE RETURNED TO STORE.**

**\*\* Warranty cannot be honored without an original, dated receipt. \*\***

**Customer Service Hours:** Monday – Friday 9am – 4pm Central Standard Time

**Phone:** 763-231-4120

**Email:** [CustomerService@ClamCorp.com](mailto:CustomerService@ClamCorp.com)

**IMPORTANT! Please read:** This product is warranted to the original retail purchaser (not transferable) to be free from manufacturer's defects for one (1) year from the date of the original purchase. Warranty does not cover screen tears, tent tears, or broken or bent poles due to high wind, weather conditions or unattended use. The part will be replaced or repaired (manufacturer's option) if found defective within the one (1) year time frame. Warranty will be void if product has been subject to neglect, misuse, improper installation, misapplication, alteration, or accident including, but not limited to, improper maintenance or use of unauthorized parts or attachments. Please read this entire owner's manual to ensure proper installation, use, storage and care for your Clam shelter.

**To submit a warranty request,** please use one of the following methods:

- **Preferred Method** - Visit [www.QuickSetShelters.com](http://www.QuickSetShelters.com) under the "Customer Support" tab fill out the warranty form.
- Email: [CustomerService@ClamCorp.com](mailto:CustomerService@ClamCorp.com)
- Write: Clam Outdoors - Warranty Department  
12135 Brockton Lane N.  
Rogers, MN 55369

**Information needed to submit a warranty claim:** Please include your full name, address, phone number, a copy of your receipt, a brief description of the problem, and pictures to clearly show the area(s) of concern. Clam's warranty department will review your request and a Clam representative will contact you regarding your claim status. If instructed by the warranty department, all returns must be returned with postage prepaid.

## LIMITATION OF LIABILITY

It is expressly understood that Clam Corporation's liability for its products, whether due to breach of warranty, negligence, strict liability, or otherwise, is limited to the repair of the product as stated above. Clam Corporation is not liable for any injury, loss, damage, or expense, whether direct or consequential, including but not limited to loss of use, income, profit, or damage to material arising in connection with the sale, installation, use of, inability to use, or the repair or replacement of Clam Corporation products. Clam Corporation reserves the right to make alterations or modifications in its products at any time, which in its opinion, may improve the performance and efficiency of the product. Clam shall not be obligated to make such alterations or modifications to products already in service.

# SAFETY INSTRUCTIONS

Please fully understand and follow all safety instructions outlined in this booklet. Failure to do so could result in severe injury.

- Do not use open flame heaters in your screen tent.
- Tent fabric will melt when contact is made with hot surfaces (i.e., heaters).
- Use external tie-downs and stakes during excessive wind conditions(15+mph)

## WARNING

Injury or death may result from fire if tent fabric is exposed to open flame.

Tent fabric is not fireproof. Fabric will burn with extended exposure to open flame. Do not use open flame products inside tent. Tent fabric is treated with fire retardant. Application of any foreign substance may render the flame retardant properties ineffective.

This tent is made with flame resistant fabric which meets CPAI-84 specifications.

# PARTS LIST

Item #	Qty.	Part #	Description
1	3	109077	Hub & Pole Kit Walls (4 Poles & 1 Hub)
2	1	109077	Hub & Pole Kit Roof (4 Poles & 1 Hub)
3	2	104104	Door Support Pole
4	1	103801	Carry Bag
5	5	104173	Stake, Screen Hub
6	4	102458	Tie Down Rope
7	1	104666	Instructions/Owner's Manual

### BEFORE ATTEMPTING TO USE THIS

**PRODUCT:** Go to

[www.QuickSetShelters.com](http://www.QuickSetShelters.com), click on your shelter model and watch the set up video provided. Then practice setting up and taking down at home. Repeat several times until comfortable.

Replacement parts can be ordered on-line at [www.QuickSetShelters.com](http://www.QuickSetShelters.com).

# SET UP INSTRUCTIONS

**IMPORTANT:** When you first open your shelter, you will see the poles on the OUTSIDE of the shelter. Once set up, the poles should be on the INSIDE of the tent. Your screen tent is folded in half for storage. Only pull outward on the hub pull (loops) on the exterior of the tent.



Please follow the directions carefully for proper set up and take down.

## SET UP INSTRUCTIONS CONTINUED

**Step 1:** Unzip the storage bag completely and remove the shelter. Use care not to misplace the instructions and the stake and rope pouch. It is advised to store your stakes, ropes and pouch in the carry bag until they're needed.

**Step 2:** Pick the tent up directly from the carry bag and stand it on the center metal hub. (Photo 2)

**Step 3:** With the screen tent standing up on the black center hub hold one corner of the material and let the screen fall open until you see the roof lying flat with the Clam logo facing up. If it does not fall open naturally, unfold the tent until you can see the roof panel lying flat. At this point the poles should be on the inside of the tent with the roof facing up. (Photo 3)

**Step 4:** With the poles on the inside, reach for the handle at the center of one wall and pull until the section pops out. Hold the roof line with the opposite hand. (Photo 4)

**Step 5:** Continue around the shelter repeating the previous step until all wall panels are erect.

**Step 6:** Enter through the door and push up on the center ceiling hub until the ceiling pops up. (Photo 5)



Photo 4



Photo 3



Photo 2



Photo 1

## SET UP INSTRUCTIONS CONTINUED

**Step 7 (optional):** Insert the vertical rods on either side of the screen tent's door. Remove the Velcro retaining loop securing the pole to the adjacent wall. Once freed, install one end of the rod into the other's end to make it one long rod. Place the bottom of the rod in the pocket located at the bottom of the panel directly below where the rods are mounted. Secure the rod with the Velcro loop. Repeat on the other side. It is recommended to use these if any wind is present. (Photos 6 & 7)



Photo 6

**Step 8:** Install securing stakes on the tent. The stakes are designed to be used on the inside grommets or the outside tie downs. If there is little to no wind, stakes may be used in the eyelet in each corner of the screen tent. Place the tip of the stake on the inside of the eyelet and drive it into the ground so the hook catches the eyelet and holds the tent in place.



Photo 5

If wind is present you **must** use the outside tie downs. Secure the tent by tying one end of the provided strings on each metal loop on the outside of the hub and staking the other end. (Photo 8)



Photo 8

# TAKE DOWN INSTRUCTIONS

**Step 1:** Remove all the stakes from the interior and exterior of the tent.

**Step 2:** If used, remove the vertical door support rods from pockets at the bottom of the panel, pull apart, and refasten them with the Velcro straps located diagonally on the panels next to each side of the door.

**Step 3:** Push in on the walls in from the outside of the tent to collapse the wall panels. Do this to all wall panels until the tent is collapsed.

**Step 4:** Push down on one of the roof poles until the roof is collapsed.

**Step 5:** Once the shelter is completely collapsed grab one corner of the tent and fold it in half on itself. Once in half, you can now condense the shelter to fit into the carry bag.

**Step 6:** Carefully lift and insert into the carry bag. Pay close attention not to twist or distort the hubs or fabric while inserting into bag. Place stakes and tie down ropes into their bag and place the stake bag into the carry bag.



Photo 1



Photo 2



Photo 3



Photo 4

# SAFETY INFORMATION

Please fully understand and follow all safety instructions as outlined. Failure to do so could result in severe injury or death.

**Do NOT use open flame heaters in your screen tent. Injury or death may result from fire if tent fabric is exposed to open flame. The tent is not fireproof, but the fabric is treated with a fire retardant that meets CPAI-84 specifications. Application of any foreign substance may render the flame retardant properties ineffective. Fabric will melt when contact is made with hot surfaces (i.e., heaters, propane stoves, etc.)**

## WARNING

Injury or death may result from fire if tent fabric is exposed to open flame.

Tent fabric is not fireproof. Fabric will burn with extended exposure to open flame. Do not use open flame products inside tent. Tent fabric is treated with fire retardant. Application of any foreign substance may render the flame retardant properties ineffective.

Night time: exterior reflectors must be visible to reduce risk of collisions.

This tent is made with flame resistant fabric which meets CPAI-84 specifications.

*\*For replacement parts, frequently asked questions, shelter information, videos, and all of your ice fishing or screen tent needs visit our web site at [www.QuickSetShelters.com](http://www.QuickSetShelters.com).*

# FREQUENTLY ASKED QUESTIONS

**Q: How do I set up my screen tent?**

A: Please review the set up and take down instructions in your owner's manual or go to [www.QuickSetShelters.com](http://www.QuickSetShelters.com) to watch an instructional video on the proper and simplest way to set up and take down a screen tent. Videos can be found under your shelter's model on our website.

**Q: Do you offer any accessories for Quick-Set Screen Tents?**

A: Yes! We offer wind panel accessories that are designed to keep the wind and sun away. We also carry other items that are great additions to your screen tent. Some of what we offer includes fan/light combos, quick pack tables, LED hub lights and more! Check these accessories out at [www.QuickSetShelters.com](http://www.QuickSetShelters.com).

**Q: Is there anything that can be put on the outside of the tent to increase the water resistance?**

A: Our screen tents are water resistant, not waterproof. You can use any waterproofing product you would traditionally use on a tent to add an extra layer of protection. An example of this is "Camp Dry" which is sold in most sporting goods stores. The seams have been stitched with waterproof taping but you may apply "Seam Grip" to the seams of the shelter if you wish to add additional protection. Please be advised that applying additional products to the shelter may alter the fire retardant properties.

**Q: Can I use anything to increase the UV protection?**

A: Our screen tents are treated with a UV protectant coating when they are manufactured. If you wish to add additional protection you may use any product intended for use on a traditional tent. Please keep in mind these screen tents are not intended to be permanent structures and it's best to take them down when not in use. Please be advised that applying additional products to the shelter may alter the fire retardant properties.

**Q: Would it be best to completely dry my screen tent before storing if it gets wet?**

A: It is recommended to dry your tent completely before storing. If not dried completely, moisture may cause damage to the tent.

**Q: How do I wash my screen tent?**

A: We recommend using a gentle laundry soap that has been diluted with warm water and use a wash cloth to spot clean any spots that need it. If needed, you can use a bleach and water solution (10 parts water to 1 part bleach) to get rid of any mildew smell.

**Q: Can I order replacement parts and accessories from your website?**

A: Yes! If you would like to order replacement parts visit our website, [www.QuickSetShelters.com](http://www.QuickSetShelters.com).

**For additional questions, comments or concerns please contact Clam Customer service at 763-231-4120 or email [CustomerService@ClamCorp.com](mailto:CustomerService@ClamCorp.com).**

**Due to Clam's continued product development, Clam reserves the right to change specifications without notice. For complete details, see the assembly and/or operating instructions that are provided and packaged with the purchased product.**