



HOW TO USE

1. Push the button to turn on your gauge. When the screen reads 0.0, it is ready to measure pressure in psi units. Continue pushing the button to measure pressure in BAR or kPa.
2. Press the tire gauge head firmly onto the tire valve stem until the reading appears on your display.

NOTE: You may continue to use the gauge even though the previous reading is still displayed by following the instructions above. The tire gauge will automatically turn off within two minutes if not in use. The electronic module and power cell are factory sealed in the unit. There are no user serviceable parts. For the most accurate reading, check your air pressure when tires are cold.