

# ***TIRE VALVES***

## **HOW TO USE**

1. Deflate tire and remove from rim.
2. Remove old valve stem.
3. Insert new stem from inside rim until it snaps into place.
4. Reinstall tire and inflate to recommended PSI.