



HOW TO USE

1. Firmly press the tire gauge head onto the tire valve stem.
2. Read tire pressure off the measurement stick when it pops out.

NOTE: The bleeder pin on the back of the tire gauge head can be used to let air out of your tire if you overinflate. For the most accurate reading, check your air pressure when tires are cold. For accuracy ≤ 10 PSI, pull tongue of gauge out and push back completely before use.