



HOW TO USE

1. Depending on your angle with the dual head, firmly press or pull the tire gauge head onto the tire valve stem and read your pressure.
2. Reset the gauge dial to zero by depressing the reset button on the side of the gauge stem.

NOTE: The reset button also functions as a bleeder valve to let air out of your tire if you overinflate. For the most accurate reading, check your air pressure when tires are cold.