



Mon - Thurs 7:30am - 5:00pm | Friday 7:30am - 4:00pm CST

**1-800-779-2102**

**WWW.DEEZEE.COM**

**PLEASE INSPECT YOUR PRODUCT FOR DAMAGE  
BEFORE PROCEEDING TO INSTALLATION.**

**INSTRUCTIONS FOR RETURNS:**

ALL PRODUCTS NEED RETURNED TO POINT OF PURCHASE  
FOR WARRANTY DEFECTS, DAMAGES, OR RETURNS.

FOR MISSING PARTS PLEASE CONTACT DEE ZEE INC.  
1-800-779-2102

REGISTER YOUR PRODUCT ONLINE: **[www.deezee.com/registration](http://www.deezee.com/registration)**

VIEW INSTRUCTIONS ONLINE: **[www.deezee.com/instructions](http://www.deezee.com/instructions)**



Thank you for choosing Dee Zee to add function and accessorize your vehicle. Dee Zee has been a staple brand in the truck accessory market since 1977 and we hold a reputation of quality manufacturing based in America's Heartland. Our products are born through careful engineering and backed by industry leading warranty programs. We appreciate the opportunity to serve you and your vehicle!

**Review the instruction pages in their entirety to prepare the required tools**

**Warning:** The included J-Bolts must be used during installation to secure the crossover tool box to the truck bed. Do NOT use self-tapping screws on crossover tool boxes. Self-tapping screws can be used only on chest style tool boxes being installed to the truck bed. Premium J-Bolts for crossover tool boxes are available online at [www.deezee.com](http://www.deezee.com) that have more surface area and molded to your truck bed rails. Tie downs designed specifically for Ford aluminum body trucks also are available.

The tool box warranty is void if one of these securing methods is not used.

**Note:** Dee Zee tool boxes are NOT air tight. An air-tight seal allows condensation to form inside of the box, causing the contents to be susceptible to mold or rust. Dee Zee boxes feature various bulb seals and foam gaskets on the lid to help resist weather elements. Should the weather stripping become damaged, please contact our customer service for replacement options at: **1-800-779-2102**

Tool box locks are provided as a theft deterrent and they should always be engaged to prevent easy access to the contents of your tool box when not in use. Contents stored in the tool box are the responsibility of the user and Dee Zee disclaims responsibility of theft. Dee Zee does not insure any loss of contents.

**Cleaning:** To be entitled to all warranty rights offered with the product, Dee Zee tool boxes need to be cleaned regularly with a mild detergent. Do NOT use abrasive cleaners. For stainless steel products, the application of a high grade automotive wax is recommended.



Dee Zee Cares - Please Recycle

For an electronic version of these instructions visit: [www.deezee.com/instructions](http://www.deezee.com/instructions)

Register your product online: [www.deezee.com/registration](http://www.deezee.com/registration)

# AUXILIARY TANK

This tank meets the requirements for UN31B metal intermediate bulk containers as specified in Title 49 of the Federal Code of Regulations and the National Standard of Canada CAN/CGSB-43.146-200.

This tank is designed for use with diesel and other Packing Group III fuels.

**NOTE: Due to the fact aluminum is softer than steel, make sure the threads on the steel pump are clean and not damaged. The pump will strip the threads in the tank if not installing the pump carefully.** The liquid transfer tank must be vented at all times for expansion and to prevent vacuum formation during liquid removal.

## INSTRUCTION

Before using the liquid transfer tank, visually inspect the entire tank for any damage to tank. If damage has occurred, do not use the tank unless it is tested with a harmless fluid such as water.

Before installing prevent fill cap assembly, coat the threads with an acceptable thread sealing compound such as **LA-CO, Slic-tite Paste with "Teflon"**. Screw threaded portion of prevent fill cap assembly into desired flange. Install the prevent cap on threaded casting, press down and turn clockwise past the intermediate stop to the last stop. To remove the cap, turn it slowly counter-clockwise to the intermediate stop. After all pressure is relieved, push down and turn counterclockwise and lift to remove.

---

If you should incur any problems with the installation of this product, please feel free to call us at 1-800-779-8222.

So that we may better serve you, please have the PART #, MO#, and SERIAL # from the label on the tank.

PS TBLIQUIDX

4/4/13

# AUXILIARY TANK

This tank meets the requirements for UN31B metal intermediate bulk containers as specified in Title 49 of the Federal Code of Regulations and the National Standard of Canada CAN/CGSB-43.146-200.

This tank is designed for use with diesel and other Packing Group III fuels.

**NOTE: Due to the fact aluminum is softer than steel, make sure the threads on the steel pump are clean and not damaged. The pump will strip the threads in the tank if not installing the pump carefully.** The liquid transfer tank must be vented at all times for expansion and to prevent vacuum formation during liquid removal.

## INSTRUCTION

Before using the liquid transfer tank, visually inspect the entire tank for any damage to tank. If damage has occurred, do not use the tank unless it is tested with a harmless fluid such as water.

Before installing prevent fill cap assembly, coat the threads with an acceptable thread sealing compound such as **LA-CO, Slic-tite Paste with "Teflon"**. Screw threaded portion of prevent fill cap assembly into desired flange. Install the prevent cap on threaded casting, press down and turn clockwise past the intermediate stop to the last stop. To remove the cap, turn it slowly counter-clockwise to the intermediate stop. After all pressure is relieved, push down and turn counterclockwise and lift to remove.

---

If you should incur any problems with the installation of this product, please feel free to call us at 1-800-779-8222.

So that we may better serve you, please have the PART #, MO#, and SERIAL # from the label on the tank.

PS TBLIQUIDX

4/4/13