



Universal Walk-In Pen Assembly Instructions




Important Notes:

Lay out all components prior to start of assembly. A flat, level surface is recommended for assembly.

If any components are missing or damaged, do not return to retailer. Please call Rugged Ranch Products at: 760-734-3748

Visit our website to see our complete line of products.

www.ruggedranch.net

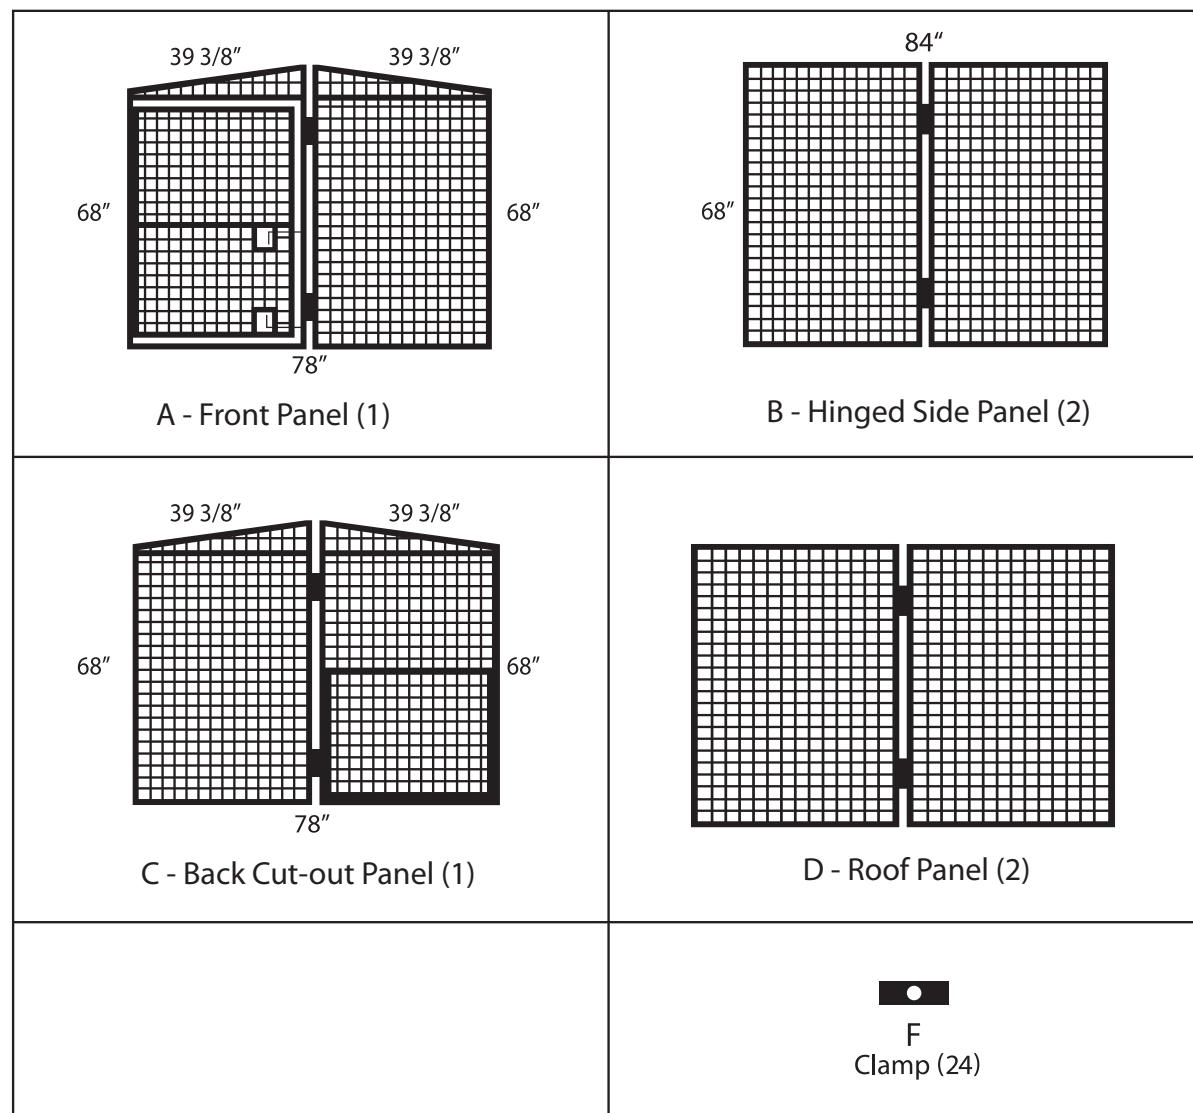

Don't forget to complete your Universal Walk-In Pen by adding the optional Wooden Chicken Hutch or Dog House. Both accessories attach outside the pen via knock-out, back panel to save room inside the pen.

