

Selecting a size

- Measure your dog's girth—the widest area behind his front legs.
- Make sure your dog is standing to get the best measurement.


Petite – Girth adjusts from 12"- 16" Chihuahua, Min Pins

X-Small – Girth adjusts from 15"-21" Jack Russells, Shelties

Small - Girth adjusts from 18"-22" Corgis, Terriers

Medium – Girth adjusts from 22"- 30" Border Collies, Spaniels

Large – Girth adjusts from 28"- 42" Labs, Goldens, Rotties Sure-Fit Harness®

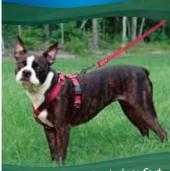

Walk your dog in customized comfort



Key Features:

- · Five-way adjustability for the ultimate fit.
- Two quick-snap buckles for easy on, easy off.
- · Top quality nylon construction.
- · Reinforced steel O-ring.

The Sure-Fit Harness® is a fantastic all-purpose harness, designed for maximum comfort and adjustability.

Unlike other harnesses, pressure is placed on the breastbone, not the bottom of the neck, so it will never cause coughing or gagging.

Plus, two quick-snap buckles means no awkward pulling your dog's legs through a loop while trying to put his



Fitting Instructions

- Open both girth snaps. Place the neck loop over dog's head, with the D-ring on his back pointing toward his tail.
- 2. Bring the center . D-rina strap between leas and snap together with the buckle ends on the straps girth sections. Be sure to - neck loon avoid twisting - the straps should lav center strap flat against the dog's skin. Adjust accordingly so that the
- Press your fingers on the lower front on the dog's chest to locate the breast bone. Adjust the shoulder straps and the center strap so that the front O-ring is on or below the breast bone. (You may need to unsnap the girth straps to complete the adjustments).

girth is comfortably snug.

A harness is not a substitute for good training. If your dog pulls excessively we recommend reward based training, and that you consider a Gentle Leader® Headcollar or Easy Walk® Harness.