


PIRATE BRAND®

C-SERIES

O.5 / 1.0 CU FT - ABRASIVE BLASTERS

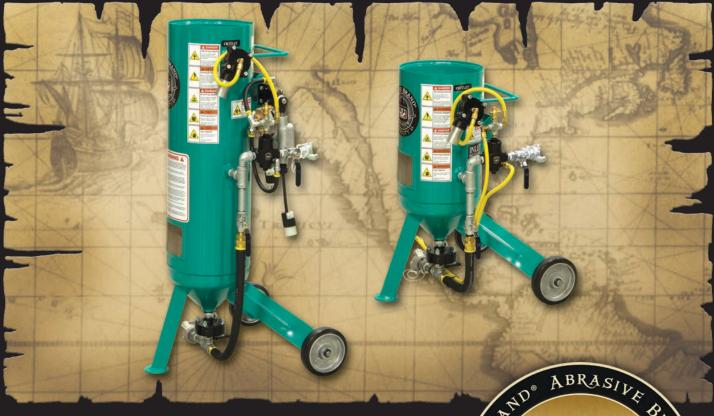

Proudly Distributed By:



PRODUCT LINE BROCHURE

FEATURES & BENEFITS

PROFESSIONAL GRADE COMPONENTS PAIRED WITH SMALL CAPACITY BLASTERS

PNEUMATIC OR ELECTRIC

Choose between pneumatic or 12VDC electric controls. Electric controls are recommended for blast hose lengths longer than 100', feature faster starts/stops, and are less prone to freezing in cold climates.



ISO PSI VESSEL

It's simple, more psi = more productivity. To give you the best possible productivity, CPR pressure vessels are ASME certified and Canadian Registered for all provinces for everyday use at 150 PSI (10.3 BAR)

2 CAPACITIES

In addition to their larger 3.0 & 6.0 cousins, these smaller CPR blasters are available in 0.5 & 1.0 cu ft abrasive capacities.



0.5 Cu Ft - Pneumatic Controls

AMY JR.

1.0 Cu Ft - 12VDC

Electric Controls

Abrasive Metering Valve Jr. standard on all models for precise abrasive adjustments.

HOW CPR SYSTEMS WORK

(PRESSURE RELEASE)

ADDING ABRASIVE


Abrasive is added through the hole in the top of the Abrasive Blaster where the Pop-up and its seat are located. When abrasive is added, it flows down through the hole, around the Pop-up, and down to the bottom of the pressure vessel where it will exit through the Metering Valve when blasting is started.

PRESSURIZATION

When a compressed air source (such as an air-compressor) is connected to the inlet of the Abrasive Blaster and the Inlet Shut-Off Valve is opened, compressed air flows to the Inlet Valve where it is stopped. When the control handle is activated, the Inlet Valve opens and air flows into the Pressure Vessel causing the Popup (located internally) to seal against its seat. Simultaneously, the Diaphragm Valve closes sealing the Pressure Vessel allowing it to hold pressure. Air will also continue past the Choke Valve, through the Pusher Line, and finally to the "tee" under the Metering Valve where it is mixed with abrasive. The mixture of compressed air and abrasive will now exit the Abrasive Blaster through a blast hose and nozzle connected to the coupling under the Metering Valve and blasting begins. It is important to note that, some abrasive will collect at the base of the Metering Valve causing the blast hose to pulsate and spray abrasive erratically for a short time while pressure builds up in the pressure vessel. This is normal and will not damage the Abrasive Blaster.

DEPRESSURIZATION (BLOW-DOWN)

When the control handle is released in a pressure release (CPR) system, the Inlet Valve automatically closes stopping the flow of compressed air into the Pressure Vessel. Simultaneously, the Diaphragm Valve opens allowing the compressed air in the pressure vessel to exit the Abrasive Blaster through the Diaphragm Valve. When all the pressure in the Pressure Vessel is released, blasting stops.

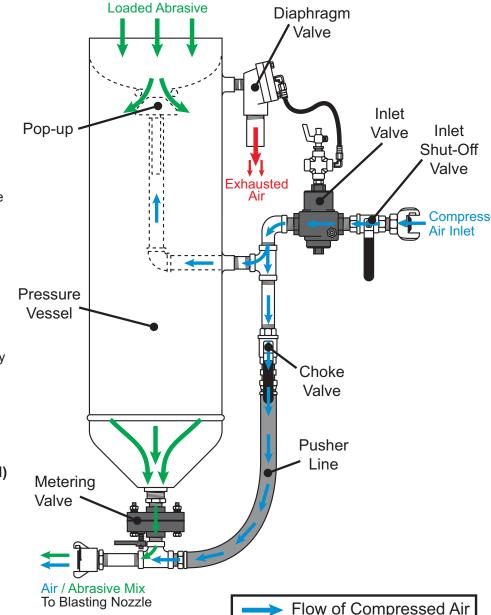

Flow of Abrasive

Flow of Exhaust Air

During Blow-down

STANDARD PACKAGES

PNEUMATIC

Pirate Brand® CPR Blasters with pneumatic controls start and stop the blasting process using a bleeder type control handle and twinline control hoses connected to the inlet and outlet diaphragm valves on the blast pot.

ADVANTAGE:

 Does not require a 12V power source.



ELECTRIC

Pirate Brand® CPR Blasters with 12VDC electric controls start and stop the blasting process using an electric control handle and control cord that activates a control valve connected to the inlet and outlet diaphragm valves on the blast pot.

ADVANTAGES:

- Faster starts and stops
- Recommended for blast hose runs longer than 100'.
- Less likely to freeze up in cold conditions.

PNEUMATIC CONTROLS



BASE PACKAGE

Includes:

- CPR Portable Blaster w/ Pneumatic Controls & JR Abrasive Metering Valve
- 25' Pneumatic Control Twinline
- Pneumatic Bleeder Type Control Handle

0.5 CU FT 121-0510-A 1.0 CU FT 121-0530-A



BRONZE PACKAGE

Includes Base Package Items **PLUS**:

- 25' Blast Hose Assembly w/ Couplings
- #4 Tungsten-Carbide Nozzle

0.5 CU FT 121-0510-B 1.0 CU FT 121-0530-B



SILVER PACKAGE

Includes Bronze Package Items PLUS:

- RPB® ASTRO™ Respirator package w/ Radex Airline Filter™ & 25' Breathing Hose
- Blast Suit (Large)
- Double Palmed Blast Gloves

0.5 CU FT 121-0510-C 1.0 CU FT 121-0530-C



GOLD PACKAGE

Includes Silver Package Items PLUS:

- 50' Air Hose Assembly for Connecting CPR Blaster to Compressed Air Source
- 50' Air Hose Assembly for Breathing Airline Filter Connection + 2-Lug Fitting For Filter.

0.5 CU FT 121-0510-D

1.0 CU FT 121-0530-D

ELECTRIC CONTROLS



BASE PACKAGE

- Includes:
- CPR Portable Blaster w/ 12VDC Electric Controls & JR Abrasive Metering Valve
- 55' Electric Control Cord
- Electric #2 Control Handle

0.5 CU FT 121-0510-A-EDC 1.0 CU FT 121-0530-A-EDC



BRONZE PACKAGE

- Includes Base Package Items PLUS: • 25' Blast Hose Assembly w/ Couplings
- #4 Tungsten-Carbide Nozzle

0.5 CU FT 121-0510-B-EDC 1.0 CU FT 121-0530-B-EDC



SILVER PACKAGE

- Includes Bronze Package Items PLUS:
- RPB® ASTRO™ Respirator package w/ Radex Airline Filter™ & 25' Breathing Hose
- Blast Suit (Large)
- Double Palmed Blast Gloves

0.5 CU FT 121-0510-C-EDC 1.0 CU FT 121-0530-C-EDC



GOLD PACKAGE

Includes Silver Package Items PLUS:

- 50' Air Hose Assembly for Connecting CPR Blaster to Compressed Air Source
- 50' Air Hose Assembly for Breathing Airline Filter Connection + 2-Lug Fitting For Filter.

0.5 CU FT 121-0510-D-EDC 1.0 CU FT 121-0530-D-EDC

LOW-PRESSURE PACKAGES

LP RESPIRATOR

High pressure respirators require an additional 15 CFM @ 100 PSI to work properly. For those with an air compressor that can produce enough CFM to run the blast equipment but not enough extra for a high pressure respirator we have created Low-Pressure Silver & Gold Packages. These packages feature a 3/4 hp ambient air pump which feeds a low-pressure version of the **RPB® ASTRO™ respirator.**

ADVANTAGE:

• Reduced CFM requirement for your compressor by eliminating the 15 CFM used by the respirator.



COMPRESSOR REQUIREMENTS @100 PSI - STD. VS. LOW-PRESSURE

	#3 (3/16") NOZZLE		#4 (1/4") NOZZLE (STANDARD IN BRONZE PKG. AND HIGHER)		#5 (5/16") NOZZLE	
	STD. PACKAGE	LOW-PRESSURE	STD. PACKAGE	LOW-PRESSURE	STD. PACKAGE	LOW-PRESSURE
BLASTER	45 CFM	45 CFM	80 CFM	80 CFM	140 CFM	140 CFM
RESPIRATOR	15 CFM		15 CFM		15 CFM	
TOTAL AIR REQUIRED	60 CFM	45 CFM	95 CFM	80 CFM	155 CFM	140 CFM

^{*}Air consumption requirements will increase as nozzles wear.

PNEUMATIC CONTROLS



SILVER LOW PRESS. PACKAGE

Includes Bronze Package Items **PLUS**: • RPB® ASTRO™ Respirator package w/

- **AMBIENT AIR PUMP** & 50' Breathing Hose Blast Suit (Large)
- Double Palmed Blast Gloves
- 0.5 CU FT 121-0510-CLP

1.0 CU FT 121-0530-CLP



GOLD LOW PRESS. PACKAGE Includes Silver Package Items PLUS:

• 50' Air Hose Assembly for Connecting CPR Blaster to Compressed Air Source

0.5 CU FT 121-0510-DLP 1.0 CU FT 121-0530-DLP

ELECTRIC CONTROLS



SILVER LOW PRESS. PACKAGE Includes Bronze Package Items PLUS:

- RPB® ASTRO™ Respirator package w/ AMBIENT AIR PUMP & 50' Breathing Hose
 - Blast Suit (Large) • Double Palmed Blast Gloves

0.5 CU FT 121-0510-CLP-EDC 1.0 CU FT 121-0530-CLP-EDC



GOLD LOW PRESS. PACKAGE Includes Silver Package Items PLUS:

• 50' Air Hose Assembly for Connecting CPR Blaster to Compressed Air Source

0.5 CU FT 121-0510-DLP-EDC

1.0 CU FT 121-0530-DLP-EDC

NOŁŁLES		
STANDARD STRAIGHT BORE TUNGSTEN CARBIDE NOZZLES (3/4" THREADS)		
1348-430	#3 TUNGSTEN CARBIDE NOZZLE	
1348-780	#4 TUNGSTEN CARBIDE NOZZLE	
1348-781	#5 TUNGSTEN CARBIDE NOZZLE	
	•	
HIGH PERFORMANCE MEDIUM VENTURI TUNGSTEN CARBIDE NOZZLES (3/4" THREADS)		
1348-614	#3 TUNGSTEN CARBIDE NOZZLE	
1348-616	#4 TUNGSTEN CARBIDE NOZZLE	
1348-617	#5 TUNGSTEN CARBIDE NOZZLE	
	·	
LONG LIFE SHORT VENTURI BORON CARBIDE NOZZLES (3/4" THREAD)		
1348-1133	#3 BORON CARBIDE NOZZLE	
1348-1144	#4 BORON CARBIDE NOZZLE	
1348-1155	#5 BORON CARBIDE NOZZI E	

BLAST HOSE TWINLINE & CONTROL CORD 10-050BLK-025-4AL 2" EXTENSION HOSE ASSEMBLY, 25 10-050BLK-050-4AL 2" EXTENSION HOSE ASSEMBLY, 50' 10-034BLK-025-4AL 3/4" EXTENSION HOSE ASSEMBLY, 25' 0-034BLK-050-4AL 3/4" EXTENSION HOSE ASSEMBLY, 50° SSEMBLY, YEL/YEL W/BLACK STRIP DMINAL 3/16" ID x 25', W/UNIONS IOSE, **TWINLINE** CONTROL, SSEMBLY, YEL/YEL W/BLACK STRIP OMINAL 3/16" ID x 50', W/UNIONS LECTRICAL EXTENSION CORD 888-7073-055PB CONNECTORS, 55', 3 PRONG, 2 W SAFETY CABLE, 1/2" - 1" HOSE TO 27WT-1 SAFETY CABLE, 1/2" - 1" HOSE TO



AIR DRYER

AIR DRYER ADPB-250 CFM @ 100 PSIG OR 359 CFM @ 150 PSIG





BREATHING EQUIPMENT

D' BREATHING AIR SUPPLY HOSE, 3/8'

50' BREATHING AIR SUPPLY HOSE, 1/2"

RPR® AMBIENT AIR PLIMP 3/4 HP

PB® RADEX AIRLINE FILTER™

RADEX™ CO MONITOR (120V)

RADEX™ CO MONITOR (12V)

	Ä	AIR HOSE		
ш	10-034RED-050-1	3/4" AIR HOSE ASSEMBLY, 50'		
	10-100RED-025-1	1" AIR HOSE ASSEMBLY, 25'		
	10-100RED-050-1	1" AIR HOSE ASSEMBLY, 50'		
- 11				
4	27WT-1	SAFETY CABLE, 1/2" - 1" HOSE TO EQUIP.		
Ц	27WC-1	SAFETY CABLE, 1/2" - 1" HOSE TO HOSE.		
,				



BLAST S	Suits Gloves
122-9140	BLAST SUIT, LIGHTWEIGHT, MEDIUM
122-9150	BLAST SUIT, LIGHTWEIGHT, LARGE
122-9160	BLAST SUIT, LIGHTWEIGHT, XL
122-9170	BLAST SUIT, LIGHTWEIGHT, XXL
122-9180	BLAST SUIT, LIGHTWEIGHT, XXXL
407701	LUXURY DOUBLE PALMED LEATHER BLASTING/WELDING GLOVES

BLASTING SET-UP AVAILABLE ACCESSORIES

LID AND SCREEN

FALLING INTO THE ABRASIVE BLASTER IN OUTDOOR APPLICATIONS MOISTURE IN THE ABRASIVE BLASTER CAN CAUSE OBSTRUCTIONS IN THE METERING VALVE LEADING O COSTLY DOWN-TIME

CREENS ARE IMPORTANT FOR KEEPING FOREIGN OBJECTS ROM FALLING INTO THE ABRASIVE BLASTER. FOREIGN DBJECTS IN THE ABRASIVE BLASTER CAN CAUSE DBSTRUCTIONS IN THE METERING VALVE LEADING TO OSTLY DOWN-TIME.

103-1070	LID FOR 0.5 & 1.0 C-SERIES BLASTERS
103-3620	SCREEN FOR 0.5 & 1.0 C-SERIES BLASTERS

MOISTURE SEPARATOR

OISTURE SEPARATORS REDUCE THE MOISTURE CONTENT OF THE SUPPLIED AIR TO THE BLASTER. MOISTURE IN THE AIR CAN LEAD TO CLOGS AND PREMATURE WEAR ON BLASTER COMPONENT

MOISTURE SEPARATOR KIT FOR 0.5 &

REGULATOR KIT

VILL ALLOW YOU TO BLAST AT LOWER PRESSURES TO CHIEVE CUSTOM FINISHES OR HELP CONTROL PROFILE.

	1/2" REGULATOR KIT FOR 0.5 & 1.0 C-SERIES BLASTERS
508-102	REPAIR KIT FOR 1/2" REGULATORS

MUFFLER

NDD A MUFFLER TO THE BLOW-DOWN DIAPHRAGM VALVE TO

MUFFLER, BLOW-DOWN, 1" MNPT

JOB TIMER

KEEP TRACK OF TIME SPENT ON A JOB AND TOTAL HOURS ON YOUR ARRASIVE BLASTER, KNOW YOUR COST, CONTROL OUR COST & SET UP A PREVENTATIVE MAINTENANCE ROGRAM FOR YOUR BLAST EQUIPMENT. FOR USE WITH C-ERIES ELECTRIC CONTROL SYSTEMS ONLY

POWER SUPPLY

LASTER ON COMMON 120AC OUTLET POWER, POWERS UP O 4 CONTROL VALVES AT ONE TIME

> POWER SUPPLY 120AC INPUT/12VDC @ 2.5 AMP OUTPUT



CPR SEK





installed MPV Mini Upgrade 888-2124-00512PB

plunger style metering valve,

we can swap out the AMV Jr.

for the MPV Mini. Factory

If you prefer a manual



ADD A POWER SUPPLY TO RUN ANY 12VDC ELECTRIC

PIRATE BRAND®



About Pirate Brand®

At Pirate Brand®, we know abrasive blasting. We have fused our 100+ years of combined experience in the blasting industry with feedback from distributors and end-users to produce abrasive blast equipment and replacement parts that are second to none. In addition to our extensive line of blasting equipment, we produce a full line of aftermarket parts that are 100% compatible replacements for other blast equipment manufacturers. We believe in quality, reliability and productivity so we subject all our products to strict quality control testing to ensure the best possible performance is achieved.

In the tough world of abrasive blasting, quality is crucial, ...and Pirate Brand® delivers.

OTHER AVAILABLE PRODUCTS

S-SERIES BLASTERS















