

SPEAKERH20/SPEAKERBH20

Wireless Speaker

Operation Instructions



READ ALL INSTRUCTIONS AND WARNINGS BEFORE USING THIS PRODUCT.

This manual provides important information on proper operation & maintenance. Every effort has been made to ensure the accuracy of this manual. These instructions are not meant to cover every possible condition and situation that may occur. We reserve the right to change this product at any time without prior notice.

IF THERE IS ANY QUESTION ABOUT A CONDITION BEING SAFE OR UNSAFE, DO NOT OPERATE THIS PRODUCT!

HAVE QUESTIONS OR PROBLEMS? DO NOT RETURN THIS PRODUCT TO THE RETAILER - CONTACT CUSTOMER SERVICE at 1-888-287-6981.

If you experience a problem or need parts for this product, visit our website for more information <http://www.buffalotools.com/> or call our customer help line at **1-888-287-6981, Monday-Friday, 8 AM - 4 PM Central Time**. A copy of the sales receipt is required.

FOR CONSUMER USE ONLY – NOT FOR PROFESSIONAL USE.

KEEP THIS MANUAL, SALES RECEIPT & APPLICABLE WARRANTY FOR FUTURE REFERENCE.

⚠ WARNING

READ AND UNDERSTAND ALL INSTRUCTIONS. Failure to follow all instructions listed below may damage the product.

Important! Water-Resistant / Safety Information

CAUTION: DO NOT submerge the speaker in water! This unit is not intended to function properly after being under water. It is rated IPX6, which means the speaker can be heavily splashed with water or left in the rain (but not submerged in water) for a limited time. If the speaker gets wet, it is recommended that you dry the speaker completely. **IMPORTANT: Speaker is NOT water-resistant when the silicone cover is off.** Securely attach the cover before using the speaker in a wet environment.

Included In Package: 1)Speaker 2)USB Micro Charging Cable 3) 3.5 mm Audio Cable

This wireless speaker works with smart phones, tablets and computers which provide a Bluetooth® Wireless Technology Enabled Product. You can stream music and use as a hands-free speakerphone.

Important! Water-Resistant / Safety Information

CAUTION: DO NOT submerge the speaker in water! This unit is not intended to function properly after being under water. It is rated IPX6, which means the speaker can be heavily splashed with water or left in the rain (but not submerged in water) for a limited time. If the speaker gets wet, it is recommended that you dry the speaker completely. **IMPORTANT: Speaker is NOT water-resistant when the silicone cover is off.** Securely attach the cover before using the speaker in a wet environment.

Specifications

Supported Profiles: A2DP, HFP, AVRCP
 Bluetooth Range: 33 ft (10m)
 Dimensions: 180 mm x 65 mm
 Battery: Li-Ion 3.7V, 1000 mAh
 Charging: 5V @ 500 mA

Operation - Powering On

Press and Hold "ON/OFF" button 2 seconds to power ON, the Blue LED will start to flash. If an Aux (3.5 mm) cable is connected to the unit, the Blue LED will turn off, and the Green LED will stay illuminated, notifying you that the unit is in Aux-In mode.

Operation - Powering Off

Press and Hold "ON/OFF" button 2 seconds to power OFF

Bluetooth Mode

Pairing - The unit will automatically go into "Pairing Mode" when it is powered ON. Go into your Bluetooth device settings menu and look for "SPEAKERH20" or "SPEAKERBH20". After the unit has paired and connected, it will re-connect automatically when the unit is powered on and the device is in range. Note: Bluetooth Timeout :10 minutes

Begin Streaming Music


Press " " to start playing music
 Press and Hold " " 2 seconds to play the next track
 Press and Hold " " 2 seconds to play previous track
 Press either " " or " " for volume control

Making and Receiving Phone Calls

When the unit is connected and paired to your device, the unit allows you to make or receive phone calls with its built-in microphone.
 Press " " to accept a call
 To end a call press " "
 To place a call, dial the number and call
 To reject a call, press and hold " " for 2 seconds

Aux-In Mode

Plug in the supplied 3.5 mm cable into the unit. The other end is connected to your device. The Green LED will only illuminate when in "Aux" mode.
 Music and volume can be controlled by your device.
 SPEAKERH20/SPEAKERBH20 Wireless Speaker Operation Instructions

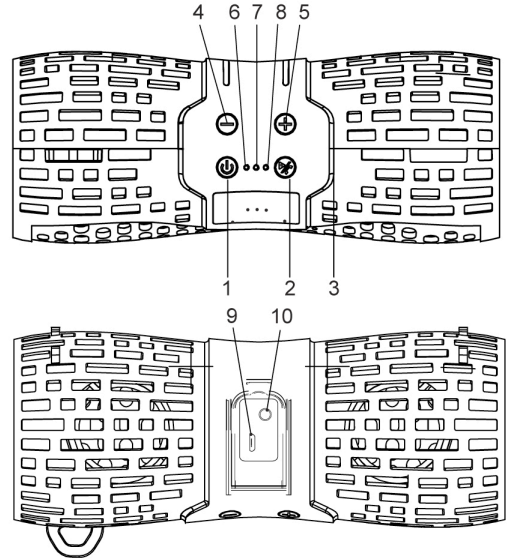

- 1.ON/OFF button
- 2.Play/Pause/Phone
- 3.MICROPHONE
- 4.Previous/Volume Decrease
- 5.Next/Volume Increase
- 6.Blue LED (Bluetooth)
- 7.Red LED (Charging)
- 8.Green LED (AUX)
- 9.Micro USB Charging Port
- 10.AUX - IN Port

LED Status

Blue LED flashing & Green LED solid	Bluetooth Mode
Green LED on solid	Aux Mode
Red LED	Charging (Charging Completed When No Red LED)

Troubleshooting

Unit doesn't connect to device	Speaker needs to be connected/re-paired to device
A tone is heard every few seconds	Speaker needs to be charged
Unit will not power on	Speaker needs to be charged
Unit doesn't control track(s)/volume	Speaker needs to be in Bluetooth mode for full control
Unit distorts at high volume	The devices' volume needs to be lowered

Charging

Attach the USB cable to the unit, and plug into any USB charger. If the unit is completely discharged, it will take approximately 4 hours to fully charge. The Red LED will illuminate during charging. When it has completed, the Red LED will turn off. Note: There will be a beep when the battery is low and needs to be recharged.