




Spreader Settings

1. Always check spreader rate settings before you start. Some products applied at a rate above the manufacturers recommendations can cause damage to your lawn.
2. To manually calculate the proper setting number, pre-weigh the amount of product recommended by the manufacturer for 1,000 sq. ft. (92.9 sq. m). Put the pre-weighed product in the hopper. Select a low setting on the controller; begin spreading the material on a pre-marked 1,000 sq. ft. (92.9 sq. m) area (10 ft. (3 m) x 100 ft. (30 m), 20 ft. (6.1 m) x 50 ft. (15 m), 30 ft. (9.1 m) x 33 ft. (10 m) etc.). After covering the pre-marked area, estimate the amount of material remaining and adjust the controller setting accordingly. The proper setting is achieved when the hopper runs out at the end of the area to be covered.

Using Your Spreader

Setting are made by pressing down on the Calibration Indicator button and setting to desired number on the Control Cable Assembly.

1. Move the handle to adjust the spreader setting by following the direction of the arrows. When the handle is moved to "10" the adjustable plate is fully open, when it is moved to "0" the plate is fully closed.
2. Loosen the wing nut on the Bracket and move the adjustment lever handle up or down depending on the amount of material required. Pushing the handle down will release more material and pulling the handle up will stop the flow entirely.
3. Tighten the wing nut when the desired position is reached.

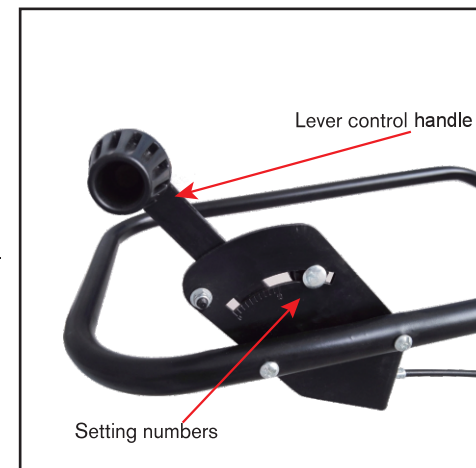

Application Tips

1. Walk at a brisk, steady pace.
2. Do not leave spreader open when making a turn.
3. Partially overlap each "pass" to avoid missing areas of your lawn. Usually an overlap of 1 1/2 feet (45.7 cm) will eliminate this problem.
4. For best results do not apply on a windy day.

Maintenance

1. Remove unused product from the hopper after use.
2. Clean the spreader thoroughly after each use. Fertilizer or other material left in the hopper, control valve, slinger and or other components may cause poor spreader performance.



1225239

Push Spreader

50 lb. Capacity

INSTRUCTION MANUAL



Max. carry capacity: 50 lb / 22 kg

CAUTION: Never inflate tire above 30 PSI (206 Kpa).

IMPORTANT INFORMATION:

Please read all instructions and precautions before use of this product

Distributed by:
TRACTOR SUPPLY COMPANY
5401 VIRGINIA WAY
BRENTWOOD, TN 37027
For customer support,
call: 1-888-376-9601
www.TractorSupply.com
MADE IN CHINA