



HEININGER HITCHMATE.

Spare Tire Lock™

To Lock: Pop open key cover and insert the key. Place the key housing against the pin and engage the slot. While holding the key, screw the pin clockwise 2 to 3 revolutions or until it stops. This will pull key section over the slot and onto the pin. Remove the key (key removes every quarter turn).

To Unlock: Pop open key cover and insert the key. Screw the pin counter clockwise 2 to 3 revolutions or until key section separates from the pin. Record the key number. This number is necessary for replacements.

Warning: Screw lock housing completely onto pin (approximately 2 to 3 revolutions). Be certain locking mechanism is completely engaged. Check lock frequently for wear or damage and periodically lubricate. Always use safety chains in accordance with trailer and hitch manufacturers' instructions. Keep chains clear of lock. Assure all parts operate freely. Failure to follow these instructions can result in separation of spare tire and vehicle. ALWAYS USE AT LEAST ONE LUG BOLT AND NUT TO PROPERLY SECURE WHEEL.



6 61588 06027 7

Heininger Holdings LLC

Bellingham, WA 98229 USA

www.heininger.biz Patent 4,711,106