

Colorado Springs, CO www.khmfg.com | (877) 738-5188

Thank you for purchasing a K&H Manufacturing Thermo-Hose TM . We're confident that with, proper use and care, your new Thermo-Hose TM will provide years of hassle free service.

WARNING: This is an electrical product. Read all directions and precautions carefully before operating. Failure to properly follow all directions and instructions may lead to electrical shock of fire which could cause serious bodily injury.

USE INSTRUCTIONS

Read all instructions carefully. This is an electrical product, pay special care to IMPORTANT SAFEGUARDS.

- FOR OCCASIONAL USE:
 - Simply plug in your Thermo-Hose™ 5 to 30 minutes before use. On colder days, it can take 15 to 30 minutes to completely thaw the hose. On warmer winter days, it can thaw in as little as 2 or 3 minutes. Only hook up to water source when in immediate use., unhook from water source.
- POR HEAVY/FREQUENT USE:

 Leave your Thermo-HoseTM plugged in all winter long. The thermostat will turn the hose off when ambient air temperatures rise above freezing. Only hook up to water source when in immediate use. Immediately after use, unhook from water source.
- If using a sprayer or any other attachment, do not leave the Thermo-Hose™ under pressure for extended periods of time.
- FOR HEAVY/FREQUENT USE:

 Completely empty all water from hose when storing for the summer season. Roll up the hose & store in a dry location, out of direct sunlight.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

- Thermo-Hose™ must be plugged into a GFCI electrical outlet intended for outdoor use.
- If you do not have or are unsure if you have a GFCI outlet, contact a qualified electrician to check and install a properly grounded outlet, acceptable for outdoor use and protected from snow and rain.
- Keep hose out of path of foot traffic, automobile traffic. Do not run over hose with automobiles, wheel barrows, carts, etc.
- Inspect cord before using. If the cord is damaged do not use.
- Unplug Thermo-Hose™ at receptacle outlet when not in use for extended periods of time.
- Always disconnect from water source (hose bib) when not in use. Thermo-Hose™ will not keep water source from freezing. Only the hose itself is heated. Failure to disconnect from water source can cause your water source to freeze and become damaged.
- Never try to cut or splice your Thermo-Hose™.
- Do not use Thermo-Hose™ on a crank style hose reel.

K&H Limited Two Year Warranty

Our warranty is as follows: K&H Manufacturing warrants to the original consumer, that this product will be free of defects and workmanship for a period of two years from the date of purchase. The manufacturer's liability hereunder is limited to replacement of the product. This warranty is void if the product has been damaged by accident, unreasonable use, neglect, tampering, or other causes not arising from defects in material or workmanship.

To exercise your warranty: If, during the warranty period, your product malfunctions, return it to the place of purchase with your original purchase receipt. If this cannot be done, return the product, postage prepaid, to K&H Manufacturing, with dated proof of purchase or original date receipt. A return authorization number, obtained by calling (719) 591-6950 must accompany all returns to manufacturer. Please include a note explaining the problem when returning the product.