

PANEL 9

- old ones), unlock then lock all doors using the driver's side power **LOCK/UNLOCK** switch and within 5 seconds, push **ANY** button on the next remote. Your hazard lamps should flash.
- Repeat Step #4 for each remote (including any existing remotes).
- Turn the key to the **OFF** position, remove keys from the ignition, unlock doors using the driver's side power **LOCK/ UNLOCK** switch and open the driver side door.
- Test all remotes.

• PAIR CODE 12 •

- Start with the key out of the ignition, driver's door open and **UNLOCKED**, and all other doors closed.
- Perform these steps within 5 seconds.
 - Insert the key into the ignition (Do **NOT** Turn). Pull key out.
 - Insert the key into the ignition (Do **NOT** Turn). Pull key out.
- Perform these steps within 40 seconds.
 - Close then open the driver's door.
 - Close then open the driver's door.
 - Insert the key into the ignition (Do **NOT** Turn). Pull key out.
- Perform these steps within 40 seconds.
 - Close then open the driver's door.
 - Close then open the driver's door.
 - Insert the key into ignition and leave in ignition.
 - Close the driver's door.
 - Turn the ignition to **ON** (Do **NOT** Start) then back to **OFF**.
 - Remove the key from the ignition.
- Within 3 seconds, the power door locks should lock then unlock automatically indicating successful entry into **PAIRING MODE**. Return to Step #1 if the locks do not cycle at this point.
- Perform these steps within 40 seconds.
 - Press the **LOCK** and **UNLOCK** buttons on the remote simultaneously for 1 second.
 - Immediately after letting go of the lock and unlock buttons press the lock button by itself and hold for 2 seconds.
- Within 3 seconds, the door locks should lock and then unlock once indicating successful pairing.
- If the door locks cycle twice, repeat steps A and B as the remote was not accepted.
- Repeat steps A and B in Step #6 for each new remote.
- Open driver's door.
- Test all remotes.

• PAIR CODE 13 •

- Start with key out of the ignition, driver's door is open, all others are closed, and driver's door is unlocked.
- Insert key into ignition (Do **NOT** turn) and pull it out.
- Perform these steps within 40 seconds.
 - Using the power door lock switch on driver's door, perform 5 **LOCK/UNLOCK** cycles starting with lock. Use an even pace and try to go about one cycle per second. (1 cycle = 1 **LOCK** and 1 **UNLOCK**)
 - Close, then open driver's door.
- Perform these steps within 40 seconds.
 - Using the power door lock switch on driver's door perform 5 **LOCK/UNLOCK** cycles starting with lock. Use an even pace and try to go about one cycle per second. (1 cycle = 1 **LOCK** and 1 **UNLOCK**)
 - Insert the key in the ignition cylinder.
 - Turn the ignition to **ON** (Do NOT Start) then back to **OFF**.
 - Turn the ignition to **ON** (Do **NOT** Start) then back to **OFF**.
 - Remove the key from the ignition.
- Within 3 seconds the power door locks should cycle automatically indicating successful entry into **PAIRING MODE**. Return to Step #1 if the locks do not cycle at this point.
- Perform these steps within 40 seconds.

PANEL 10

- Press the **LOCK** and **UNLOCK** buttons on the remote simultaneously for 1 second.
 - Immediately after letting go of the **LOCK** and **UNLOCK** buttons, press the **LOCK** button by itself 2 seconds. Within 3 seconds the door locks should cycle once indicating successful pairing. If the door locks don't cycle or cycle twice, repeat steps A and B, your remote has not been accepted.
- Repeat steps A and B in Step #6 for each new remote.
- Close driver's door.
 - Test all remotes.

• PAIR CODE 14 •

- Turn ignition to run position (as far as you can go without starting engine).
- Using any working remote, press the **UNLOCK** button for 4 to 10 seconds.
- Within the specified 4 to 10 seconds, continue pressing the **UNLOCK** button and press the **PANIC** button for 1 second and release both buttons at the same time.
- A chime will sound within 3 seconds to indicate that the vehicle has entered remote **PAIRING MODE**.
- Within 30 seconds of the chime, press any button on all remotes to be paired including previously paired remotes. A chime will sound after each remote is paired.
- Turn ignition to **OFF** and remove key.
- Test all remotes.

• PAIR CODE 15 •

- Close all doors and then open driver's door and press the **UNLOCK** button on driver's door panel while door is open and insert key in ignition.
- Turn ignition from **OFF** to **RUN** 8 times within 10 seconds with the 8th time ending in **RUN**. Door locks will cycle to confirm you are in **PAIRING MODE**.
- Within 20 seconds press any button on first remote.
- Door locks will cycle to confirm pairing.
- Within 20 seconds, press any button on second remote. Door locks will cycle again to confirm pairing.
- Turn ignition to **OFF**. Locks will again cycle to indicate end of **PAIRING MODE**.
- Test all remotes.

• PAIR CODE 16 •

- Fasten seat belts and close all doors.
- Turn ignition from **OFF** to **RUN** 4 times within 6 seconds, with the 4th time ending in **RUN** (**OFF** is the position where you can remove your key, **RUN** is the position just shy of starting your car).
- Turn ignition to **OFF**. Acoustic signal will sound to confirm **PAIRING MODE**.
- Within 10 seconds, press and hold any button on the first remote. Wait for acoustic sound and warning lamp to flash (confirming pairing) then release button on remote.
- Wait 2 seconds but within 10 seconds repeat Step #4 for all other remotes. If you only have one remote then continue to Step #6.
- Turn ignition to **RUN** or wait 10 seconds to end **PAIRING MODE**.
- Test all remotes.

• PAIR CODE 17 •

- Turn ignition from **OFF** to **RUN** 8 times within 10 seconds, with the 8th time ending in **RUN**. Door locks will cycle to confirm **PAIRING MODE**.
- Within 20 seconds press any button on the first remote. Door locks will cycle to confirm pairing.
- Within 20 seconds, press any button on the second remote. Door locks will cycle again to confirm pairing.
- Turn ignition to **OFF**. Locks will again cycle to indicate end of **PAIRING MODE**.
- Test all remotes.

PANEL 11

• PAIR CODE 18 •

- Turn ignition from **OFF** to **RUN** 4 times within 3 seconds, with the 4th time ending in **RUN**. Door locks will cycle to confirm **PAIRING MODE**.
- Within 20 seconds, press any button on the first remote. Door locks will cycle to confirm pairing.
- If applicable, within 20 seconds press any button on the second remote. Door locks will cycle to confirm pairing.
- Turn ignition to **OFF**. Door locks will cycle to indicate end of **PAIRING MODE**.
- Test all remotes.

• PAIR CODE 19 •

- Turn the ignition from **OFF** to **RUN** 4 times within 6 seconds.
- Turn the ignition **OFF**. The LED in the clock/ trip computer will light up continuously to confirm **PAIRING MODE**.
- Within 20 seconds, press any button on the first remote. The LED in the clock will flash 4 times to confirm pairing.
- If applicable, within 20 seconds, press any button on the second remote.
- Turn the ignition to **RUN**. The LED will turn off to indicate end of **PAIRING MODE**.
- Test all remotes.

• PAIR CODE 20 •

- Turn the ignition from **OFF** to **RUN** 4 times within 6 seconds.
- Turn the ignition **OFF**. The LED in the clock/ trip computer will light up continuously to confirm **PAIRING MODE**.
- Within 20 seconds, press any button on the first remote. The LED in the clock will flash 4 times to confirm pairing.
- If applicable, within 20 seconds, press any button on the second remote.
- Turn the ignition to **RUN**. The LED will turn off to indicate end of **PAIRING MODE**.
- Test all remotes.

• PAIR CODE 21 •

- Close all doors.
- Open driver's door.
- Insert key and turn to **ON** position and within 10 seconds turn key to **OFF** position and remove key.
- Within 20 seconds close and open driver's door 3 times.
- Insert key and turn to **ON** position and within 10 seconds turn key to **OFF** position and remove key.
- Locks should now lock and unlock automatically to confirm you have entered **PAIRING MODE**.
- Press the **UNLOCK** button on remote and locks should cycle to confirm pairing.
- Repeat Step #3 on each additional remote.
- Exit vehicle with keys and remote, close door.
- Test all remotes.

• PAIR CODE 22 •

- Put one key in the **ON** position in the ignition (do not start) and put another key in the driver's door and turn to the unlock position (counter clockwise) and hold until it beeps three times, about 10-15 seconds, then return to center position (leave in the door).
- Press one of the remote buttons (if you have more than one, you must program all the remotes at the same time or else the ones that worked will no longer work). The horn will beep once for the number of remotes, example: 1 beep for the first remote, 2 beeps for the second, etc.
- Turn the door key back to left until the horn beeps three times to deactivate **PAIRING MODE**, and remove the ignition key.
- Test all remotes.

PANEL 12

• PAIR CODE 23 •

- Open driver's door.
- Hold the high beam selector arm towards you and insert ignition key and key to first position (**ACC**).
- Release the high beam selector and then pull and release the high beam selector 4 times. After the 4th time you will hear a chime.
- Then press the lock button on each remote to pair them.
- Remove key from ignition.
- Test all remotes.

• PAIR CODE 24 •

Use this Procedure for Vehicles with Driver Information Center Buttons. This information is in your Owner's Manual in the Drivers Information Center Section.

- Insert key and turn to **ON** position so you can access Driver Information Center.
- Press the vehicle information button until **PRESS TO RELEARN REMOTE KEY** displays.
- Press the set/reset button until **REMOTE KEY LEARNING ACTIVE** displays.
- Press and hold the **LOCK** and **UNLOCK** buttons on the keyless remote at the same time for approximately 15 seconds. A chime will sound indicating that the remote is **PAIRED**.
- To **PAIR** additional remotes at this time repeat Step #4. This vehicle can have a maximum of eight remotes paired.
- To exit **PAIRING MODE** turn key off and remove key.
- Test all remotes.

Use this Procedure for Vehicles without Driver Information Center Buttons. To access this display, the vehicle must be in Park (P) with key in the **ON** position (as far as you can go without cranking engine).

- Press the trip odometer reset stem until **RELEARN REMOTE KEY** displays.
- Press and hold the trip odometer reset stem for three seconds.
- The message **REMOTE KEY LEARNING ACTIVE** will display.
- Press and hold the **LOCK** and **UNLOCK** buttons on the first keyless remote at the same time for approximately 15 seconds. A chime will sound indicating that the remote is **PAIRED**.
- To program additional remotes at this time repeat Step #4.
- This vehicle can have a maximum of eight remotes **PAIRED**.
- To exit **PAIRING MODE** turn key off and remove key.
- Test all remotes.

RESETTING THE REMOTE

You will need:

- Small flat-head screwdriver.
- Small piece of wood or plastic such as a pen-cap or toothpick.

- Insert the screwdriver into the notch on the left side of the remote. Gently twist the top and bottom shell of the remote until it separates.
- Remove the rubber insert and the remote circuit board. Do not place the circuit board on any metal surface!
- Using the wood or plastic tool, carefully push the battery out of the bottom of the holder. Keep battery removed for 10 seconds. Make sure the + mark faces **AWAY** from the green board, so the + side touches the metal clip.
- Insert the battery and retry activation, pairing or usage with your vehicle.
- If it still does not work correctly try replacing with a new CR1632 battery.
- If you are still having trouble see **MORE HELP** on panel 14.

PANEL 13

MORE HELP

EMAIL SUPPORT: Send questions or concerns to: info@UniversalCarRemote.com. As with all forms of correspondence, be prepared to provide:

- The year, make, and model of your vehicle.
- Product information - the product you are inquiring about, which is the Universal Car Remote.

Car Keys Express **TELEPHONE SUPPORT** Phone support is available for Universal Car Remotes still covered under the standard warranty. Have the following items ready when you call:

- Purchase receipt.
- The Universal Car Remote.

Call Car Keys Express Tech Support between the hours of 8:30am to 5pm EST at:

1-888-598-8910

Car Keys Express POSTAL MAIL
Car Keys Express
828 East Market St.
Louisville, KY 40206
United States

FREQUENTLY ASKED QUESTIONS

Q: The car won't go into **PAIRING** mode.
A1. Verify the year of your car then check in the **VEHICLE LOOK UP** list in panel 6-8 that the **PAIRING CODE** is the correct one for your car. Then, retry the **PAIRING** instructions.
A2.If you've never had one of the remotes that originally came with the car, it is possible that the car does not have a factory installed keyless entry system.

Q: Car is in **PAIRING** mode, but doesn't respond when the Universal Car Remote buttons are pressed.
A1. Redo all steps to activate, pair, and test the remote.
A2.If a second **ACTIVATION CODE** exists for the user's vehicle, use the second **ACTIVATION CODE** and repeat the activate, pair, and test steps.
A3.Try resetting the Universal Car Remote.

Q: Some of the buttons on the Universal Car Remote are not working.
A: The Universal Car Remote works with hundreds of different factory remotes. Some vehicles use buttons that others will not use. All vehicles will use the **LOCK** and **UNLOCK** buttons.

NOTE: Some vehicles require the user to hold a button for up to three seconds before a feature will operate, while others require pressing the button twice within 2 seconds. This is particularly common for **PANIC**, **TRUNK**, **FUNCTION I** and **FUNCTION II** buttons.

Q: Can I pair the Universal Car Remote to work with more than one vehicle?
A: No, the Universal Car Remote is designed to work with one vehicle.

Q: I successfully paired the Universal Car Remote to my vehicle but my old remote no longer works.

A: All remotes, old and new, must be paired at once. Refer to the **PAIRING** procedure for your vehicle for more information.

Q: **STATUS LIGHT** remains lit and will not turn off.
A: See "**RESETTING THE UNIVERSAL CAR REMOTE**".

Q: I missed the **STATUS LIGHT** sequence after I entered my vehicle code. Can I check it?
A: Yes, press **FUNCTION I** and **PANIC** at the same time until the **STATUS LIGHT** stays

PANEL 14

illuminated. Then, press **FUNCTION I** and **PANIC** again. The **STATUS LIGHT** should turn off and blink back the code you entered from Step 1 in Panel 2.

FCC & WARRANTY

FCC ID: X32-MECJ

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

WARNING: Changes or modifications to this device not expressly approved by iKeyless LLC could void the user's authority to operate the equipment.

DISCLAIMER: Customer accepts all responsibility and liability for any and all injuries, damages, costs, or claims as a result of the correct or incorrect use of setup and/or pairing instructions. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

3 YEAR LIMITED WARRANTY

Car Keys Express warrants this product against manufacturing defects for a period of three years from the date of purchase. This warranty covers any product defects that result in poor performance of the remote control. It does not cover cosmetic appearance, battery depletion, nor poor performance of the remote control due to damage resulting from impact, exposure to water, exposure to excessive heat, improper handling or improper use. This warranty does not cover customer inability or unwillingness to perform the required procedures that triggers vehicle's keyless entry system to enter 'activation mode' or 'pairing mode', nor does it cover defects in a vehicle's keyless entry system. Warranty claims are limited to the replacement of the product at Car Key Express' discretion. To submit a warranty claim, contact the retail store from which the Universal Car Remote was originally purchased. Customer must provide proof of purchase including UPC label from packaging and copy of store receipt showing date of purchase. This warranty gives you specific legal rights and you may also have other rights which vary from state to state. This information may not be reproduced, copied, or distributed by any means without prior written consent from Car Key Express.

© 2020 Car Keys Express

PANEL 15

PANEL 16

