

Thermo-Chicken™ Heated Pad

Care & Instructions

Made in China

K&H Manufacturing, LLC
Colorado Springs, CO
www.khmfg.com | (719) 591-6950



Thank you for purchasing K&H Manufacturing's Thermo-Chicken™ Heated Pad.

When used correctly, your Thermo-Chicken™ should provide years of hassle free warmth for your chickens. Your Thermo-Chicken™ is intended for use indoors and outdoors. **Its unique heating system is designed to become warm, not hot.** The Thermo-Chicken™ is designed for use with animals only.

WARNING: This is an electrical product. Read all directions and precautions carefully before operating. Failure to properly follow all directions and instructions may lead to electrical shock or fire, which could cause serious bodily injury.

For household use Only

Important safeguards

When using electrical appliances, basic safety precautions should always be followed, including the following:

- 1 Read all instructions.**
- 2** To protect against electrical hazards, **DO NOT** immerse cord, plug, or appliance in water or other liquid.
- 3 Close supervision is necessary** when used by or near children.
- 4 ALWAYS** unplug from outlet when not in use.
- 5 DO NOT** operate any electrical appliance with a damaged cord or plug, or if the appliance malfunctions or has been damaged in any way. **RETURN** all malfunctioning appliances to the factory for examination.
- 6 DO NOT** use appliance for anything other than its intended use.
- 7 DO NOT PUNCTURE PLASTIC HOUSING FOR ANY REASON.**
- 8** For use with 110-120 volt AC **ONLY**.
- 9 DO NOT** cover your Thermo-Chicken™ with blankets or materials. Covering may not allow heat to radiate properly and could cause pad failure.
- 10** When placing the pad in an enclosed area, be sure pad covers no more than half of the floor space so your chickens have the option of sleeping on or off the Thermo-Chicken™ heated pad.
- 11** When used outside your home in an enclosure such as a chicken coop or rabbit hutch, this unit must be plugged into a properly grounded electrical outlet rated for outdoor use. If you do not have a properly grounded outlet, contact a certified electrician to have one installed.
- 12** Always make sure the cord exits your pet's enclosure. Keep cord out of cage.

INSTRUCTIONS

- 1** Place directly on a hard, flat surface inside a coop, house or hutch. Area chosen should be sheltered, out of direct sun, rain or snow.
- 2** Plug into 110-120 volt AC outlet. Allow one to two hours for the Thermo-Chicken™ Heated Pad to warm. The unit will feel slightly warm to the touch. When an animal lies on it, the pad will reach a maximum temperature of approximately 102 degrees F. The built-in thermostat will automatically regulate the temperature.
- 3** Unplug, clean and store pad while not in use.
- 4** Be sure to have the pad up against a wall so cord exits cage immediately. Never allow the unshielded portion of the cord inside enclosure.
- 5** When pad is used in a warmer environment, an optional Lectro-Temp Control™ by K&H may be used to reduce the pad temperature to the exact temperature design.
- 6** Your Thermo-Chicken™ pad may be mounted to a chicken coop, rabbit hutch, or any other non-flammable surface. You can drill holes and use screws to mount in only the outer lip portion of the pad. Do not puncture or drill holes in any part of the sleeping surface of the pad.



Care Instructions:

Your Thermo-Chicken™ Heated Pad may be cleaned with a damp cloth when unplugged. The unit may be plugged in when the plug is thoroughly dry.

K&H Limited One Year Warranty

Our warranty is as follows: K&H Manufacturing warrants to the original consumer, that this product will be free of defects and workmanship for a period of one year from the date of purchase. The manufacturer's liability hereunder is limited to replacement of the product. This warranty is void if the product has been damaged by accident, unreasonable use, neglect, tampering, or other causes not arising from defects in material or workmanship.

To exercise your warranty: If, during the warranty period, your product malfunctions, return it to the place of purchase with your **original purchase receipt**. If this cannot be done, return the product, postage prepaid, to K&H Manufacturing, with **dated proof of purchase or original date receipt**. A return authorization number, obtained by calling (719) 591-6950 must accompany all returns to manufacturer. Please include a note explaining the problem when returning the product.