

# Outdoor Kitty House™ (Heated or Unheated)

## Care & Instructions

Made in China  
K&H Manufacturing, LLC  
Colorado Springs, CO  
www.khmf.com | (719) 591-6950



**Thank you for purchasing K&H Manufacturing's Outdoor Kitty House™.** When used correctly, your Outdoor Kitty House™ should provide years of hassle free warmth for your pet. Your Outdoor Kitty House™ is intended for use indoors and outdoors and is perfect for garages, porches & barns. The Outdoor Kitty House™ is designed for use with animals only.

*If you purchased the heated version - please pay special care to the instructions for the included Lectro-Soft™ Outdoor Heated Pad.*

### PUTTING TOGETHER YOUR Outdoor Kitty House™

- 1** If you purchased the heated version, open the air valve on your Lectro-Soft™ heated pad. Then plug it in and allow the inner foam core to expand. After expansion, push the valve closed to ensure a waterproof seal.
- 2** Locate the roof panel, the floor with 4 side panel house structure, and the padded floor.
- 3** Zip both sides of the roof panel to the two side walls of the house structure. See **Figure 1**.

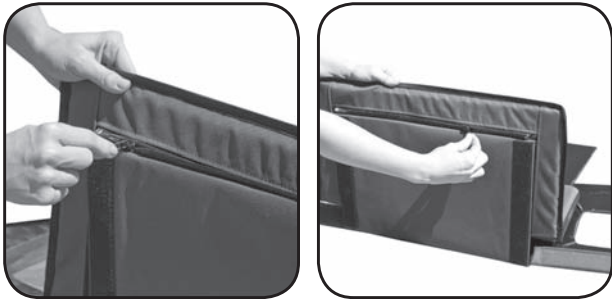


FIGURE 1

- 4** Raise each end door panel to meet side panels and fasten securely with hook and loop sewn along edges. See **Figure 2**.
- 5** If you purchased the heated version, place your Lectro-Soft™ heated pad into the kitty shelter on the bottom panel of the house structure prior to closing the second door wall and thread the cord through the cord hole. See **Figure 3**.

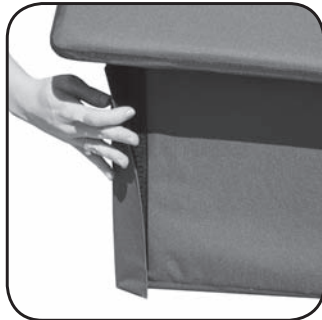


FIGURE 2



FIGURE 3

- 6** Locate hook and loop under end roof panels and firmly attach to the tops of the door end panels. Press firmly for good adhesion. See **Figure 4a**.
- 7** Clear flap doors can be attached from the inside using hook and loop. Adjust door to ensure free swinging. Press firmly. See **Figure 4b**.



FIGURE 4

### IMPORTANT SAFEGUARDS

For Lectro-Soft™ Heated Pad included in heated version of Outdoor Kitty House™.

#### For household Use Only\*

**\*The heated pad is an electrical device and must only be operated inside this house or another enclosure such as a porch, shed, barn, dog house, or cat house.**

**WARNING:** This is an electrical product. Read all directions and precautions carefully before operating. Failure to properly follow all directions and instructions may lead to electrical shock or fire which could cause serious bodily injury.

**When using electrical appliances, basic safety precautions should always be followed including the following:**

- 1** Read all instructions.
- 2** To protect against electrical hazards, **DO NOT** immerse cord, plug, or appliance in water or other liquid.
- 3** Close supervision is necessary when used by or near children.
- 4** **ALWAYS** unplug from outlet when not in use.
- 5** **DO NOT** operate any electrical appliance with a damaged cord or plug, or if the appliance malfunctions or has been damaged in any way. **RETURN** all malfunctioning appliances to the factory for examination.
- 6** **DO NOT** use appliance for anything other than its intended use.
- 7** **DO NOT PUNCTURE PLASTIC HOUSING FOR ANY REASON.**
- 8** For use with 110-120 volt AC **ONLY**.
- 9** **DO NOT** cover your LECTRO-SOFT™ with blankets or materials other than a fleece K&H LECTRO-COVER. Other coverings may not allow heat to radiate properly and could cause pad failure.
- 10** **When placing the pad in an enclosed area such as your OUTDOOR KITTY HOUSE™, be sure pad covers no more than half of the floor space so your pet has the option of sleeping on or off the LECTRO-SOFT™ heated pad.**
- 11** When used outside your home, this unit must be plugged into a properly grounded electrical outlet rated for outdoor use. If you do not have a properly grounded outlet, contact a certified electrician to have one installed.
- 12** Always make sure the cord exits your pet's enclosure. Keep cord out of shelter.

**Save these instructions for your use.**

#### Care Instructions:

Your LECTRO-SOFT™ Heated Pad may be cleaned with a damp cloth when unplugged. The unit may be plugged in when the plug is thoroughly dry. Wipe OUTDOOR KITTY HOUSE™ clean with a damp cloth. Machine wash on gentle cycle and line dry the included fleece cover.

#### K&H Limited One Year Warranty

**Our warranty is as follows:** K&H Manufacturing warrants to the original consumer, that this product will be free of defects and workmanship for a period of one year from the date of purchase. The manufacturer's liability hereunder is limited to replacement of the product. This warranty is void if the product has been damaged by accident, unreasonable use, neglect, tampering, or other causes not arising from defects in material or workmanship.

**To exercise your warranty:** If, during the warranty period, your product malfunctions, return it to the place of purchase with your **original purchase receipt**. If this cannot be done, return the product, postage prepaid, to K&H Manufacturing, with **dated proof of purchase or original date receipt**. A return authorization number, obtained by calling (719) 591-6950 must accompany all returns to manufacturer. Please include a note explaining the problem when returning the product.