

Mon - Thurs 7:30am - 5:00pm | Friday 7:30am - 4:00pm CST

1-800-779-2102

WWW.DEEZEE.COM

PLEASE INSPECT YOUR PRODUCT FOR DAMAGE BEFORE PROCEEDING TO INSTALLATION.


INSTRUCTIONS FOR RETURNS:

ALL PRODUCTS NEED RETURNED TO POINT OF PURCHASE FOR WARRANTY DEFECTS, DAMAGES, OR RETURNS.

FOR MISSING PARTS PLEASE CONTACT DEE ZEE INC.

REGISTER YOUR PRODUCT ONLINE: www.deezee.com/registration

VIEW INSTRUCTIONS ONLINE: www.deezee.com/instructions

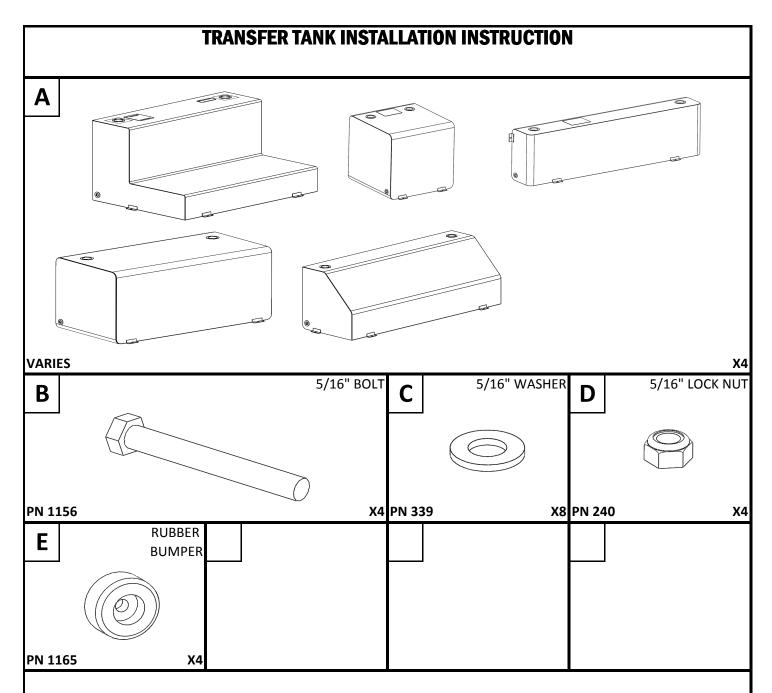

WARNING:

This tank is not to be used to transport flammables such as gasoline.

This liquid transfer tank is designed and manucatured to be used as a transfer tank soley for private use and not for commercial applications or interstate commerce.

 
It is not designed for use as an auxiliary fuel tank connected to the vehicle's fuel supply system and it's intended use design does not meet

 
<u>Title 49 of the United States Federal Register governing transportation.</u>

Before using the liquid transfer tank, visually inspect the entire tank for any damage to the tank. If damage has occurred, do not use the tank unless it is tested with a harmless fluid such as water.

TOOLS REQUIRED


MARKER WRENCH/RATCHET 3/8" DRILL BIT






1 Place the transfer tank in the truck bed.


Your tank may vary from the one shown in the images. The attachment points are the same for all Dee Zee tanks and will mount the same way.

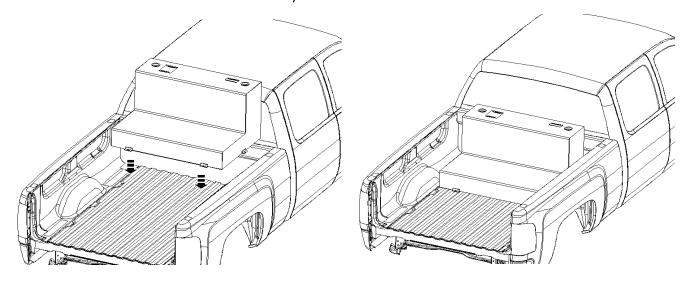

Using a marker, mark the hole location in the four tank attachment points.

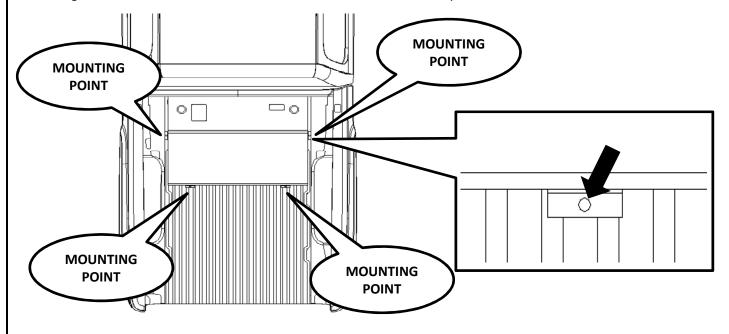


For rectangular shaped tanks there will be 2 mounting location on the front, and 2 on the back.

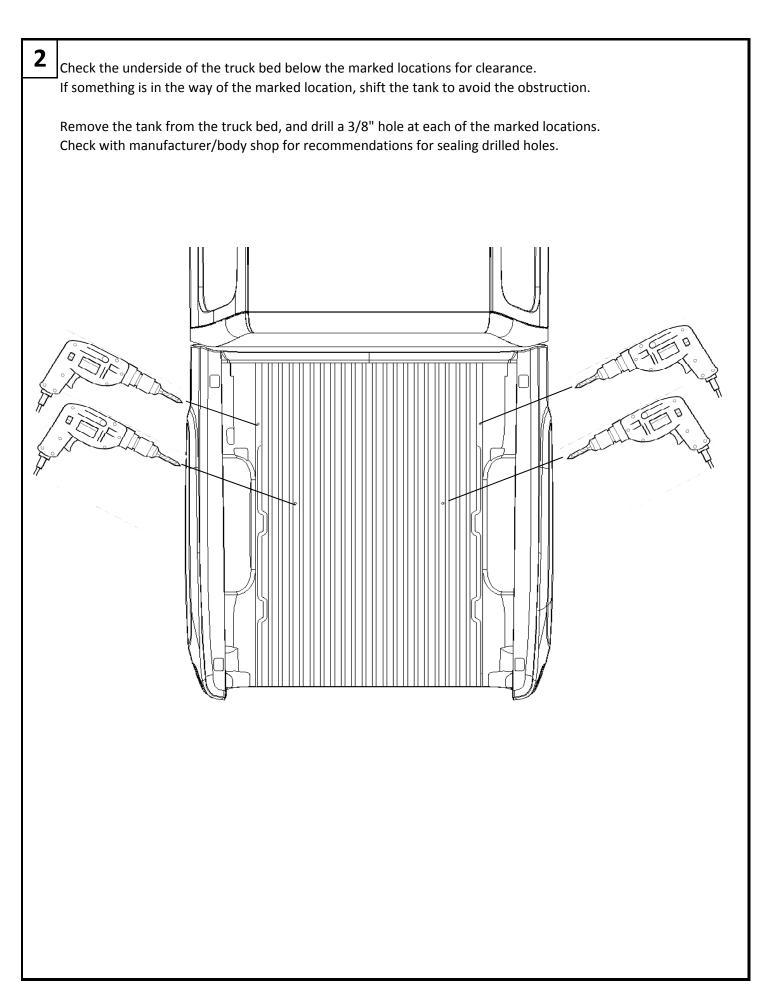

After drilling the holes, return the tank to the truck bed and align the tank mouting locations with the holes in the truck bed.

At each of the mounting locations, place a 5/16" bolt [B] and 5/16" washer [C] down through the mounting location hole. From the underside of the truck place a rubber bumper [E], 5/16" washer [C], and 5/16" lock nut [D] onto the bolt.

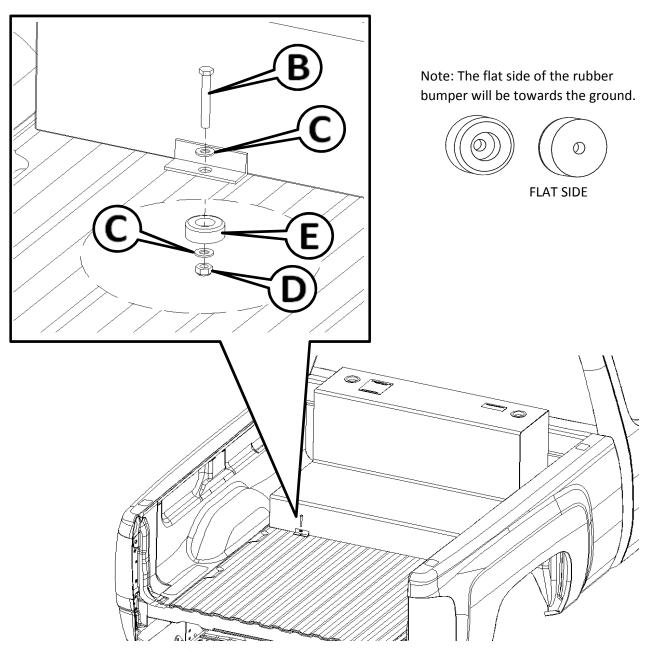

Tighten the nut and bolt using a 1/2" socket and wrench until the rubber bumper comes into contact with the underside of the truck bed. Grab the rubber bumper and try to rotate it around the bolt. If the rubber bumper can still rotate on the bolt, continue to tighten the nut until the rubber bumper can no longer be turned by hand. Once the rubber bumper can no longer be turned by hand, tighten the nut one additional 360 degree turn. Repeat this process for all four mounting locations.

or aluminum tanks:	
ue to the fact alum	num is softer than steel, make sure the threads on the steel pump are clean
_	he pump will strip the threads in the tank if not installing the pump carefully.
ne liquid transfer ta ormation during liqu	nk must be vented at all times for expansion and to prevent vacuum iid removal.
ompound such as L ap assembly into de ockwise past the in	vent fill cap assembly, coat the threads with an acceptable thread sealing A-CO, Slic-tite Paste with "Teflon". Screw threaded portion of prevent fill sired flange. Install the prevent cap on threaded casting, press down and turn termediate stop to the last stop. To remove the cap, turn it slowly the intermediate stop. After all pressure is relieved, push down and turn ad lift to remove.
	problems with the installation of this product, please feel free to call us at 1-800-779-8222. serve you when you call, please have the W/O#, SEQUENCE #, and the DATE from the labels ox.