

BUSHTEC

ADVENTURE

ONLY THE RUGGED SURVIVE

GOLD RANGE GAZEBO

INSTRUCTION MANUAL



WE'VE GOT YOU COVERED



Canvas and Tent +27(0)36 634 1902
www.canvasandtent.co.za

⚠ WARNING!

KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC

This tent is made with flame resistant fabric which meets CPAI-84 Specifications. **IT IS NOT FIREPROOF.** The fabric will burn if it is left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame resistant properties ineffective.

DO NOT OPERATE ANY DEVICE WHICH BURNS FUEL INSIDE THIS TENT

Combustion consumes oxygen and can produce dangerous levels of carbon monoxide which could lead to serious injury or death.



DO NOT place a stove, campfire, or other flame source in or near your tent. **DO NOT** cook, light, or refuel a stove or any other heat source inside your tent. Death by suffocation and/or serious burns are possible.

VENTILATION



Maintain adequate ventilation inside your tent at all times. Death by suffocation is possible.

LOCATION



Carefully consider the possibility of falling rocks or tree limbs, lightning strikes, flash floods, avalanches, strong winds and other objective hazards to reduce the risk of loss or injury to the tent or occupants.

ANCHOR



Anchor your tent properly at all times to reduce the risk of loss or injury to the tent or occupants

If you do not understand any part of this warning contact Canvas and Tent at +27(0)36 634 1902 or www.canvasandtent.co.za before using this tent

SPECIFICATIONS:

- ♦ Size 12 X 11 X 7 ft
- ♦ FR Ripstop Canvas 1 oz/sq.ft.
- ♦ Fully galvanized steel tube frame, 1 inch diameter
- ♦ Steel corners
- ♦ Canvas Flysheet
- ♦ Additional side and apex walls sold separately
- ♦ PVC carry bag included

CONTENTS:

Hardware :

	2X 3-Way top corner
	4X 3-Way side corner
	3X 4-Way centre corner
	6X Spring joined poles
	6X Plain pole
	6X Spring joined legs
	6X Stakes

Softs :

1X Large Canvas Gazebo Body

6X Ropes



WARNING




NO FIRE

This tent is flammable. Keep all flame and heat sources away from tent fabric. Never place a stove, campfire, or any other flame source in or near your tent. Death and serious burns are possible.


ASSEMBLY INSTRUCTIONS:

Step 1: Remove contents from the bags


Step 2: Assemble the top part of the gazebo frame as in illustration below by following the colour coded stickers

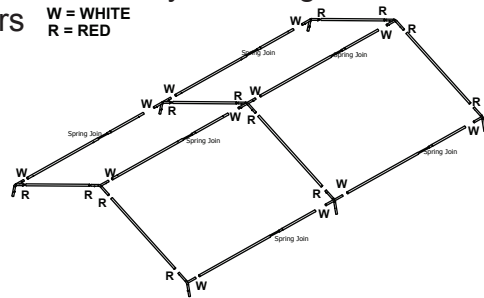


Step 3: After completing the top part of the frame lift the frame and insert the legs as in illustration below

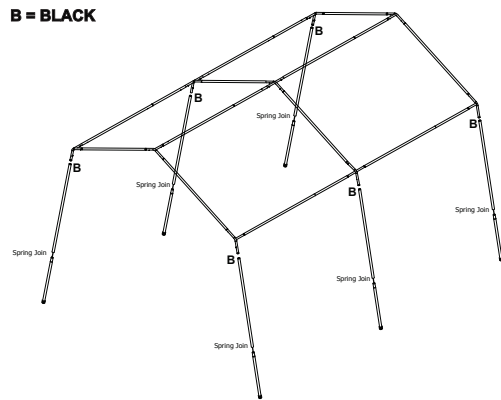


Step 4: The frame should be standing now. Ensure that all the poppers on the frame are secure.

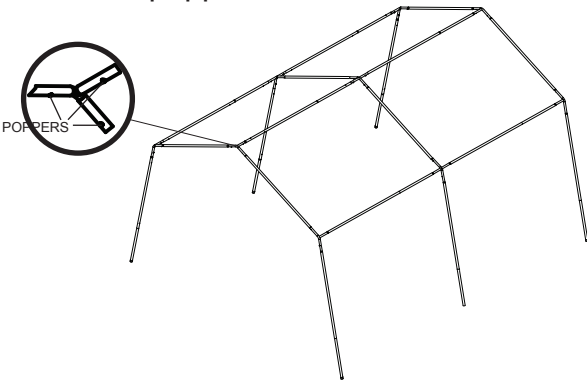

Step 5: The canvas gazebo cover can now be pulled over the frame. You will notice that the gazebo cover has 6 webbing straps with a hook at the end, insert these hooks into the hole located at the bottom part of the legs and tighten by tensioning the straps

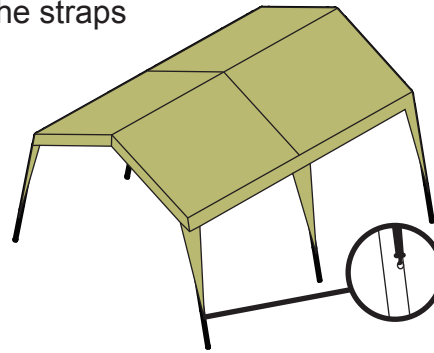


Step 6: To secure the gazebo hammer the stakes into the ground then and secure the guy ropes to the stakes

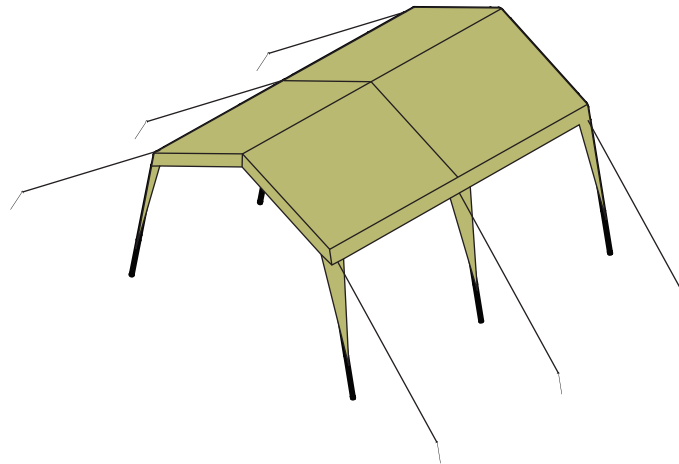


Step 2: Spread the roof out flat


Step 3: Fold the Gazebo in half at the centre stitch of the roof

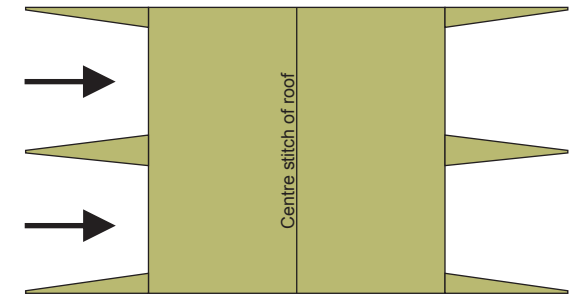

Step 4: Fold the legs of the cover inwards so that it lays on top of the roof

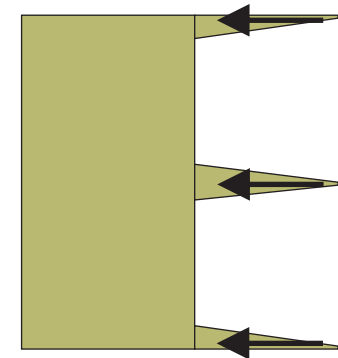

Step 5: Roll the cover as tight as possible brushing the tent as you're rolling ensuring no dirt is rolled up with the roof

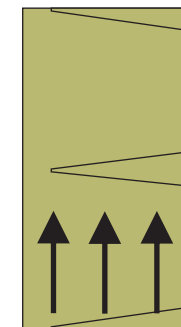

FOLDING INSTRUCTIONS:

Step 1: Ensure the cover is clean and dry before starting the folding process

PLEASE NOTE: When cleaning your tent use water and light detergent to remove any dirt from the canvas