

BUSHTEC

ADVENTURE

ONLY THE RUGGED SURVIVE

BOW TENT 2 WINDOW

INSTRUCTION MANUAL

CANVAS
AND TENT

WE'VE GOT YOU COVERED

100% SABS



100% SABS



Canvas and Tent +27(0)36 634 1902
www.canvasandtent.co.za

⚠ WARNING!

KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC

This tent is made with flame resistant fabric which meets CPAI-84 Specifications. **IT IS NOT FIREPROOF.** The fabric will burn if it is left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame resistant properties ineffective.

DO NOT OPERATE ANY DEVICE WHICH BURNS FUEL INSIDE THIS TENT

Combustion consumes oxygen and can produce dangerous levels of carbon monoxide which could lead to serious injury or death.



DO NOT place a stove, campfire, or other flame source in or near your tent. **DO NOT** cook, light, or refuel a stove or any other heat source inside your tent. Death by suffocation and/or serious burns are possible.

VENTILATION



Maintain adequate ventilation inside your tent at all times. Death by suffocation is possible.

LOCATION



Carefully consider the possibility of falling rocks or tree limbs, lightning strikes, flash floods, avalanches, strong winds and other objective hazards to reduce the risk of loss or injury to the tent or occupants.

ANCHOR



Anchor your tent properly at all times to reduce the risk of loss or injury to the tent or occupants

If you do not understand any part of this warning contact Canvas and Tent at +27(0)36 634 1902 or www.canvasandtent.co.za before using this tent



WARNING



NO FIRE

This tent is flammable. Keep all flame and heat sources away from tent fabric. Never place a stove, campfire, or any other flame source in or near your tent. Death and serious burns are possible.

SPECIFICATIONS:

- ◆ Size 10 X 10 X 7ft
- ◆ Tent suspended on a steel frame
- ◆ FR Ripstop Canvas Body
- ◆ Floor: 2 oz/sq.ft. PVC
- ◆ Canvas top cover with extended verandah
- ◆ 2 Large windows with mosquito gauze and inner and outer flaps
- ◆ Heavy duty zips
- ◆ Stakes and carry bag included

CONTENTS:

Hardware :

	1X Spring steel frame
	2X Upright poles (19x1600mm)
	1X Ridge pole
	16X Stakes

Softs :


1X Canvas tent body
1X Canopy and verandah
4X Guy ropes
4X Guy ropes attached to the tent

ASSEMBLY INSTRUCTIONS:

Step 1: Open the bag and remove all the contents.


Step 2: Spread the tent out flat with the back of the tent (blank panel) on top.

Step 3: Assemble the spring steel frame by joining the sections to form an "X" and place the frame on top of the tent ensuring the cross of the frame is placed at the tie tabs located at the centre (see illustration)

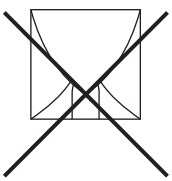


Step 4: Loop the tie tabs around the cross of the frame and secure.


Step 5: Locate the "s"-hooks attached to the two corners of the tent and clip these under the "o"-ring at the bottom of each leg of the frame.

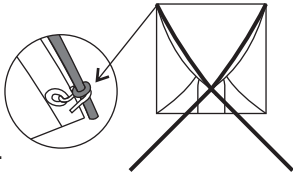

Step 6: Clip all the "s"-hooks located along the sides of the back panel onto the frame all the way to the centre.

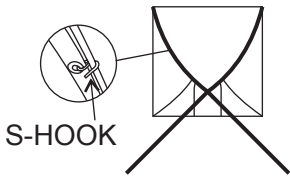


Step 7:

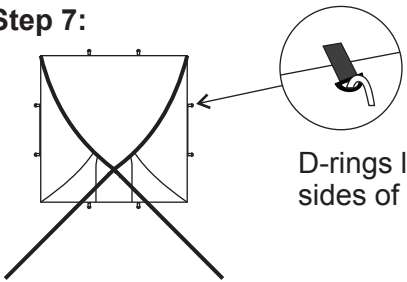

Secure the tent to the ground by hammering the stakes through the D-rings located on all four sides of the tent.


Step 8: With a person in each front corner push the legs to the tent body and repeat Step 5.

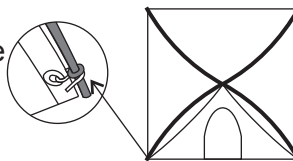


Step 9: Ensure the door on the front panel is zipped open.



Step 10: Stand in the open door and clip all the "s"-hooks located along the sides of the front panel onto the frame.

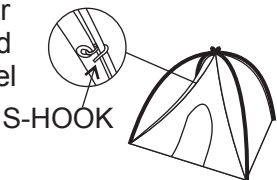

Step 11: Pull the flysheet (canopy and verandah) over the top of the bow tent. On each corner of the flysheet there is a webbing strap with a hook. Hook the webbing straps with the hook through the steel ring on the frame and tighten.

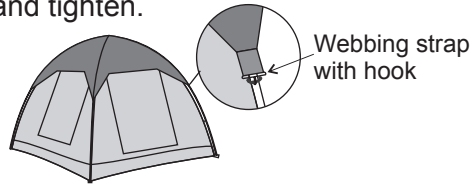

Step 12: Secure a guy rope to the frame at each rear corner of the tent to anchor it in case of strong winds.




Step 13: At the front section of the verandah, locate the canvas sleeve between the two corners and slide the ridge pole through the sleeve.



Step 14: Insert the upright pole through the holes of the ridge pole and through the eyelet on the verandah.


Step 15: Secure the verandah with the guy ropes, by sliding the loop of the guy rope over the pin of the uprights and staking it out at a 45° angle.

Step 16:

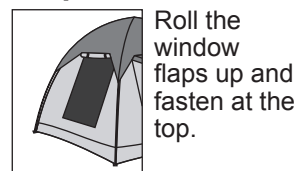

Roll the window flaps up and fasten at the top.

OR

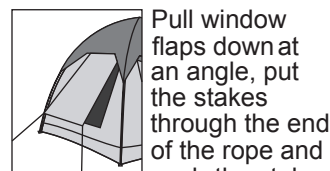


Pull window flaps down at an angle, put the stakes through the end of the rope and push the stakes into the ground.

FOLDING INSTRUCTIONS:


Step 1: Ensure the tent is clean and dry before starting the folding process.

PLEASE NOTE: When cleaning your tent use water and light detergent to remove any dirt from the canvas


Step 2: Once the canopy and verandah has been removed unclip all the "s"-hooks, loosen the tie tabs and fold the tent as per following steps:

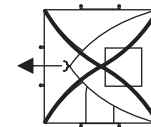


2.1: Pull the top point of the tent to the left so that the right panel (side with window) is completely open

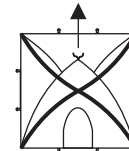

2.2: Pull the top point of the tent to the back so that the front panel (side with door) is completely open

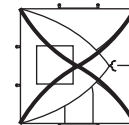


2.3: Pull the top point of the tent to the right so that the left panel (side with window) is completely open

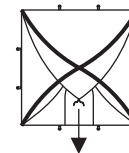


2.4: Pull the top point of the tent to the front so that the back panel (blank side) is completely open.

Step 3: Unclip the two front legs then the two back legs of the frame and remove all the stakes.

Step 4: The tent should now be laying flat. Now fold the first third of the tent (see folding line in the illustration)

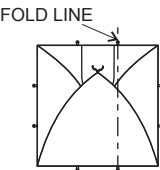

Step 5: Fold the second third (see folding line in the illustration)

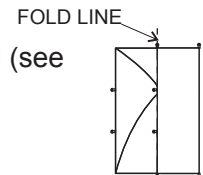

Step 6: Roll the tent as tight as possible brushing the tent as you're rolling ensuring no dirt is rolled up with the roof.

