




Quick Start Guide

PWW00-15682
PWW00-15683
PWW00-15684

Current Pet Fountain

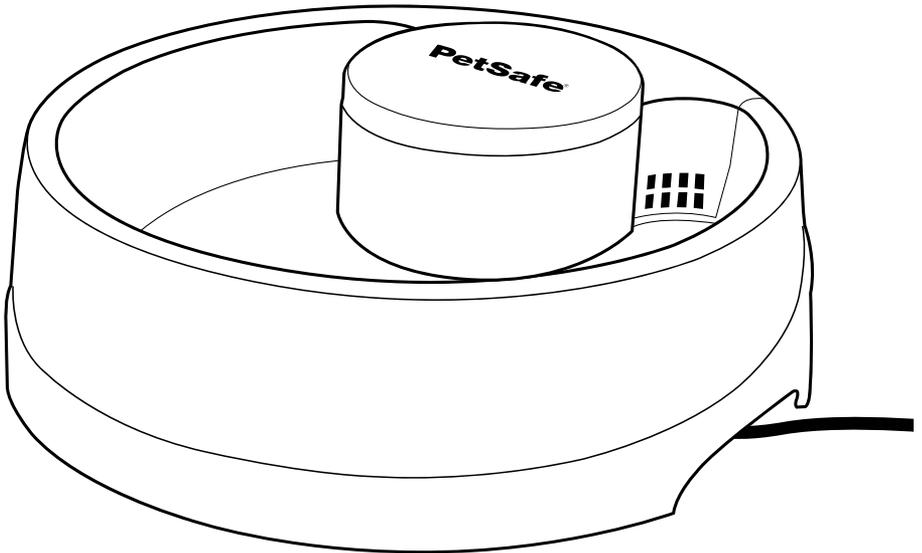

Please read this entire guide before beginning.

Welcome

You and your pet were made for each other. Our aim is to help you have the best companionship and the most memorable moments together. Your new pet fountain is designed to entice your pet to stay hydrated and healthy.

We know that safe pets make happy owners. Before getting started, please take a moment to read through the important safety information. If you have any questions, please don't hesitate to contact us.

Hereinafter Radio Systems Corporation and any other affiliate or Brand of Radio Systems Corporation may be referred to collectively as "We" or "Us".

IMPORTANT SAFETY INSTRUCTIONS

Explanation of Attention Words and Symbols used in this Product Manual



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

WARNING

WARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury.

CAUTION

CAUTION, used without the safety alert symbol, indicates a hazardous situation which, if not avoided, could result in harm to your pet.

NOTICE

NOTICE is used to address practices not related to personal injury.

WARNING

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock and/or injury to persons, including the following:

- Read all instructions before using this product.
- To reduce the risk of injury, close supervision is necessary when an appliance is used by or near children.
- To protect against electric shock, do not place electrical power cord or plug in water or other liquids.
- Do not operate any appliance if it has a damaged electrical power cord or plug, or if it is malfunctioning or has been damaged. Call the Customer Care Center immediately for further instructions.
- To reduce the risk of electric shock, do not place or store an appliance where it can fall or be pulled into a bathtub or sink.
- Always unplug any appliance when not in use, before putting on or taking off parts and before cleaning.
- Do not use an appliance for anything other than its intended use.
- If the plug of this device gets wet, turn off the electricity to that electrical outlet. Do not attempt to unplug.
- Examine this appliance after installation. Do not plug into electrical outlet if there is water on the electrical power cord or plug.
- Dispose of all packaging material properly. Some items may be packed in plastic bags. These bags could cause suffocation. Keep away from children and pets.

CAUTION

- Do not allow pets to chew on or swallow any parts. If you are concerned your pet may chew the power cord, purchase a cord conduit (a hard plastic protector) at any hardware store.
- The plastic pet fountain parts are BPA-FREE. However, some animals have been known to be sensitive to plastic food and water containers. If your animal shows signs of an allergic reaction to the plastic, please discontinue use until you have consulted with your veterinarian.


NOTICE

- The pet fountain is intended to run continuously (always plugged into an electrical outlet), as long as the water level is maintained and the pet fountain is cleaned regularly. Be sure to check the water level regularly to help prevent damage to the pump, as your pet will drink the water, and some may evaporate.
- Do not attempt repairs on the pump.
- Do not pull on the electrical power cord to remove the plug from the electrical outlet.
- To unplug, grasp the plug, not the electrical power cord.
- To avoid the possibility of the plug or electrical outlet getting wet, the electrical outlet should always be above the level of the pet fountain.
- If an extension cord is necessary, an extension cord with a proper rating should be used.
- The electrical use of this appliance is 2.0 watts.
- The use of attachments not recommended or sold by the manufacturer may cause an unsafe condition. Do not modify the appliance.
- Do not install or store appliance where it will be exposed to weather or temperatures below 40°F.
- Read and observe all important notices listed on the appliance and in the packaging.
- Never wash the filter with soapy water as the soap residue will seep into the filter and cannot be removed. Only rinse the filter with water.
- Use only PetSafe® Brand authorized replacement filters. If unauthorized filters are used, the warranty may be voided.
- Do not use outdoors. Do not run dry. For indoor household use only.

SAVE THESE INSTRUCTIONS

To get the most protection out of your warranty, please register your product within 30 days at www.petsafe.com. By registering and keeping your receipt, you will enjoy the product's full warranty and should you ever need to call the Customer Care Center, we will be able to help you faster. Most importantly, your valuable information will never be given or sold to anyone. Complete warranty information is available online at www.petsafe.com.

In the Box

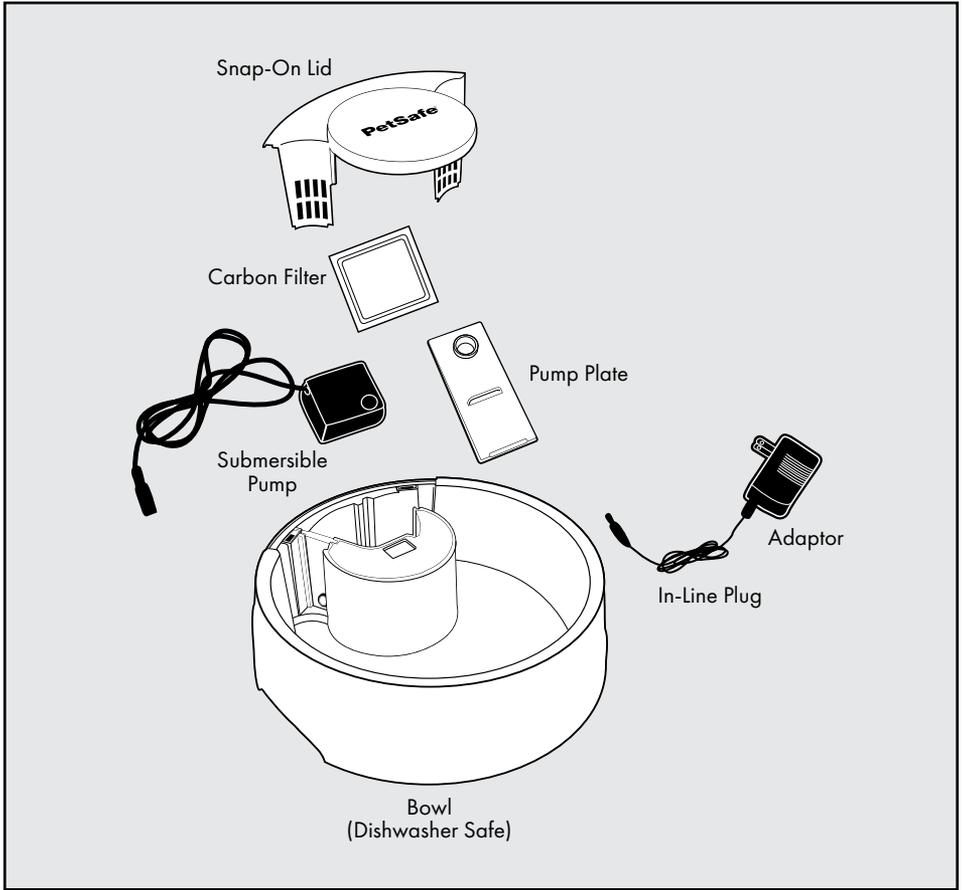

Size	Water Capacity
Small	40 oz
Medium	80 oz
Large	120 oz

Low-Voltage (12V) System


Assemble Pet Fountain

Note: It is important to rinse all of the pet fountain parts, excluding the adaptor, with warm water before operating the pet fountain.


1. Remove the snap-on lid by placing a finger underneath the tab on the back of the lid and lifting up.




2. Flip the bowl over and remove the pump cord from the cord notch and channel. It should now be loose for easy removal.

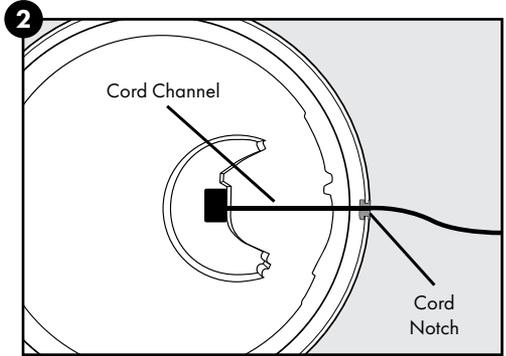


3. Remove the pump and the pump plate by lifting up on them.

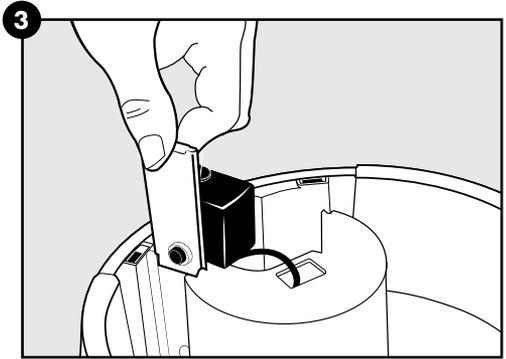


4. Next, pull the pump cord up through the opening until the pump is completely removed from the bowl piece. Remove the pump plate by simply pulling it away from the pump.

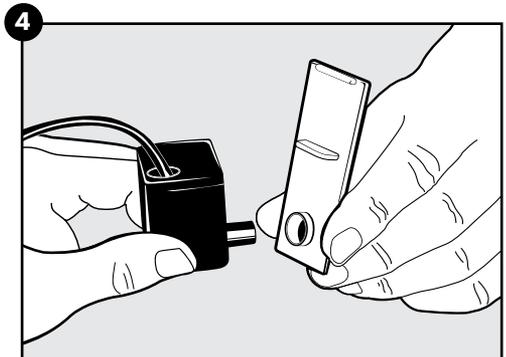


5. With your thumb and forefinger, gently squeeze on either side of the faceplate of the pump and pry it off. It may be necessary to insert a fingernail or other slim object into the seam of the faceplate.

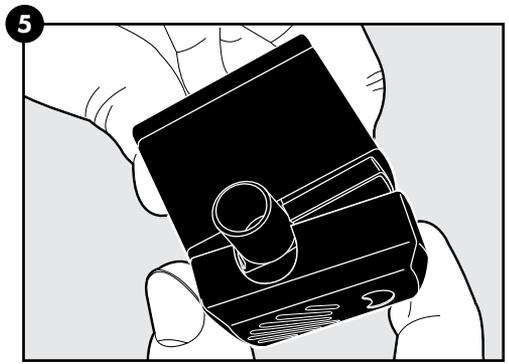

6. Next, remove the stator by placing your finger underneath the small lip, pulling it away from the pump.

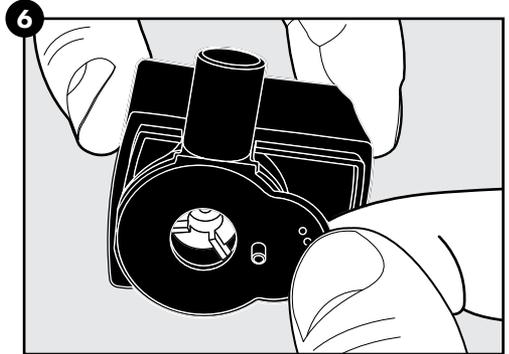

7. Use a fingernail to remove the impeller, which is held in place magnetically.

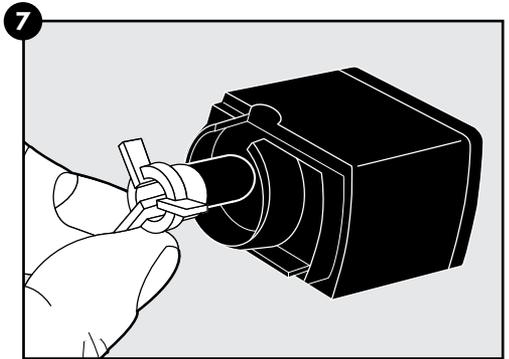


8. Rinse all of the pet fountain parts, including the pump, with **warm** water before operating the pet fountain. This will remove any dust or residue that remain in the system from the manufacturing process.

Next, rinse the charcoal filter thoroughly under **cold** water. This will remove any loose carbon dust, which is harmless. A small amount of carbon dust may also shed for the life of the filter. This is normal and not harmful to your pet.



Now that all the parts of the pet fountain have been rinsed, reassemble the pump and the pet fountain, leaving only the lid off.

9. Insert the charcoal filter. The filter will fit between the two triangular slots on the opposite side of the pump from the pump plate. Make sure it is pushed all the way down and that the black side of the charcoal filter is facing toward the pump.
Replace the charcoal filter every 2–4 weeks.

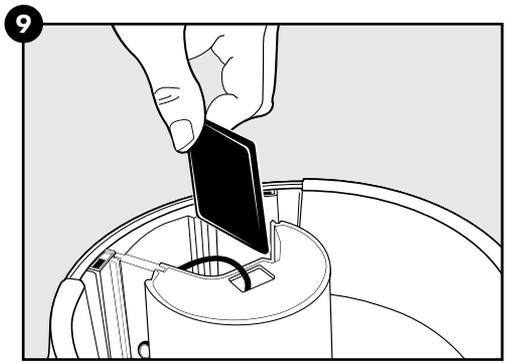

10. Attach the lid by pressing down until you hear it snap in place.


Place the pet fountain in a desired location.

Fill the pet fountain by pouring water directly into the bowl. This will prime the pump. Leave at least $\frac{1}{4}$ in. of space between the water level and the rim of the bowl.



11. Before you plug in the pet fountain, make sure the electrical power cord, the power adaptor and your hands are dry. Connect the in-line plug and make sure no silver is showing. Then plug the power adaptor into a standard electrical wall outlet.

Never let the water level fall below 2 in. from the base of the bowl or you might risk pump failure. Add water to the bowl as needed.

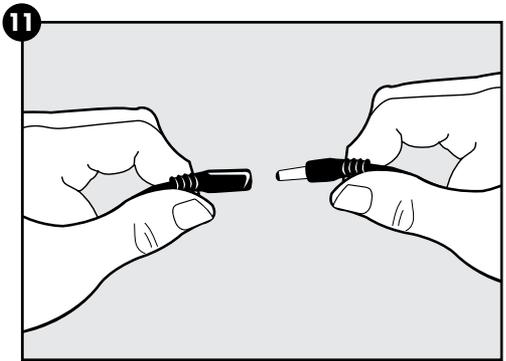

Pet Fountain Cleaning

NOTE: Replace the carbon filter every 2–4 weeks.

1. Unplug the pet fountain and disconnect the in-line plug.
2. Pick up the pet fountain by the bowl and take it to the sink.
3. Pour out the water and disassemble the pet fountain.
4. Discard the carbon filter. Refer to steps 5–8 on page 6 for cleaning your pump. Use a solution of 80% water and 20% white vinegar to remove hard water buildup.
5. Wash all other parts with warm water and soap or place in the top rack of the dishwasher.

NOTE: Do not place the adaptor or pump in the dishwasher.

Replacement Parts and Accessories

Replacement parts or accessories for your pet fountain can be purchased by visiting www.petsafe.com or by contacting our Customer Care Center at +1 (800) 732-2677. Filter subscriptions now available! Get pet fountain filters automatically and conveniently delivered right to your door when you need them. Free shipping and 5% discount included. Visit www.petsafe.com to sign up or call our Customer Care Center at +1 (800) 732-2677.

Part Descriptions	Replacement Part Number
Replacement Carbon Filter, 4 Pack	PAC00-15271
Replacement Pump	PAC00-13201
Pet Fountain Cleaning Kit	CKPH

Terms of Use and Limitation of Liability

1. Terms of Use

The use of this product is subject to your acceptance without modification of the terms, conditions and notices contained with this product. Use of this product implies acceptance of all such terms, conditions, and notices. If you do not wish to accept these terms, conditions, and notices, please return the product, unused, in its original packaging and at your own cost and risk to the relevant Customer Care location together with proof of purchase for a full refund.

2. Proper Use

Proper Use includes, without limitation, reviewing the entire Product Manual and any specific safety information statements. The specific temperament or size/weight of your pet may not be suitable for this product. If you are unsure whether this product is appropriate for your pet, please consult your veterinarian or certified trainer prior to use. For products used with pets where training is desired, Radio Systems Corporation recommends that these training products are not used if your pet is aggressive and accepts no liability for determining suitability in individual cases.

3. No Unlawful or Prohibited Use

This product is designed for use with pets only. This product is not intended to harm, injure or provoke. Using this product in a way that is not intended could result in violation of Federal, State or local laws.

4. Limitation of Liability

In no event shall Radio Systems Corporation or any of its associated companies be liable for (i) any direct, indirect, punitive, incidental, special or consequential damage and/or (ii) any loss or damages whatsoever arising out of or connected with the use or misuse of this product. The Purchaser assumes all risks and liability from the use of this product to the fullest extent permissible by law.

5. Modification of Terms and Conditions

Radio Systems Corporation reserves the right to change the terms, conditions and notices governing this product from time to time. If such changes have been notified to you prior to your use of this product, they shall be binding on you as if incorporated herein.

Warranty

One Year Non-Transferable Limited Warranty

This product has the benefit of a limited manufacturer's warranty. Complete details of the warranty applicable to this product and its terms can be found at www.petsafe.com.

Radio Systems Corporation
10427 PetSafe Way
Knoxville, TN 37932
+1 (800) 732-2677
petsafe.com
RE400-598/2

©2019 Radio Systems Corporation