

Feisty Ferret Home PARTS LIST

Instructions online at www.prevuepet.com


CUSTOMER SUPPORT

Please contact Prevue Pet Products:

PHONE 1 (312) 243-3624

ONLINE www.prevuepet.com

EMAIL customerservice@prevuepet.com

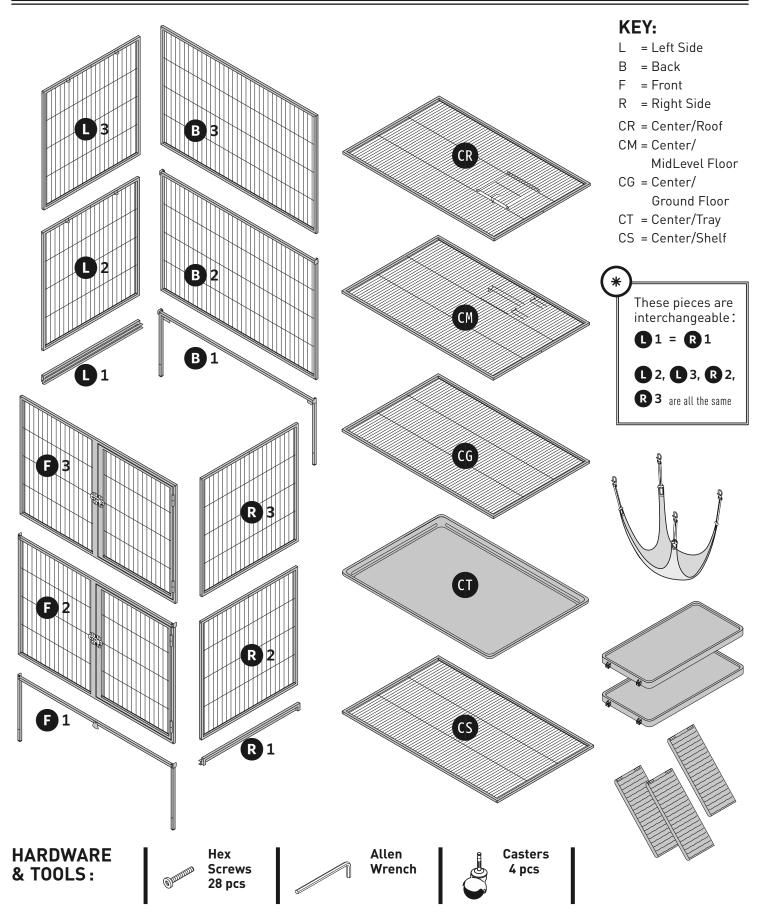





Feisty Ferret Home ASSEMBLY

Instructions online at www.prevuepet.com


CUSTOMER SUPPORT

Please contact Prevue Pet Products:

PHONE 1 (312) 243-3624 **ONLINE** www.prevuepet.com customerservice @ prevue pet.com **EMAIL**

NO ADDITIONAL TOOLS REQUIRED • For best results, follow the Assembly Steps in the order presented.

HOW TO TELL THE DIFFERENCE: Several parts and panels may look similar. Here's how to tell the difference:

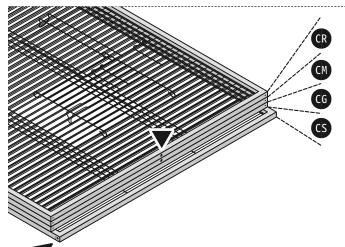

CENTER PANELS

The roof panel (CR) has an attached wire access door, and a center hole on the frame on both sides.

The midlevel floor panel (CM) has a detachable wire divider door, and a center hole on the frame on both

The ground floor panel (CG) has NO door and NO center hole on the sides.

The **shelf** (CS) is longer, and has threaded screw holes on the front and back corners of the frame.

FRONT & BACK PANELS: TOP vs BOTTOM

The bottom panels (F2 & B2) have brackets on the corners. Top panels (F3 & B3) do not.



KEY:

= Left Side

= Back

= Front

= Right Side

CR = Center/Roof

CM = Center/Mid-Level Floor

CG = Center/ Ground Floor

CT = Center / Tray


CS = Center/


Shelf

Orient the front legs (F1) with the windbell lock facing forward.

 
The extended portion of the tray channel rail (L1) also faces forward.


Attach together with a hex screw through the bracket bottom hole.

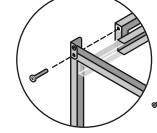

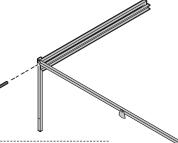





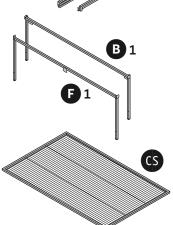

Orient the back legs (B1) with the tray channel backstop facing the back. Attach legs to sides with hex screws in the bracket bottom holes.

Attach the shelf (CS) with hex screws through the holes at the base of the legs.

