



Professional Tree Care Tools

Pruners - Fiberglass Poles - Pole Saws



⚠ DANGER



Hold pruner by base, not blade or hook.

Work with pole held to the side, NOT pointed into the body.

Wear head, eye and face protection that meets ANSI standards to avoid injury.

Wear sturdy, protective safety shoes or boots with non-skid soles.

Maintain secure footing and balance.

DO NOT USE NEAR ELECTRICAL LINES.

800.346.1956


WWW.JAMESONLLC.COM



JA Pruners with Adapter

Adapters Allow Quick and Easy Replacement of Pruner Head or Pole Saw

⚠ WARNING
HOLD PRUNER BY BASE - NOT BLADE OR HOOK

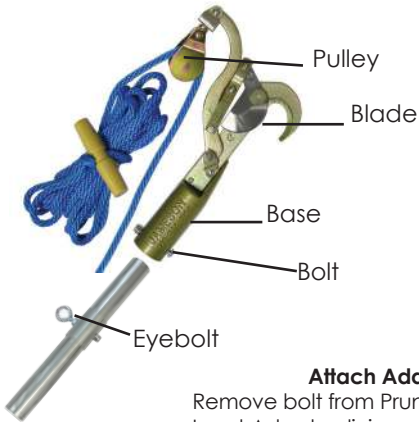

Attach Adapter

Remove bolt from Pruner.
Insert Adapter, lining up holes on Adapter with bolt holes on Pruner.
Insert bolt and tighten.



Extension Pole

Base Pole



- JA-14 Fixed Pulley Pruner
- JA-14S Swivel Pulley Pruner
- JA-34 Big Mouth Pruner

Thread rope end over pulley and tie to eyebolt on Adapter.



- JA-14DP Double Pulley Pruner
- JA-34DP Double Pulley Big Mouth Pruner

Thread rope over upper pulley, thread under lower pulley on adapter and tie end to upper pulley.



Care For Pruner
Wipe down after use to remove moisture and tree sap.
Lubricate to repel moisture and prevent rust.

PH Pruners with Adapter




Adapters Allow Quick and Easy Replacement of Pruner Head or Pole Saw


WARNING

HOLD PRUNER BY BASE - NOT BLADE OR HOOK

Attach Saw Blade to PH-11 Pruner

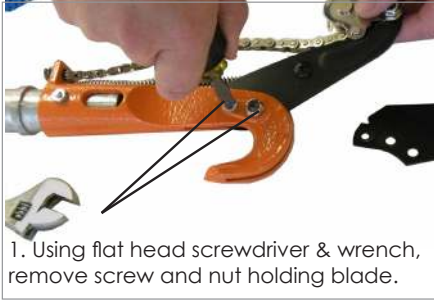

1. Using flat head screwdriver & wrench, remove screw and nut holding blade.

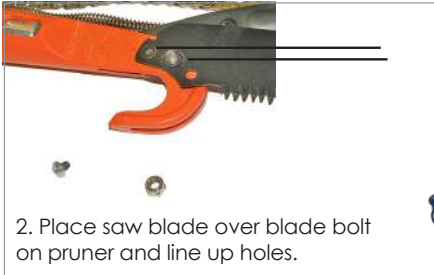

2. Place saw blade over blade bolt on pruner and line up holes.



3. Secure saw blade to pruner with screw and nut.

Attach Adapter


Bolt Pruner onto Adapter then snap Adapter into Jameson Pole.

Attach Rope

Tie rope end to chain pulley's o-ring.

Care For Pruner and Saw Blades


Wipe down after use to remove moisture and tree sap. Lubricate to repel moisture and prevent rust.

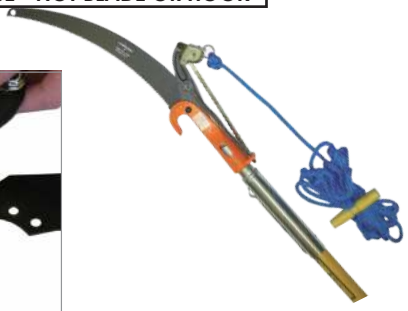

PH-11 Pruner accommodates Jameson's SB-1T Or SB-2 Teflon Saw Blade, offering the benefit of two tools in one.



PH-12 Pruner does not accommodate a saw blade.

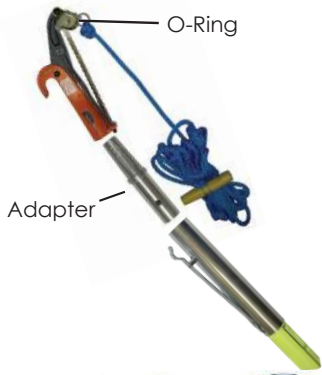



POLE SAWS

Adapters Allow Quick and Easy Replacement of Pruner Head or Pole Saw

Attach Saw Blade to Pole Saw Head



PS-3FP
With Mounting Pin

Wing Nut Bolt

Mounting Pin

Wing Nut

Lock Washer

Remove wing nut and lock washer. Place saw blade over bolt and mounting pin.



Replace lock washer and wing nut, tighten.



PS-3F / PS-3
With Carriage Bolt

Wing Nut Bolt

Carriage Bolt

Remove wing nut, lock washer and carriage bolt nut. Place saw blade over bolt and carriage bolt. Replace washer, wing nut and carriage bolt nut.



Snap pole saw into pole's ferrule.



PS-3FP
Center Blade Mount with Mounting Pin

Fits Saw Blades: SB-1C, SB-2, SB-1T, SB-13TE, SB-16TE, SB-16TE-W, SB-13TE-H



PS-3F
Center Blade Mount with Carriage Bolt

Fits Saw Blades: SB-1C, SB-13TE, SB-16TE, SB-16TE-W, SB-13TE-H




PS-3
Offset Blade Mount with Carriage Bolt

Fits: SB-2 and SB-4 Blades



Care For Saw Blades

Wipe down after use to remove moisture and tree sap. Lubricate to repel moisture and prevent rust.

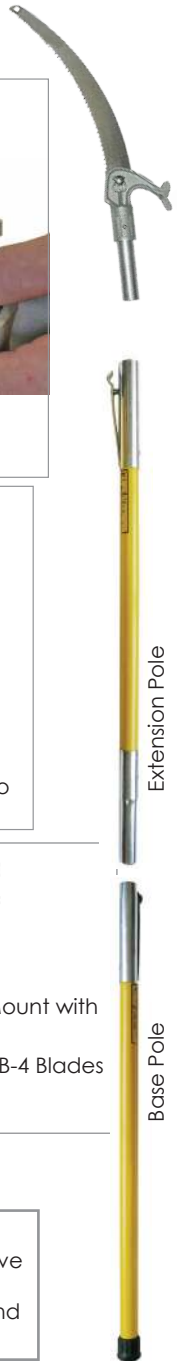


Fiberglass Poles With Leaf Spring Ferrules



Connecting Poles or Attaching Tool Heads

Lift leaf spring on pole's female ferrule to allow male pole ferrule or tool head adapter to be inserted. Align holes and drop leaf spring's button back into hole for a secure connection.

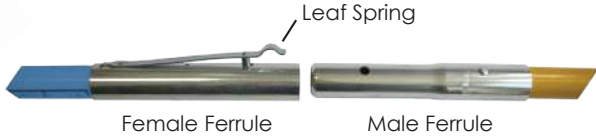

For Your Safety And Best Results, Jameson Recommends:

Use only Jameson attachments with Jameson poles.

Always start with a Jameson Base Pole.

Connect Extension Pole to Base Pole.

Connect Pole Saw Head or Pruner Head to Extension Pole.

For shorter lengths, use Base Pole only with Pole Saw Head or Pruner Head.





Double Lock™ Telescoping Poles

WARNING

Pole Must Be Locked Into Position Before Using



Fig.1



Scan to Watch
Double Lock™ Video



Fig.2

To Adjust Pole Length:

Unscrew threaded collar by turning until loose. (Fig. 1)

Unlock inner lock by twisting upper pole section counter-clockwise, approximately quarter-turn, while holding lower pole section in place. (Fig. 2)

Extend poles to desired length.

To Lock Into Position:

Twist upper pole section clockwise, approximately quarter-turn, until inner lock engages (there is an audible click).

Re-attach collar to outer lock, turning until completely secure.





Pruners & Pole Saws Permanent Mount - No Adapter

WARNING

HOLD PRUNER BY BASE - NOT BLADE OR HOOK

Attach Rope

JAPruners Permanently Mounted To Pole

Thread rope end over pulley and tie to eyebolt on Adapter.




Attach Saw Blade

Pole Saw Heads Permanently Mounted To Pole

Extension Pole

Base Pole

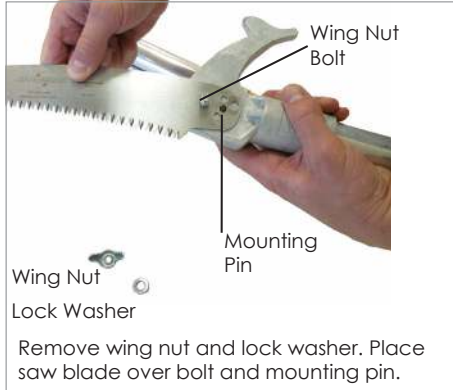

Remove wing nut and lock washer. Place saw blade over bolt and mounting pin.



Care For Pruner and Saw Blades

Wipe down after use to remove moisture and tree sap.
Lubricate to repel moisture and prevent rust.





Warranty

Jameson products carry a warranty against any defect in material and workmanship for a period of one year from date of shipment unless failure is due to misuse or improper application.

Jameson shall in no event be responsible or liable for modifications, alterations, misapplications or repairs made to its products by purchaser or others.

This warranty is limited to repair or replacement of the product and does not include reimbursement for shipping or other expenses incurred. Jameson disclaims any other express or implied warranty.



800.346.1956
WWW.JAMESONLLC.COM



TR_MO2