


Hey! Play! Electric Toy Violin

This electric toy violin plays music three different ways:

1. Touch keys on the back play actual songs when the ON/OFF button is turned to ON.
2. Touch-sensitive strings on the front play a note of a song (only the two middle strings will play a note), as the strings are touched, when the ON/OFF button is turned to ON.
3. Strings can be tightened and loosened by adjusting the knobs at the top of the instrument, so that as each string is touched, it will emit a different musical sound, when the ON/OFF button is turned to ON >

Touch Keys on Back

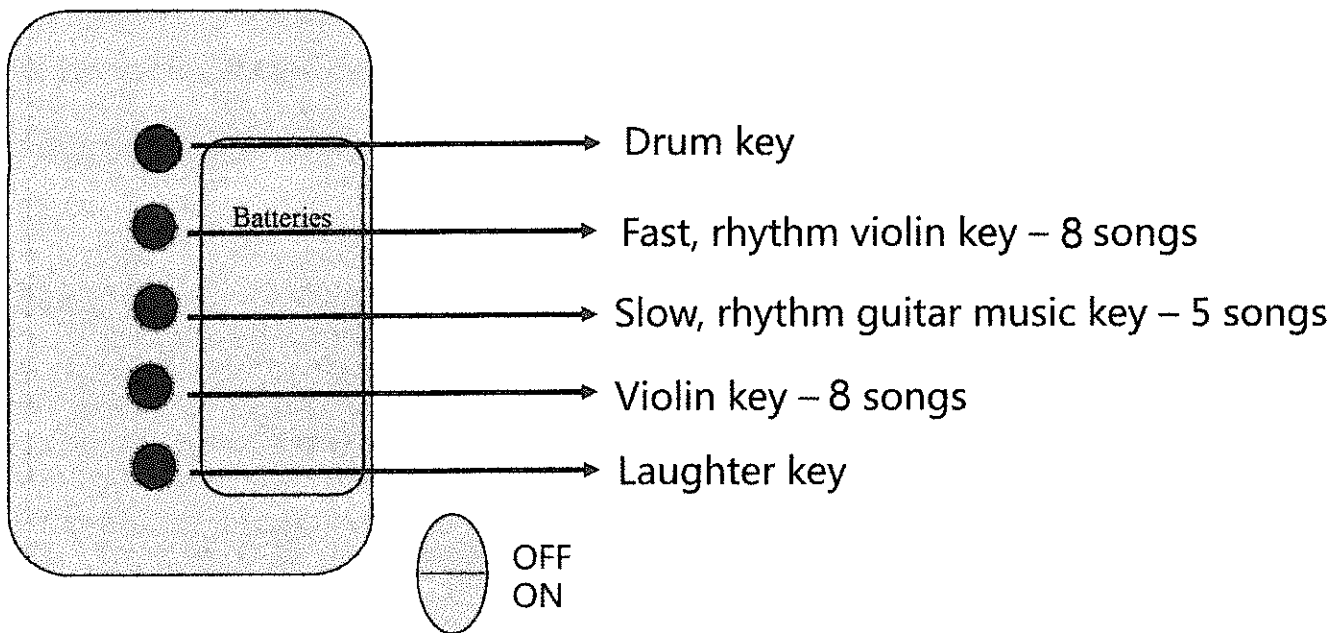

For buttons that play multiple songs, to advance to the next song in the button, press the key again, and a new song will start. To stop a song, turn the ON/OFF button to OFF. If you haven't touched a key that is playing for about 6 seconds, the song will stop playing. Touch the button to start the song again.

Not for children under 3 years old.