

WARNING: THIS TOY MUST BE ASSEMBLED BY AN ADULT.

LIST OF PARTS:

- | | |
|-------------------|-------|
| 1. TOYS | 1 PC |
| 2. WOODEN ROCKER | 1 PC |
| 3. WOODEN HANDLES | 2 PCS |
| 4. WASHER RINGS | 4 PCS |
| 5. WING NUTS | 4 PCS |

ASSEMBLY INSTRUCTIONS

STEP 1:

INSERT THE ATTACHED SCREWS UNDER THE TOYS LEGS INTO THE HOLES ON THE WOODEN ROCKER.

STEP 2:

PLACE THE WASHER RINGS AND WING NUTS ON THE SCREWS AND TIGHTEN BY HAND.

STEP 3:

SCREW IN THE TWO HANDLES INTO THE HOLES LOCATED ON THE NECK OF THE TOYS.

FOR EXAMPLE:

