



SKU# 1304652



Oscillating Ceramic Heater with Thermostat

Features :

- Digital thermostat with ambient temperature setting
- Auto-off timer
- Four settings: fan, low heat (750w), high heat (1500w), adjustable thermostat
- Stable base with safety tip-over switch
- Safety overheat cut-off protection
- Power indicator light, backlit LCD screen
- 90° oscillation
- Remote control
- Modern stylish two-tone design
- 120V A.C., 60Hz, 12.5A, 5120 BTU



Save These Instructions

INTENDED USE:

This product is intended for indoor residential and office use only, not for industrial or other commercial application. Use only with electrical wiring that is in good working order and that meets applicable codes and ordinances. This heater must be plugged in to a 120V AC, 15 Amp (or larger) circuit. Do not plug anything additional into the same circuit. If you have any questions whether your wiring is adequate, consult a qualified electrician. Risk of fire, overheating, malfunction, property damage, injury or even death may result if not adhered to.

Use your heater-fan only with a working smoke detector located in the vicinity of your heater/fan.

While using your heater/fan, you should follow the IMPORTANT INSTRUCTIONS listed below. As part of those instructions, we have used the word "WARNING" to indicate the level of hazard: "WARNING" indicates a hazard which, if not avoided, could result in injury or death.

IMPORTANT INSTRUCTIONS:

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:

- Read all the instructions before using this heater/fan.
- This heater/fan is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. Use provided handle when moving this heater. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes and curtains at least 3 feet (0.9 meters) from the front of the heater-fan and keep them away from the sides and rear.
- Do not use heater unattended. Use of extreme caution is necessary when any heater is used by or near children, invalids, disabled persons or pets.
- Do not operate the heater with a damaged power cord or after the heater malfunctions, has been dropped or damaged in any manner. Return heater to authorized service facility for examination, electrical or mechanical adjustment or repair.
- Do not use heater outdoors.
- Use your heater only in dry environments. This heater is not intended for use in a bathroom, laundry area, or similar locations, or near sinks, washing machines, swimming pools or other sources of water. Never locate heater where it may fall into a bathtub or other water container. Do not use in damp environments such as flooded basements.
- Do not place the heater on a small, unlevel, uneven or any surface which might allow heater to tip or fall.
- For proper operation, heater should be placed on a smooth, non-combustible surface. Do not place on rugs, carpet, vinyl flooring or other plastic surfaces. Not for use outdoors or in wet areas.

- This heater is not designed as a primary heat source.
- Always plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or relocatable power tap (outlet/power strip). Always unplug heater when not in use.
- Do not run power cord under carpeting. Do not cover cord with throw rugs, runners or similar coverings. Arrange cord away from traffic area where it will not be tripped over.
- To disconnect heater, turn controls off then remove plug from outlet.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire or damage the heater.
- To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces like a bed, where openings may become blocked.
- A heater has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint or flammable liquids are used or stored.
- Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock or injury to persons or property.

SAVE THESE INSTRUCTIONS: WARNING: SHOCK HAZARD

Use your heater only in dry environments. This heater is not intended for use in a bathroom, laundry area, or similar locations, or near sinks, washing machines, swimming pools other sources of water. Never locate heater where it may fall into a bathtub or other water container. Do not use heater outdoors. Do not use in damp environments such as flooded basements.

WARNING: HOT SURFACES

Do not touch body of heater when in use. This heater is hot when in use, to avoid burns, do not let bare skin touch hot surfaces. If provided, use handles when moving this heater.

WARNING: FIRE HAZARD

Heater has hot and arcing or sparking parts inside. Do not use near combustible materials or flammable gases or sources of heat. DO NOT USE in areas where gasoline, paint or flammable materials are used or stored. Keep combustible materials such as furniture, pillows, bedding, papers, clothes and curtains at least 3 feet (0.9 m) from the front of the heater and keep them away from the sides and rear. To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked. Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock, fire, or damage the heater.

Black border shows page size and should not print

WARNING: ELECTRICAL SHOCK HAZARD

Do not use with damaged cord or plug. Use with adequate electrical system that is up to code.

The supply cord has a polarized plug. As a safety feature this plug will fit in a polarized outlet only one way. To prevent electric shock, match wide blade of plug to wide slot, fully insert plug. If the plug does not fit contact a qualified electrician.

Do not operate any heater with a damaged cord or plug or after heater malfunctions, has been dropped or damaged in any manner. Do not operate heater with a broken heating element or ceramic cone or any visual imperfections. For repairs covered under warranty, see warranty statement. For all other repairs contact Tractor Supply Co. by telephone for information and assistance.

PET OWNERS NOTE:

The health of birds and some small pets are extremely sensitive to the fumes given off during the initial use of many appliances. Although these fumes are not harmful to humans, it is recommended that this heater not be used around birds and small pets during its initial use until the manufacturing corrosion coatings burn off.

USAGE:

HEATER OPERATION:

The heater/fan may be operated by the controls located on the heater/fan (see Fig. 1) or by your remote control (see Fig. 2).

1. Carefully remove the heater/fan from the plastic bag and the carton.
2. Place the heater/fan on a firm level surface.
3. Plug the cord into a 120V electrical outlet. A beep sound and a red light will come on indicating that there is power to the unit. The heater/fan is ready to use. The red light will remain on until the heater/fan is unplugged from the electrical outlet.
4. Turn the heater/fan ON by pressing the POWER button on the control panel (Fig. 1). The unit will display the current room temperature, automatically go into FAN MODE and blow cool air.
5. Press the MODE' button once to enter the LOW HEAT MODE.
6. Press the MODE' button a second time to enter the HIGH HEAT MODE.
7. Press the MODE' button a third time to enter ADJUSTABLE HEAT MODE. In this mode the desired room temperature can be set using the (+)TEMP and (-)TEMP buttons. (See Fig. 1)
8. To turn the heater/fan off, press the POWER button.

NOTE: When the unit is powered off on the control panel, the fan may continue to run for a while to cool off the ceramic elements and dispense any retained heat. The unit will shut off automatically.

OSCILLATING FUNCTION:

The Oscillating function will work in any mode.

1. Press the OSC.' button to oscillate the heater/fan from left to right at a 90° angle. The indicator symbol "O" will display on the LCD screen.
2. To turn the oscillation off, press the OSC.' button again.



Fig. 1

TIMER FUNCTION:

The Timer function will work in any mode. The Timer function allows you to set the length of operation from 1 to 8 hours. Each time the 'TIMER' button is pressed the length of operation will increase 1 hour. The duration time that is set for will be displayed on the LCD screen in hour increments TO TURN THE TIMER FUNCTION OFF: Press the 'TIMER' button continuously until the LCD display has a blank screen.

NOTE: The timer function is not an excuse to leave the heater/fan unattended.

THERMOSTAT INSTRUCTIONS:

1. Press the MODE button three times to enter ADJUSTABLE HEAT MODE.
2. To set the desired room temperature, press the '(+)TEMP' or '(-)TEMP' buttons until optimal temperature is reached.
3. When the room temperature reaches 3 degrees above the set temperature, the heater/fan automatically shuts off.
4. When the room temperature drops 1 degree below the set temperature, the heater/fan automatically turns on.

NOTE: It is normal for the heater/fan unit to cycle ON and OFF as it maintains the set temperature.

SAFETY FEATURES:

1. A thermal overload protector is built in to prevent overheating.
2. When an overheat temperature is reached, the Heater/fan will automatically shut off. It will only resume operation when the user resets the unit by unplugging the heater for 10 minutes to allow it to cool. Plug the heater in and resume use.

REMOTE CONTROL:

1. Install two "AAA" batteries into remote control shown in Fig. 2.

Black border shows page size and should not print

2. All functions performed with remote control work identically to the manual controls.
3. Remote control should be aimed at the digital display to be received by the heater/fan.

NOTE: Batteries not included.



Fig. 2

MAINTENANCE:

WARNING: ALWAYS UNPLUG THE CORD BEFORE MOVING OR SERVING. DO NOT IMMERSE HEATER/FAN IN WATER!

CLEANING: IMPORTANT! DO NOT IMMERSE HEATER/FAN IN WATER! Clean the Heater/fan grill with the vacuum brush attachment on your vacuum cleaner. This will remove lint and dirt from inside the heater/fan. **DO NOT ATTEMPT TO TAKE APART THE HEATER/FAN. DO NOT REMOVE THE HEATER/FAN GRILL.** Clean the body of the Heater/fan with a soft cloth.

CAUTION: Do not use gasoline, benzene, paint thinner, harsh cleaners, etc. as they will damage the heater/fan. **NEVER USE ALCOHOL OR SOLVENTS.**

STORAGE: Store the heater/fan with these instructions in the original carton in a cool, dry place.

ENVIRONMENT:

Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities. Contact your local government for information regarding the collection systems available.

If electrical appliances are disposed on landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being. When replacing old appliances with new ones, the retailer may be legally obligated to take back your old appliance for disposal free of charge.

WARNING:

Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries. Do not dispose of batteries in fire. Batteries may explode or leak.

TROUBLESHOOTING:

PROBLEM	PROBABLE CAUSE	SOLUTION
Heater will not power on.	Heater is not plugged into a 120V polarized-outlet/receptacle.	Ensure unit is in OFF position. Plug in unit and attempt to turn on again.
	Breaker/fuse has been tripped	Please check your electrical box to confirm the breaker has not been blown. This may occur if the unit is sharing a receptacle with another high power consuming appliance. Ensure unit is in OFF position. Plug in unit and attempt to turn on again. Attempt to plug unit into another independent output in the house.
The power-indicator light is illuminated, but no heat disperses from the unit.	Room temperature has been warmed up to thermostat setting.	To resume heating, adjust thermostat to a higher setting.
	The fan only function is on.	At this setting, the unit will circulate the air but produce no heat.
The heater is creating a burning smell.	A drop of oil fell on the heating coil during the manufacturing process. It will quickly evaporate and should not occur again.	Ensure room in which heater is situated is well ventilated.
	Check and ensure there are no combustible materials within 3' / 1 m of the heater.	Remove the combustible materials preventing air intake into the heater.

LIMITED WARRANTY

This unit is guaranteed to the original retail purchaser against defects in quality or workmanship for a period of one year from the date of original purchase. If this unit fails because of a manufacturing defect within 30 days of purchase, return the unit, with your receipt to the retailer. After 30 days, but within the warranty period, if the unit was purchased within the continental United States, call 1-888-376-9601. If the unit was purchased outside the continental United States, return the unit to the place of purchase. This warranty does not cover damage caused by misuse, abuse, over heating or alteration. Repairs made by anyone other than Tractor Supply Co. are not covered in this warranty. Tractor Supply Co. will not be held liable for any losses due to neglectful operation. All implied warranties, including the warranties of merchantability and of fitness of purpose, if applicable, are hereby limited

Black border shows
page size and should
not print

in duration to the period of one year from the date of original retail purchase. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations maynot apply to you. Incidental or consequential damages arising from a breach of either expressed or implied warranties are hereby disclaimed and excluded. Some states do not allow the exclusion of limitation of incidental or consequential damages, so this limitation or exclusion may not apply to you. Upon the expiration of this warranty all such liability will terminate. No other warranties are expressed or implied.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. No informal dispute settlement mechanisms are available. This limited warranty is given in lieu of all other warranties.

Distributed by:
TRACTOR SUPPLY COMPANY
5401 VIRGINIA WAY
BRENTWOOD, TN 37027
For customer support,
call: 1-888-376-9601
www.TractorSupply.com
MADE IN CHINA

Black border shows
page size and should
not print

11.0"
280mm

8.50"
216mm