



A: Air inlet

B: Trigger/ Deflation valve

C: Pressure gage

D: Inflating rod



1. By aligning the inflatable rod with the valve core of the tire, it can measure the pressure for the tire. And the tire can be deflated when the trigger is pressed half.



2. After connecting the air compressor, it can inflate the tire when the trigger is pressed to the end.