



※ SPECIFICATIONS COLORS AND CONTENTS MAY VARY FROM ILLUSTRATION

**BATTERY WARNING:**

1. Non-rechargeable batteries are not to be recharged.
2. Rechargeable batteries are to be removed from the toy before being charged.
3. Rechargeable batteries are only to be charged under adult supervision.
4. Different types of batteries or new and used batteries are not to be mixed.
5. Only batteries of the same or equivalent type as recommended are to be used.
6. Batteries are to be inserted with the correct polarity.
7. Exhausted batteries are to be removed from the toy.
8. The supply terminals are not to be short-circuited.

● WITH RECHARGEABLE BATTERIES AND CHARGER

**CHARGE AND INSTALLATION OF RECHARGEABLE BATTERIES:**

1. Open the lid and take out rechargeable batteries, Charge the batteries as shown in picture.
2. Install charged batteries into car as shown in picture, Then put the lid back on.

Open the battery cover with a screw-driver

Uses 3 "AA"Size Batteries.(not included)

# Hey! Play 8 Function Remote Control 680° Revolving Excavator



680° Revolution  
Forward & Backward  
Left & Right  
Up & Down  
Sounds

**3+** Remote Control  
AGES