


## User Manual for Digital Portable Safe

Read all instructions before using this safe.


### WARNING

- For security purposes, register pin code as soon as possible and test registered pin code before closing the safe door.
- Safe can be opened by either, pin code or emergency keys.
- Always hold the door with one hand when safe is open.
- Ensure override key remains in lock position at all times.
- Safe will NOT be locked even when the knob is in the "Close" position IF the override key is in the "Unlock" position.
- Avoid leaving safe door open and unattended; it will allow unauthorized individuals to reprogram the safe, gaining full access to the safe and the contents.
- Test the Emergency Keys and store them in a secure place, NOT inside of the safe.
- To maximize the security and performance of the safe, test registered pin code every 6 months.

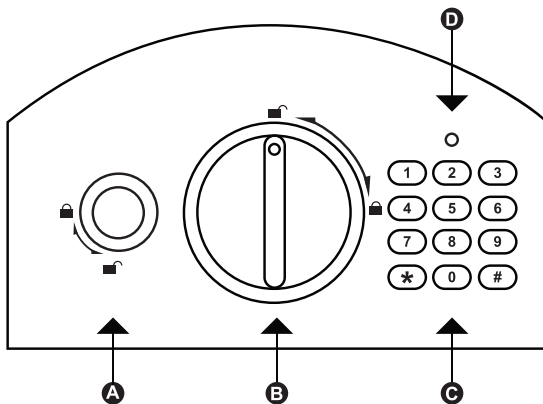

### Parts of the Control Panel

- A. Override Key and Cover
- B. Knob
- C. Key Pad
- D. Indicator

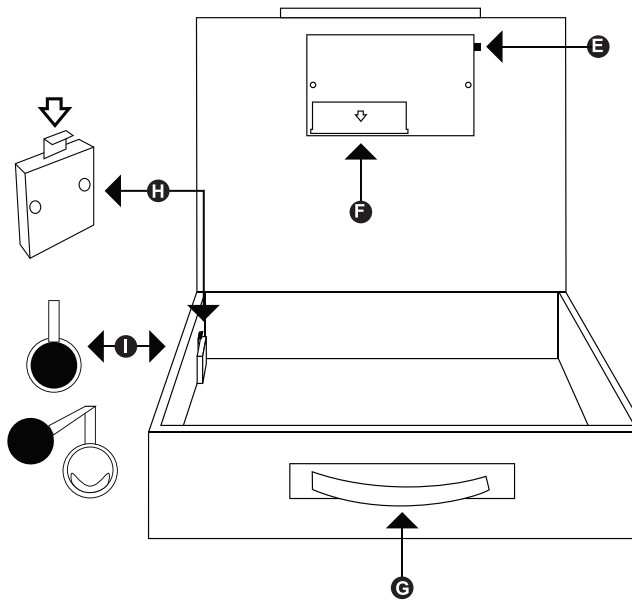

### Parts of the Safe

- E. Initialization Button
- F. Battery Compartment
- G. Carrying Handle
- H. Internal Cable Lock
- I. External Cable Slot

### Set Up/Override Key

1. Remove the small plastic black cover to expose the override key
2. Insert the key and turn key to the left to unlock
3. Turn knob to the left to unlock safe
4. Turn key to the right to lock, remove key, replace black cover
5. Keep override keys outside of the safe, in a secure place
6. Lift safe door to open

### Batteries

1. Remove battery cover on the inside of the safe door by pushing down on the cover in the direction of the arrow to open
2. Insert 4 AA batteries into the battery compartment pay attention to the polarity of the batteries
3. Replace compartment cover

### Low Battery

A steady red light on the indicator means batteries are low

To replace batteries open safe either by pin code or override key and repeat steps 1-4 above. Replace old batteries with new batteries

Note safe retains last pin code saved

### Registering Pin Code

Note: Safe retains only one 3-8 digit pin code

1. Press and hold down the initialization red button on the inside of the door on the right side of the battery compartment. You will hear 2 beeps. Release the initialization button
2. Close safe door and make sure override lock is in lock position. Enter your 3-8 digit pin and press the # to confirm. Enter your pin number again and press # key again.
3. A green light will indicate a successful save of the pin code. Red light indicates an unsuccessful registration. Follow steps in Set Up/Override Key Procedures to open safe door and repeat steps 1 and 2 in this section.

4. Turn knob to the left and lift safe door to open

Note Be sure to write down this code immediately and store in a safe place

### Changing Numeric Pin Code

To change pin code repeat steps above

### Opening and Closing Safe Door

1. To open safe, input your pin then press #. Turn the knob to the left and lift the safe door

Note: After entering pin, you have 5 seconds to turn the knob before the mechanism re-locks automatically

2. To close safe, close door and turn knob to the right to lock

### Lockout

If an incorrect PIN is entered, a red light will flash and the safe will not open. Entering an incorrect pin 3 times will freeze the system for 20 seconds

### Installing and Removing the Steel Cable

Included with the safe is a steel cable. That be attached to any stationary item for increased security

On the inside of the safe is the internal cable lock. Adjacent to the lock is the external cable slot with cover (See item H and I). Gently lift cover of the external cable slot to expose slot

### Installing the Cable

1. Push and hold down internal cable lock lever
2. Insert metal end of the cable into the cable slot and release the internal cable lock lever
3. Slightly tug on the cable to ensure that the cable is securely attached to the safe. If cable slips out, repeat steps 1-3

### Removing the Cable

1. Push and hold down internal cable lock lever
2. Gently tug on the steel cable to free it from the slot
3. Release the internal cable lock lever
4. Store cable in a safe place



## User Manual for Digital Portable Safe

### Care and Maintenance

Please keep this manual and override keys in a safe place (NOT INSIDE OF THE SAFE)

Properly secure the safe to prevent it from falling and causing damage or injury

For security purposes, register pin code as soon as possible and test registered pin code before closing the safe door.

DO NOT use any liquid while cleaning the keypad, if necessary use a damp cloth to clean the keypad

DO NOT place any liquid on top of the safe; a spill on the keypad may render the safe inoperable

DO NOT over stuff the contents of the safe or you can damage the motor mechanism or the contents

DO NOT disassemble the product. For all repairs and maintenance, contact authorized service center or distributor

Note: All information, feature, and specification displayed herein are based on the data available at the time of publishing, thus they are subject to change without notice. All product pictures displayed herein are for illustration purposes only. The actual product may vary due to different circumstances.



### 1 YEAR LIMITED WARRANTY

#### SAFE/LOCK BOX

BARSKA warrants this new safe/lock box to be free of defects in material and/ or workmanship under normal use for a period of twelve (12) months from the date product is purchased. This limited warranty is delimited to repair or replacement only. This warranty does not cover damage caused by improper installation or maintenance. BARSKA disclaims all liability for incidental or consequential damages resulting from misuse, abuse, accident (such as dropping), fire, flood, service or repairs other than those performed by BARSKA, acts of nature, or arising out of any breach of this warranty. Altering the product under any circumstances will automatically void the warranty.

For service under this limited warranty, please have available the proof of purchase and the purchase date and location as well as a detailed description of the problem. This warranty is not transferable and only applies to the original purchaser with a proof of purchase from BARSKA or from an authorized dealer. This warranty applies only to products purchased within the United States, excluding Alaska, the Hawaiian Islands and all U.S. territories in the Caribbean and the Pacific.

BARSKA will examine and go through troubleshooting procedures, product repair or replacement of defective part(s) or units with new part(s) or provide a new unit, if necessary, during the warranty period. Reasonable shipping/handling charges may apply and are based on Barska sole discretion. Purchaser shall be required to prepay Shipping/handling charges with a check or money order to BARSKA at time product is returned. The Return Merchandise Authorization Number (RMA#) and shipping/handling charge MUST be obtained from BARSKA in advance of return. BARSKA shall not be liable for damages or loss occurring during shipping. Please visit via [www.barska.com](http://www.barska.com) or call 909.445.8168 to obtain the RMA#, Shipping/handling amount, and for more information.

BARSKA reserves the right to modify or discontinue, without prior notice to the purchaser, any model or style of the product. BARSKA will determine, at its sole discretion, whether a product will be repaired or replaced. BARSKA reserves the right to discontinue or change any feature of its products at any time. If an exact replacement or product is not available, BARSKA reserves the right to provide a part or product that matches as closely as possible.

#### LIMITATION OF REMEDIES

BARSKA disclaims any warranties, express or implied, whether of merchantability or fitness for a particular use, except as expressly set forth herein. The sole obligation of BARSKA under this limited warranty shall be to repair or replace the covered product, in accordance with the terms set forth herein. BARSKA expressly disclaims any lost profits, general, special, indirect or consequential damages which may result from breach of any warranty, or arising out of the use or inability to use any BARSKA product. Any warranties which are implied and which cannot be disclaimed shall be limited in duration to a term of one year from the date of original retail purchase.

Some states do not allow the exclusion or limitation of incidental or consequential damages or limitation on how long an implied warranty lasts, so the above limitations and exclusions may not apply to you.

BARSKA  
855 Towne Center Drive, Pomona, CA 91767