

Owner's Manual



INTRODUCTION

Your Maxx Air fan comes with a motor controller that has three (3) channels for receiving commands from different remotes. This allows the fan to function independently or as a group with a single operational command.

The remote operates using radio frequency (RF), allowing command signals to be transmitted without line of sight.

The 3 available channels, allow each remote to be paired for a different control methodology.

For example:

Channel 1 (Factory Default) - Individual control: fan to be controlled

independently.

Channel 2 (Group Control) - Fan to be controlled as a group/set number

of fans within a larger group.

Channel 3 (Universal Control) - All fans within an area can be controlled with

a master remote.

REMOTE PAIRING PROCEDURE

Please note: Simply pressing 'OFF' on the handheld remote will NOT allow the fan's paring process to be activated. The fan's actual mains power has to be disconnected.

To pair a new remote or motor with an existing motor or remote:

- Step 1: On the remote, press the Timer button until '0H' shows on the screen.
- Step 2: Turn off the fan's AC (mains) power, allowing it to come to a complete stop.
- Step 3: Wait for approximately 30 seconds.
- Step 4: Turn on the fan's AC power. The fan's motor controller will give a single 'beep'. Immediately press and hold the Timer button on the remote control.

To pair the remote for Group (Channel 2) or Universal (Channel 3) control:

- Step 1: On the remote, press the Timer button until the desired setting shows on the screen. For Group (Channel 2) control the remote needs to show '1H'. For Universal (Channel 3) control the remote needs to show '2H'.
- Step 2: Turn off the fan's AC (mains) power, allowing it to come to a complete stop.
- Step 3: Wait for approximately 30 seconds.
- Step 4: Turn on the fan's AC power. The fan's motor controller will give a single 'beep'. Immediately press and hold the Timer button on the remote control.

CHANNEL RESET PROCEDURE

The remote has to have already been paired with the fan for this to work.

- Step 1: Turn off the fan's AC (mains) power, allowing it to come to a complete stop.
- Step 2: Wait for approximately 30 seconds.
- Step 3: Turn on the fan's AC power. The fan's motor controller will give a single 'beep'. Immediately press and hold the 'OFF' button on the remote control. Once the long beep is audible, Channels 2 & 3 will be unpaired. This remote will now be paired with the fan on Channel 1.