


# Installing your blower kit on your Mr. Heater Vent Free Dual Fuel Heater

Step 1:  
Remove the 4 side screws with a phillips head screwdriver to remove the front of the heater

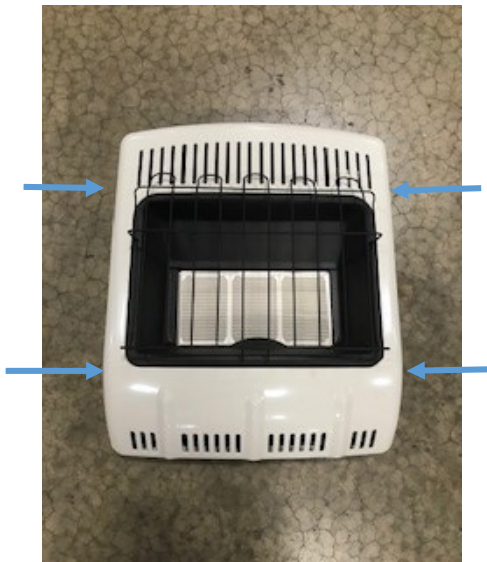

Step 2:  
Locate the open hole above the heat reflector. It should have 2 smaller holes next to it.



Step 3:  
Disconnect your thermostat sensor from the blower. Use the included screws in order to secure the sensor on the heater.



Step 4:  
Install the sensor with the wiring harness on the open hole above the heat reflector. You will need a small phillips head screwdriver to install the screws. Once installed, grab the blower fan for installation.



Step 5:  
Remove the back panel from the back of the heater. 4 screws hold it in place. Remove the screws, and place them to the side. They are needed to secure the blower.



Place the blower on the back of the heater and install the 4 screws that were removed prior.



Step 6:  
Re-connect both ends of the wiring harness together inside the heater. Then, replace the front of the heater, and replace the 4 side screws that were first removed. Your heater is now ready for the optional blower fan kit.

