




## QUICK START GUIDE - Liberty Home Defender Series HD-200, HD-300

Thank you for purchasing a Liberty Home Defender Series Vault. Liberty Safe provides the finest home and office security products available. The Home Defender Series has been designed to offer you quick access to your valuables or firearms, while also providing excellent security. Below is a quick set-up guide that will assist you in programming your Vault.

### I. Battery installation

Use the key to open the door and install a new 9V battery (Included). To install battery, locate the battery clip hanging from the ceiling of the vault interior. Clip in your battery and slide into the battery holder located at the back, right side of the electronic control board. Refer to the diagram:

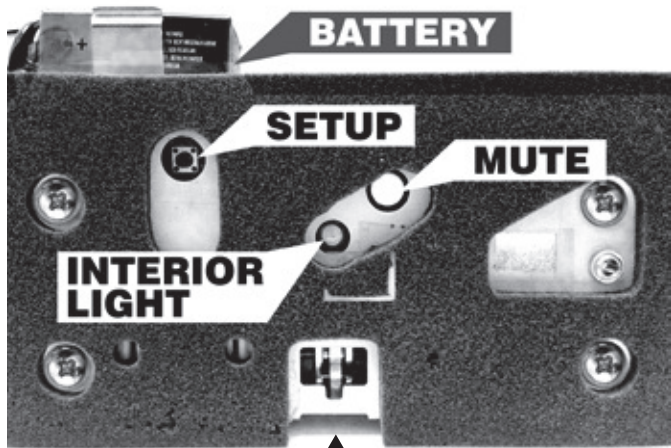

Safe opening on this side Interior view of control panel

### II. Programming Security Code

Find the SETUP button inside the vault directly under the 4th button. Press and hold the SETUP button for 5 seconds (you should hear two beeps and see the red keypad light blink twice) and enter your 5 entry security code. If code is accepted, the red keypad light will blink two times along with two beeps. If you do not see the red keypad light blink or hear the beeps, repeat this process. There are over 1,000 combinations available.

### III. Reset Security Code

To factory reset your vault, press and hold the SETUP button for 10 seconds. You should see the red keypad light blink 5 times and hear 5 beeps. The code is then reset to the factory-default code: 1,2,3,4,1

### IV. Internal Courtesy Light

When a security code has been used to open the vault, the interior light will shine for 20 seconds allowing a clear view of the interior. Light will automatically turn off after 20 seconds of activation.

### V. Tamper Detect Feature

When an invalid security code is entered for the first time, the red keypad light will blink eight times along with eight quick beeps. If five consecutive incorrect entries are attempted, the red keypad light will begin blinking and the alarm will beep once every 3 seconds for 3 minutes. Pushbuttons are disabled during lockout mode and only the key will open the vault during the 3 minute period.

### VI. Low Battery Warning Indicator

When battery life is low, the red keypad light will flash eight times along with eight beeps when the valid security code is entered.

### VII. Turning On/Off the Key Press Beep

To silence audible beeps, you can use the mute button located inside the vault directly under the 2nd key pad button and next to the light. Press button again to reactivate the audible beeps.

### VIII. Key Back-up

The provided keys can be used at any time to access the vault.

### IX. Mounting Your Vault

Each vault has been pre-drilled with 3 mounting holes on the bottom of the vault. To mount your vault: determine vault placement, mark and pre-drill mounting surface, and install vault using provided mounting screws. Replace foam liner upon completion.

**Note:** This product is intended to be mounted with a horizontal orientation

### Warranty:

Register your vault to activate Liberty's **2-year** manufacturer's warranty. To register online, visit: [www.LibertySafeHD.com/warranty](http://www.LibertySafeHD.com/warranty)

**Note:** Keep key and written combination in a secure location. You can register your combination in Liberty's Combo Vault by visiting: [www.LibertySafe.com](http://www.LibertySafe.com)

**Disclaimer:** Neither seller nor manufacturer shall be liable for any injury, loss or damage, direct or consequential, arising out of the use of, or the inability to use the vault. The user shall determine the suitability of the vault before the intended use and user assumes all risk and liability whatsoever in connection therewith.

**Warning:** It is never recommended that a loaded gun be kept in this or any other vault.

For additional product information, instructional videos, FAQ's and troubleshooting, visit: [www.LibertySafeHD.com](http://www.LibertySafeHD.com)