

Cool. Clean. Comfort.

Use and Care Manual

Evaporative Air Cooler



- Portable -
- Easy to Operate -
- Low Maintenance -
 - Energy Efficient

Attention!

The following is important information regarding your warranty. Please read before opening and operating your unit.

Warranty

Welcome to your new evaporative air cooler. After purchasing this product, please fill out the form below, and mail it to the Cajun Kooling LLC. address within 14 days of purchase. This will ensure you a two-year warranty on all mechanical parts, not including labor. Please check items upon opening to make sure that all parts are properly working, in order to validate your warranty. Please cut on dotted line and mail into the Cajun Kooling LLC. address. Your mailed in warranty will be validated according to the date on our copy of your receipt from purchase.

Cajun Kooling LA LLC. 112 Thruway Park Broussard, LA 70518 1-844-819-3557

Customer Name:			Customer Ac	Customer Address:	
Tel. Number:			Date and Lo	Date and Location Purchased:	
Model Type	: (Circle One)	CKEOOO	CK8200	Other	
-CN4500		-CK4700 -CK5900 -CK8200 -Other Serial Number: (listed on silver sticker on side of unit: ex. ck450009090909)			

Important Safety Instructions

READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS BEFORE USING THIS UNIT

WHEN USING ELECTRICAL APPLIANCES, BASIC PRECAUTIONS SHOULD ALWAYS BE FOLLOWED TO REDUCE THE RISK OF FIRE, ELECTRICAL SHOCK AND INJUURY TO PERSONS, INCLUDING THE FOLLOWING:


- 1. The unit should always be placed on a firm and flat surface, and at least 10 inches away from the wall.
- 2. The unit should not be used in a small, enclosed room while using the COOLING function without ventilation for long periods of time. The air could become saturated and leave condensation on the walls. Leave a door/window partially open when used indoors.
- 3. Before using the unit, check the cord for any signs of damage. DO NOT use the unit if the cord has been damaged. Plug into 110v outlets to avoid fire or shock hazards.
- 4. The appliance should be unplugged and emptied when not being used for long periods of time. Shut off and unplug the unit before moving. DO NOT tilt while the unit is in operation. Plug and unplug with dry hands, and never unplug by tugging on cord.
- 5. The COOLING (snowflake) feature will only operate when water is in the reservoir. Otherwise, the unit will run as a FAN only. First, fill with water. Then plug in, and then turn on your unit. The cooling will automatically begin and you will see a snowflake light up on the panel. If there is no water in the unit, the cooling will automatically shut off and a red light will appear, indicating that it needs more water. If there is no water, it will not harm the motor and will work properly as a regular fan. This is a safety feature.
- 6. This unit requires some maintenance; refer to cleaning instructions for details.
- 7. This unit is designed for outdoors. It can be used indoors in open spaces for short periods of time. There is no compressor in the unit and will not act as an air conditioner. It is not recommended as a daily household cooling unit, because of the moisture production in small areas can be harmful.
- 8. Do not insert any object inside the unit without proper care. Only water should be added. Refer to cleaning instructions for details.
- 9. Do not attempt to repair or adjust any electrical or mechanical functions without consulting Cajun Kooling Support first. Doing so will void the warranty.
- 10. If you plan to not use the unit for long periods of time, drain out all of the water from the reservoir to ensure lifelong durability. Then turn the unit on and run as the FAN function only, for approx. 30 mins. This ensures that the inside of the unit will be completely dry before storing.


How It Works:

This unit is a portable fan, as wells an evaporative cooler. When using the cooling function, the water inside the unit will be pumped throughout pipes inside, and will be dispersed onto the cooling pads. The motion of the fan will drag air into the air intake areas, which will then pass through the cooling pads. The movement of the wind over the moisture will evaporate and create naturally cool and comfortable air. No mist will be produced. After approx. 8-12 hours, the water reservoir will be completely evaporated into the air and will need to be refilled.


Interior Structure

Exterior Structure

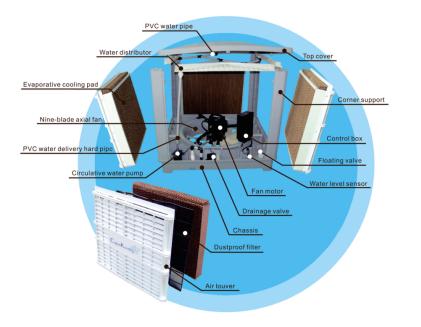

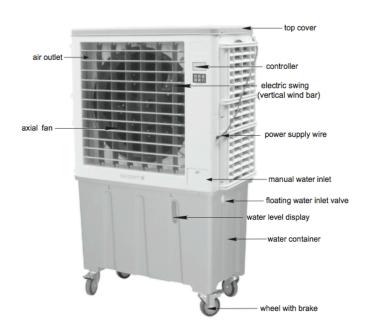

Control Panel

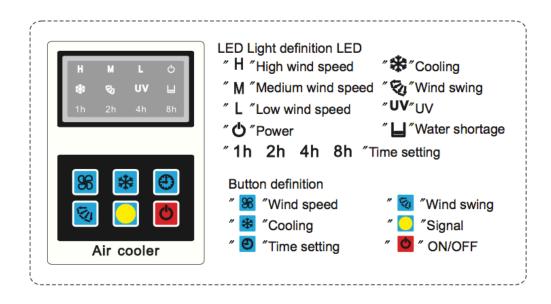

Cleaning and Maintenance:


- 1. The Drying Process: For longer lifetime of your Cajun Kooler, after using the unit, it is recommended to turn off the cooling function (snowflake button) and run the unit as a FAN only for approximately 30 mins. This helps to dry out the cooling pads and avoid mildew. The remaining water can be kept in the reservoir for 3 more days, but should be changed at least once a week. If storing for longer than one week, drain the water from the reservoir using the drain valve at the bottom of the unit, and then complete the drying process.
- 2. **For the Automatic Drying**: the timer can be used as a convenience for you to dry your unit without having to occupy it. Simply turn the snowflake button off, keep the fan running, press the timer button on for one hour, and the fan will dry and shut down itself.
- 3. The reservoir can handle 2oz. of bleach in at least 32-gallons of water to refresh the interior. DO NOT put any other cleaning or foaming products into the machine, because it will foam up the water and over flow your unit. Do not do this more than once a week.
- 4. The black screens protecting your cooling pads will collect dust and should be checked at least once a week when using frequently. Pull them out and simply hose them off or wipe down with a wet rag and re-insert them. To avoid build up, DO NOT put chemicals on the screens. The screens should be transparent and you should be able to see completely through them after they have been cleaned. This ensures complete air intake.
- 5. Cleaning the cooling pads: make sure the cooling pads are dry and the machine is unplugged. Use a screwdriver to remove the back panel of the unit and the cooling pads can easily slide in and out. Rinse softly with a hose through one side only on low pressure and do not use any chemicals. At an angle, you should be able to see light though the holes once it has been fully cleaned. Re-insert the pads gently and put the back panel back into place and put the screws back into place.





Troubleshooting:

Circuit Layout

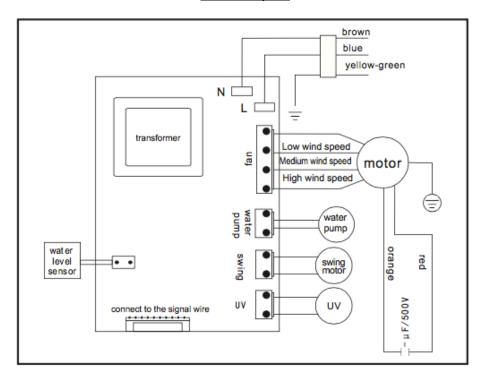

Installing The Unit:

- 1. Lay box down on its side or back and cut open the bottom. The wheels will be located in a smaller box inside of the unit's box. Open the box of wheels and there should be 4-wheels and 16 screws. Check to make sure that all parts are present.
- 2. Using a drill or screwdriver, gently screw on the wheels and make sure not to strip the screws.
- 3. Stand your box back up and remove the box from the unit by lifting it over the top. Make sure that all parts are in tact and correctly assembled.
- 4. You may begin filling water through the water inlet flap using regular tap water. There is a water level in the front of your unit, located on the reservoir. Be sure not to fill past the "H", HIGH, level. You will not see the water until it reaches half of the tank on "L", low, but this level may not need to be reached for your preference. Filling at half of the tank will last at least 4 hours of run time.
- 5. If hooking the hose to the hose attachment, be sure that the hose is using low pressure. There is a "float" inside of the water reservoir to stop the water flow when the reservoir becomes full.
- 6. Plug in the unit to a safe outlet, and begin using your fan by pressing the Power button. Choose your suitable speed for your unit and begin enjoying.
 Troubleshooting continued:

Troubleshooting Cont.:

Problem	Possible Cause	Solution
Cannot turn on the unit	1. The power supply is not connected	1. Check the power supply
	2. ON/OFF button does not work	2. Replace the control panel
	3. Phase shortage	3. Check the phase wire
	4. Voltage is too low	4. Check the voltage supply
The fuse shorts often	1. The water pump has shut off	1. Replace the water pump
	2. Drainage pump is blocked	2. Replace the drainage pump
	3. Motor of the "swing" function is	3. Replace the motor for the "swing"
	broken	
Makan Laaliaaa	4. The consideration is not well belowed	4 Black on a halamand conference delication from the conference of
Water Leakage	1. The machine is not well balanced2. Water reservoir is leaking	Place on a balanced surface and give time for excess water to dry up
	3. Drain is leaking	2. Check for any holes or cracks on the tank
	4. Water level inlet is leaking	3. Seal the drain properly and do not over tighten
	5. Water level is too high	4. Check for cracks or damages of the water inlet flap
	6. Internal pipes for distribution is	5. Drain some water and do not fill past High and check
	broken	that the internal float is properly positioned
	7. Cooling pads dirty	6. Open unit from the back and check the pipes for any
		leaks
		7. Remove and properly clean the cooling pads
Making noise	1. Fan blades are dirty, warped, or	1. Replace the fan
	broken	2. Replace the motor
	2. Motor is broken	3. Clean the unit from the inside out and all of the
	3. Build-up is blocking the airflow	cooling pads and screens
	4. Water was filled too high and	4. Drain some water and allow for drying
	reached the fan blades	
No wind supply or the	1. Cooling pads or screens are clogged	1. Clean or replace the cooling pads or screens
airflow is too low	2. Control panel is broken	2. Replace the control panel
	3. Remote control is broken	3. Check batteries or replace the remote
	4. Fan is not turning on	4. Check the motor from inside of the unit
	5. Shortage in the phase wire	5. Check the phase wire
No Cooling	1. Shortage of water in the reservoir	1. Add water to reservoir and make sure "snowflake"
	2. Water pump broken	stays lit up on control panel
	3. "Cooling" button on the panel is	2. Repair the water pump
	broken	3. Check the panel and/or replace
	4. Remote control broken	4. Check the batteries or replace remote
Water reservoir or	1. Mineral substance in the water is	1. Clean more frequently
screens have white	too high	2. Do not add any chemical to the water or to the unit
build up	2. Improper chemicals were added	
	to the unit	