

# Throttle Master

Product Instructions | Part No: 98005



## KIT CONTENTS:

Item	Qty	Part Description
1	1	Mounting Base
2	1	Throttle Master
3	2	1/4" Truss Head Bolt
4	2	1/4" Lock Nut
5	2	Rubber Cap



**APPLICATION:** Verify accessory fitment at [Kolpin.com](http://Kolpin.com) prior to installation or usage.

## BEFORE YOU BEGIN:

### WARNING

Failure to properly install or use Throttle Master could result in serious injury or death. Use only with approved vehicle fitment. Verify up to date accessory instructions, warnings, and fitment at [Kolpin.com](http://Kolpin.com) prior to installation or usage. Read and follow operator's manual prior to installation and usage. Make sure your vehicle is clean and free of debris prior to installation.

## SAFETY INFORMATION:

### WARNING


- Inspect Throttle Master for damage. Do not use and replace if damage or wear does not allow for proper functionality. Before starting the ATV:
  - Make sure Throttle Master is tightly secured on the OEM thumb throttle.
  - Make sure throttle travels from no throttle to full throttle and full throttle to no throttle without interference (minimum 1/8" clearance) from hand grips or other components / accessories. Repeat this check with the handlebars in full left and full right position.
- If the Throttle Master is impacted by an object (tree branch, debris, etc.), find a safe location to stop and assess the situation. Inspect the Throttle Master for damage and function as mentioned directly above prior to resuming riding.
- Do not modify the Throttle Master. Only use included mounting hardware for installation.
- Loose-fitting riding gear, such as gloves and long-sleeve clothes, could interfere with throttle control. Do not use Throttle Master with riding gear that interferes with throttle control. Always follow ATV manufacturer's safety instructions for proper riding gear.

## TOOLS REQUIRED:

- Phillips #2 screw driver
- Trimming tool

## INSTALLATION INSTRUCTIONS:

1. Confirm accessory fitment at Kolpin.com to ensure this accessory is designed to fit your ATV.
2. Place the Throttle Master over your existing throttle on your ATV.
3. Using the lock nuts, 1/4" truss head bolts, and a Phillips screw driver, loosely tighten to hold the Throttle Master on the ATV throttle. See Illustration 1-1.
4. Check the location of your new Throttle Master. You can slide the Throttle Master Section outwards to obtain more leverage.
5. Tighten down the Mounting Base securely to the ATV throttle.
6. Place the Rubber Caps over the extra threads that protrude out past the backside of the Mounting Base.
7. With the ATV off, check throttle function to ensure 1/8" minimum clearance with hand grips and any other parts / accessories on the handle bars. Some hand grips may need to be trimmed to ensure sufficient clearance. Trim the entire circumference so that the grip can rotate without interfering with Throttle Master. See Illustration 1-2, 1-3, and 1-4. Adjust if needed.

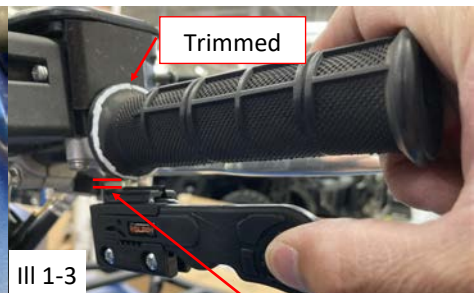

1/8" min clearance between Throttle Master and grip

**WARNING! Do not use Throttle Master if proper clearance cannot be achieved on your ATV. Installing Throttle Master without at least 1/8" clearance from all parts for its entire range of motion could result in the throttle being stuck in the open position, which may lead to loss of control, serious injury, or death. If throttle becomes stuck in open position while operating, apply the brakes to come to a stop and turn off the ATV.**

### One Year Limited Warranty

For the period of one (1) year from the purchase date, Kolpin will replace for the original purchaser, free of charge, any part or parts found upon examination by Kolpin to be defective in material, workmanship, or both.

All transportation costs incurred submitting product to Kolpin for warranty consideration must be borne by the purchaser. If Kolpin determines that the product must be returned to the factory for credit, please call 1-877-956-5746 for a Return Merchandise Authorization (RMA) number and shipping instructions.

This warranty does not apply to parts that have been damaged by accident, alteration, abuse, improper maintenance, normal wear, or other causes beyond the manufacturer's control. In order to protect you and your ATV, certain parts of the accessory system and/or hardware are designed to fail when the equipment is over-stressed. Parts that are lost due to loosening and improper maintenance are not covered under warranty. This warranty does not cover removal or reinstallation labor fees of the plow system and related components.

Peripheral products such as engines, electric motors, and actuators may carry an original manufacturer's warranty. Most hardware is general in nature and is easily obtained locally. Be sure to replace with minimum metric class 8.8 specification.