Our Best Boots Combined

The Easyboot Back Country combines the greatest features of our two most popular boots, pairing the form fitting chassis of the Easyboot Glove with the easy to secure upper of the Easyboot Trail. The Easyboot Back Country is the perfect choice for the discerning trail rider.

Sleek, convenient and robust, this boot has a flexible internal structure that protects the soft tissue areas of the hoof, and a durable upper that is built to withstand any terrain.

The anatomically designed sole provides maximum flexibility while resisting wear. The chassis is available in 20 regular and wide sizes (see size chart), accommodating an array of hoof shapes for ultimate comfort and uncompromised security.

The Easyboot Back Country is a medium to high mileage riding boot: 25 -50 miles per week, and is also ideal to carry as a first-class replacement boot for a lost shoe.

Sizing the Easyboot Back Country for Your Horse

- » Take hoof measurements following a trim.
- » If using the Fit Kit before purchasing the Easyboot Back Country, we recommend going up a half size from the most secure fitting shell.
- » Follow the steps in this guide to determine the correct size. Please contact an EasyCare customer service representative at 800-447-8836 if fitting assistance is needed. Correct sizing is imperative for successful use of the boots.
- » The Easyboot Back Country is available in 20 sizes with each size increasing by 4mm in width and length. Easyboot Back Country sizes are not comparable to steel shoe sizes.
- » Easyboot Back Country sizing allows for natural hoof growth throughout a six week trim cycle.
- » If you intend to use the Easyboot Back Country over steel shoes*, take your hoof measurements after the horse is freshly shod.

*Using our hoof boots over metal shoes voids the EasyCare Guarantee.

Fitting the Easyboot Back Country to Your Horse

- 1. Fully open the upper, ensuring that no hook and loop areas are touching and that the cover is pulled completely forward.
- 2. Fold the Comfort Cup Gaiter back so it is flush with the back of the boot shell.
- 3. Facing the rear of your horse, pick up the hoof and slip it into the boot. Place the sole of the hoof firmly down into the boot and pull the Comfort Cup Gaiter over the heel bulb. Place the hoof on the ground to a weight-bearing position. Lift the opposite leg to assure the hoof is fully weight bearing.
- 4. Starting at the front, push both side flaps against the hoof wall in a downward direction. Secure the upper at the rear by pulling both ends firmly around the heel, overlapping the flaps evenly.
- 5. Finally, secure the Snug Strap on the rear of the boot.
- 6. The Easyboot Back Country is now securely in place. Confirm that the Easyboot Back Country patch on the front of the boot is aligned through the center line of the hoof and pastern bone.











Easyboot Back Country Sizing and Fitting Tips

- » Easyboot Back Country boots can be worn on either the left or the right hoof. The Snug Strap can be switched so that both pull rings are on the inside, giving you a left and a right boot.
- » After the upper has been secured, ensure the hook and loop ends are overlapped in the correct position.
- » Working your horse in incorrectly sized Easyboot Back Country boots can cause chafing. Correct size selection will ensure maximum performance and hoof boot longevity.
- » Give your horse time to adjust to wearing Easyboot Back Country boots. The first time you fit your horse with the Easyboot Back Country, conservative riding is recommended.
- » Gradually increase the duration and distance of the rides while wearing Easyboot Back Country boots to ensure the horse becomes accustomed to the new hoof wear. Not allowing the boots to break in could lead to chafing.



HOW TO MEASURE FOR THE Easyboot Back Country

Features of the Easyboot Back Country:

- » The Comfort Cup Gaiter is incorporated into the rear of the boot providing protection and support of the soft tissue area.
- » The lightweight, durable upper stabilizes the boot on the hoof.
- » The Snug Strap assures security, even in wet or muddy conditions.
- » No hand strength or force required; quick and easy to apply and remove.
- » Completely convertible and replaceable; built on the Easyboot Glove chassis. The Easyboot Glove or Easyboot Glue-On can be converted into the Easyboot Back Country (additional accessories required). All components of the Easyboot Back Country are replaceable.
- » Available in 20 sizes to fit most horses.

Sold individually.

Join the Conversation For tips and tricks follow EasyCare:







A product of EasyCare Inc.

EasyCare Guarantee 800.447.8836 | easycareinc.com

All products should be used in accordance with the instructions in this application guide. EasyCare Inc. hereby disclaims responsibility for the misuse of any product and for losses incurred through the use of any product described in this guide, on EasyCare Inc. product packaging, or on easycareinc.com. EasyCare Inc. products are not intended to diagnose or cure any medical condition.

- 1. After a fresh trim, measure the width of the hoof across the sole at the widest point.
- Measure the length of the hoof from the toe to the buttress line of the heel. The buttress line is the farthest weight bearing point of the heel where the hoof wall ends. Do not include the heel bulbs in the measurement.
- 3. Compare your measurement with the size chart below.

4. Ideally, the length and width measurement will fit into the same size. If the length and width measurements indicate different sizes, select the larger size. If the width and length measurements are different by more than one size, this boot style is not recommended. Be sure to check your measurements



against an alternative boot in the EasyCare line--another style may accommodate your horse's hoof shape better.

	Normal	0		Wide	0
Size	Width in mm	Length in mm	Size	Width in mm	Length in mm
00	96-99mm	106-109mm	0W	114-117mm	114-117mm
00.5	100-103mm	110-113mm	0.5W	118-121mm	118-121mm
0	104-107mm	114-117mm	1W	122-125mm	122-125mm
0.5	108-111mm	118-121mm	1.5W	126-129mm	126-129mm
1	112-115mm	122-125mm	2W	130-133mm	130-133mm
1.5	116-119mm	126-129mm	2.5W	134-137mm	134-137mm
2	120-123mm	130-133mm	3W	138-141mm	138-141mm
2.5	124-127mm	134-137mm			
3	128-131mm	138-141mm			
3.5	132-135mm	142-145mm			
4	136-139mm	146-149mm			
4.5	140-143mm	150-153mm			
5	144-147mm	154-157mm			
2 2.5 3 3.5 4 4.5	120-123mm 124-127mm 128-131mm 132-135mm 136-139mm 140-143mm	130-133mm 134-137mm 138-141mm 142-145mm 146-149mm 150-153mm			

Easyboot



APPLICATION GUIDE

