

WARRANTY

WHAT IS COVERED

We warrant the product to be free from defects in material or workmanship for a period of one year from the date of original retail purchase. The word "defects" is defined as imperfections that impair the use of the product. Defects resulting from misuse, abuse or customer negligence will void this warranty.

 
WHAT IS NOT COVERED

This warranty does not cover commercial use, hardware, acts of nature, fire, freezing and abusive use. This warranty does not cover defects due to alteration or accidents. This warranty does not cover scratches, scuffs or other cosmetic damages that may result from normal use of the product.


CARE INSTRUCTIONS

Thank you for choosing northbeam[™] 6 TIER WOODEN SHOE DRESSER. With a little care and maintainance, the northbeam[™] 6 TIER WOODEN SHOE DRESSER will provide you with comfort and enjoyment for many years to come!


- To clean panels, use clean water on a damp cloth.
- When assembling northbeam[™] 6 TIER WOODEN SHOE DRESSER, please handle all the panels and/or hardware with care to avoid any possibilities of damages and/or injuries.

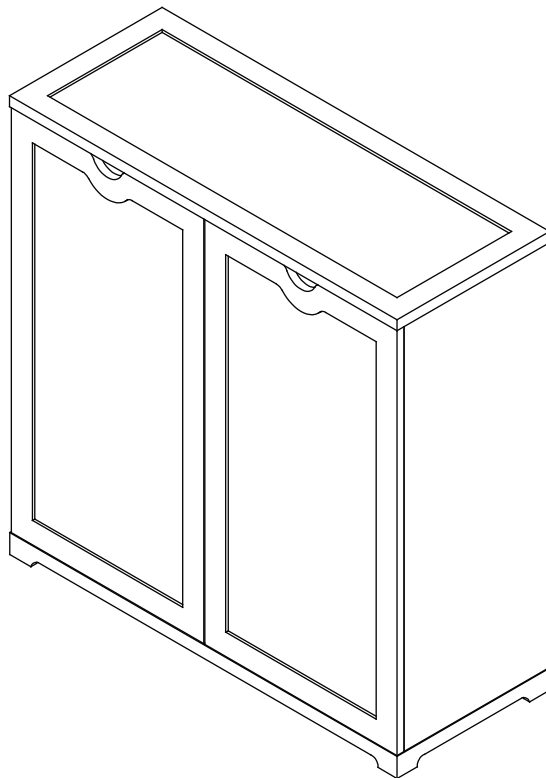

 
NOTE: Please read all instructions carefully before starting assembly. Also, we recommend that the unit is fully assembled on a level surface. Two people are recommended to assemble this product. DO NOT over torque screws and bolts.

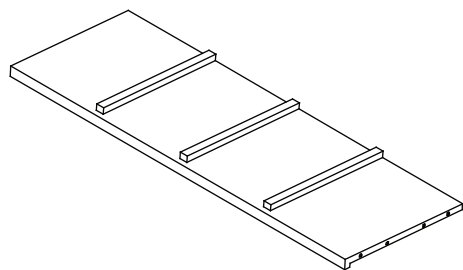


1 MIDDLE PANEL X 1PC

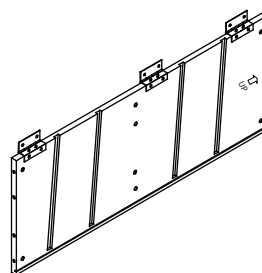 


2 LEFT PANEL X 1PC

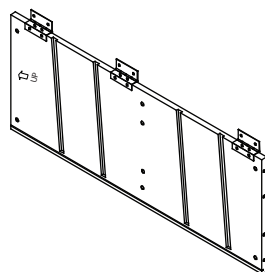 


3 RIGHT PANEL X 1PC

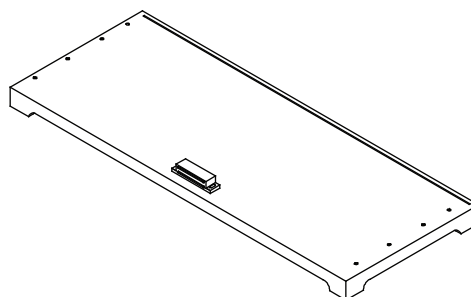 


4 BOTTOM PANEL X 1PC

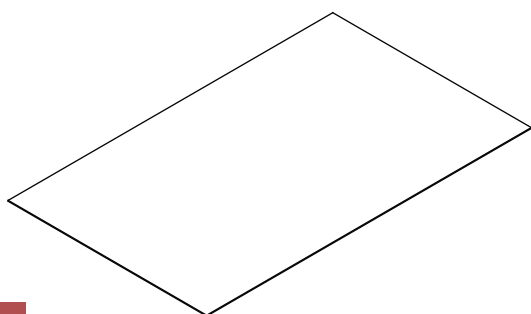 


5 BACK PANEL X 1PC

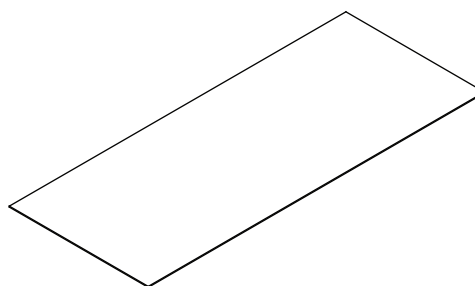 

6 BACK PANEL X 1PC

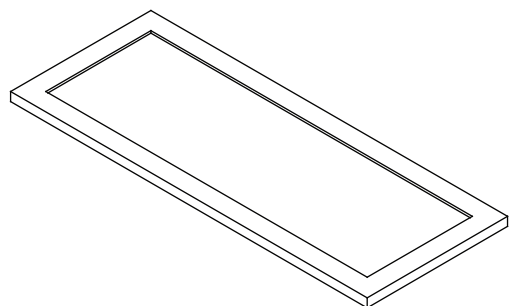 


7 TOP PANEL X 1PC

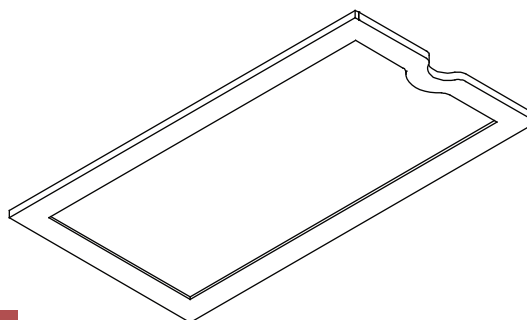 


8 LEFT DOOR X 1PC

 
NOTE: Please read all instructions carefully before starting assembly. Also, we recommend that the unit is fully assembled on a level surface. Two people are recommended to assemble this product. DO NOT over torque screws and bolts.

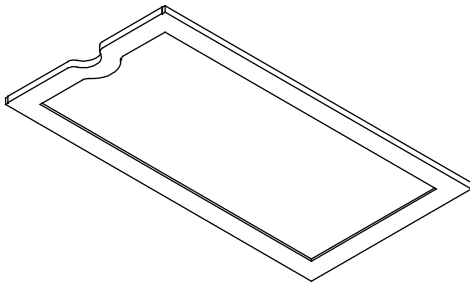


9 RIGHT DOOR X 1PC

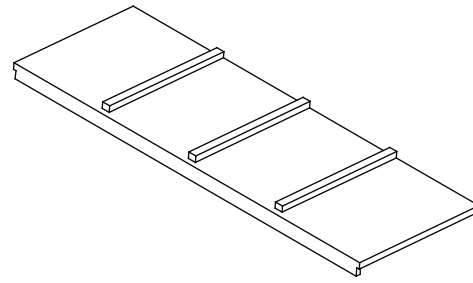 



10 SHELF X 4PCS

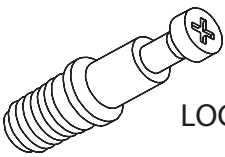 A  LOCKING BOLT 12+1PCS

 B  Small CAM 4+1PCS

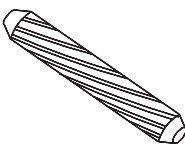C  DOWEL 12+1PCS

 
D  SCREW 3+1PCS

 E  SCREW 12+1PCS

F  CAP 12+1PCS


G  Large CAM 8+1PCS

 NOTE: Please read all instructions carefully before starting assembly.
 Also, we recommend that the unit is fully assembled on a level surface.
 Two people are recommended to assemble this product.
 DO NOT over torque screws and bolts.

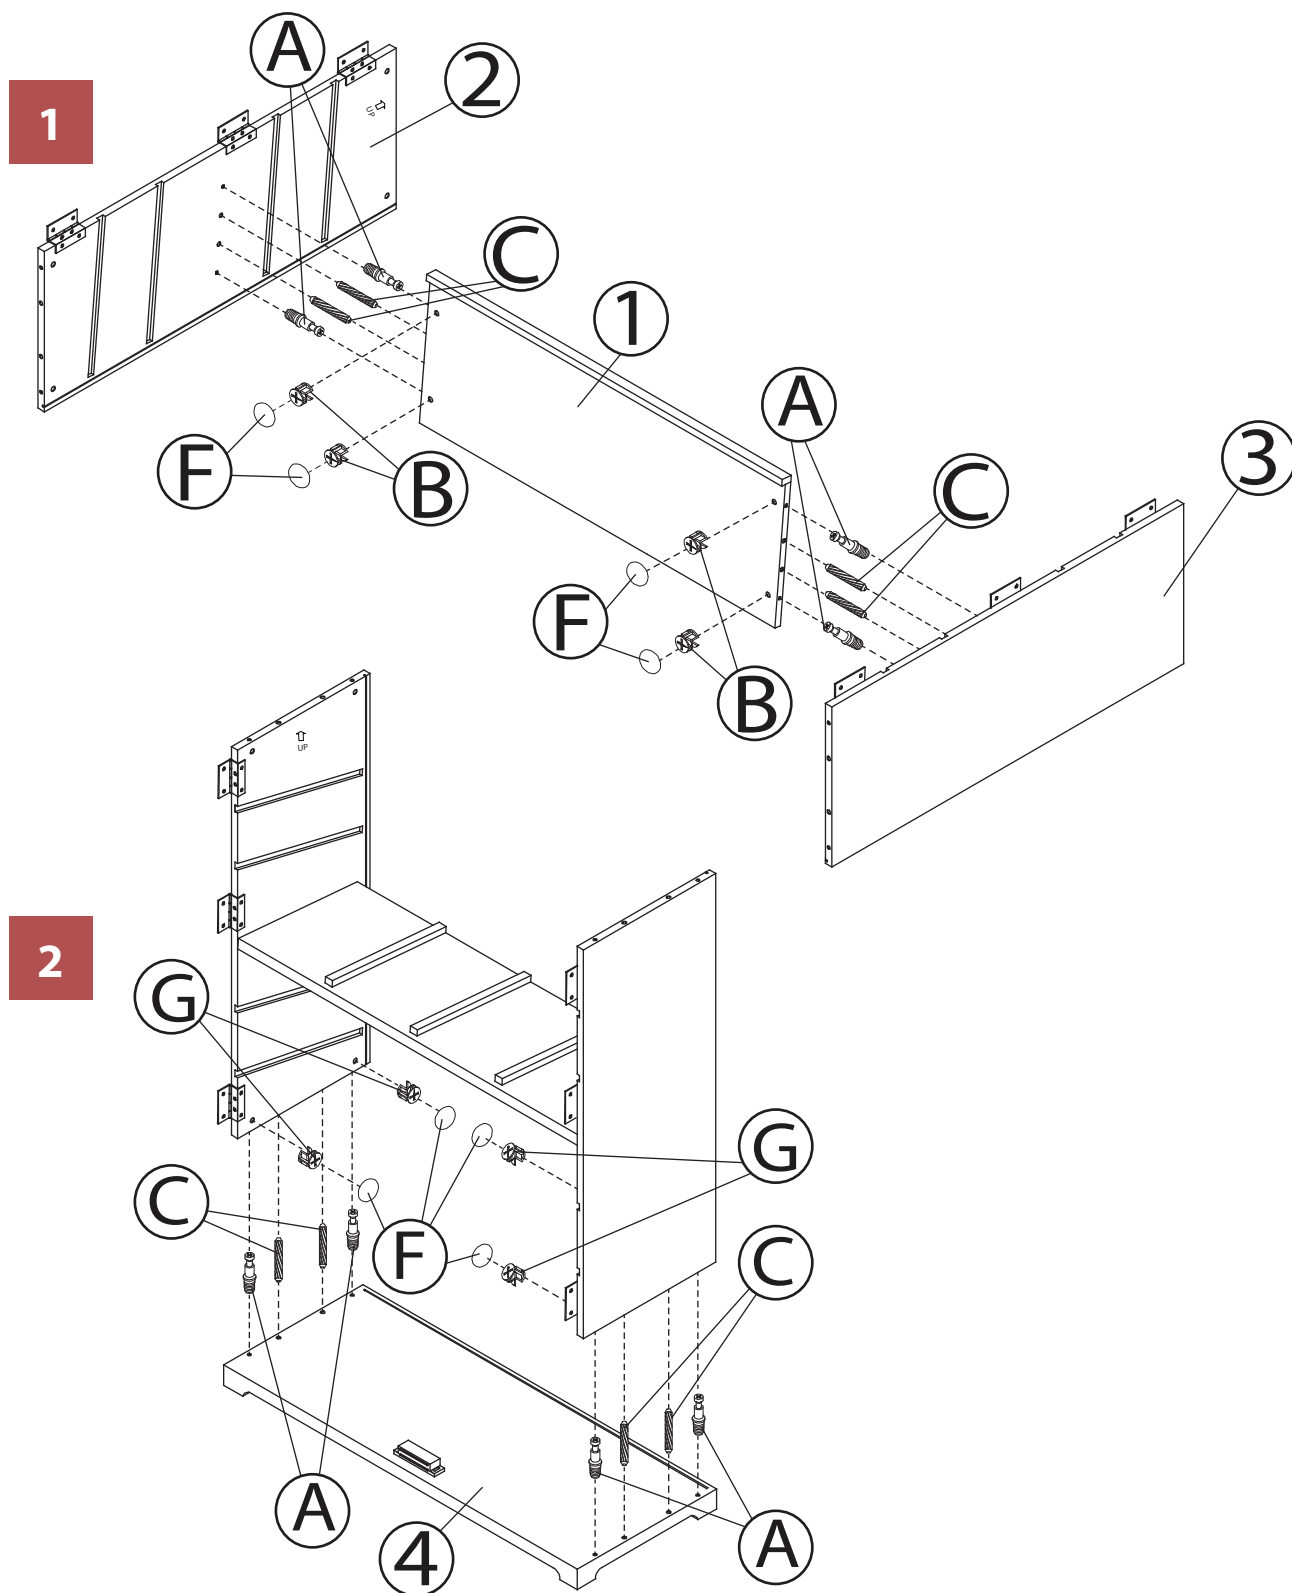


NOTE: Please read all instructions carefully before starting assembly. Also, we recommend that the unit is fully assembled on a level surface. Two people are recommended to assemble this product. DO NOT over torque screws and bolts.

 3

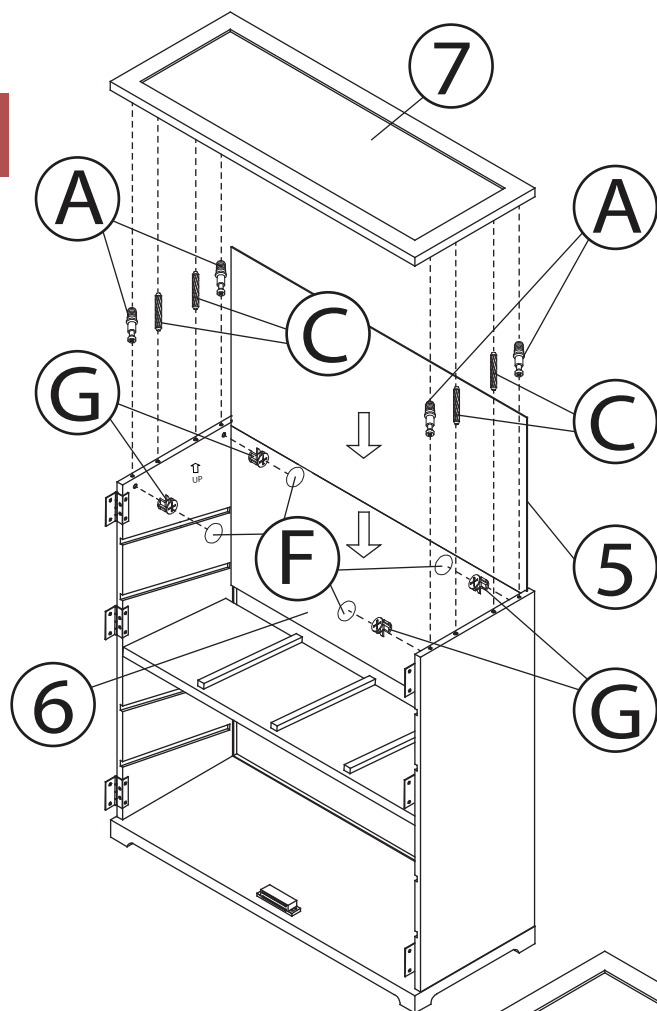


4

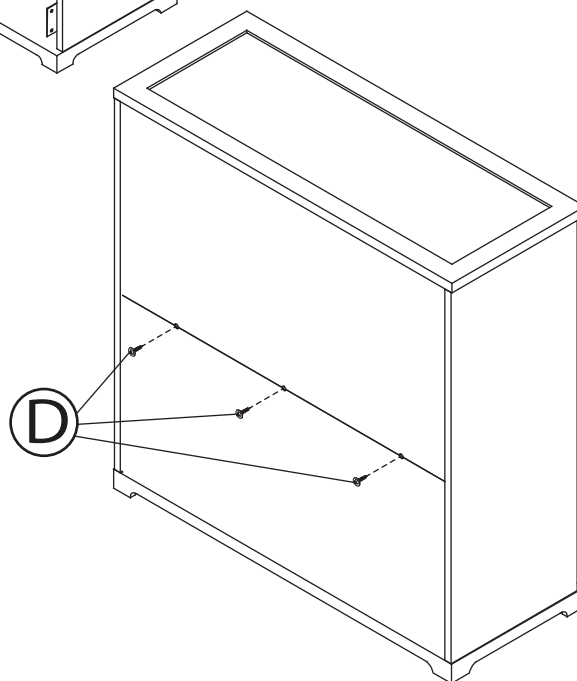 


NOTE: Please read all instructions carefully before starting assembly. Also, we recommend that the unit is fully assembled on a level surface. Two people are recommended to assemble this product. DO NOT over torque screws and bolts.

 5


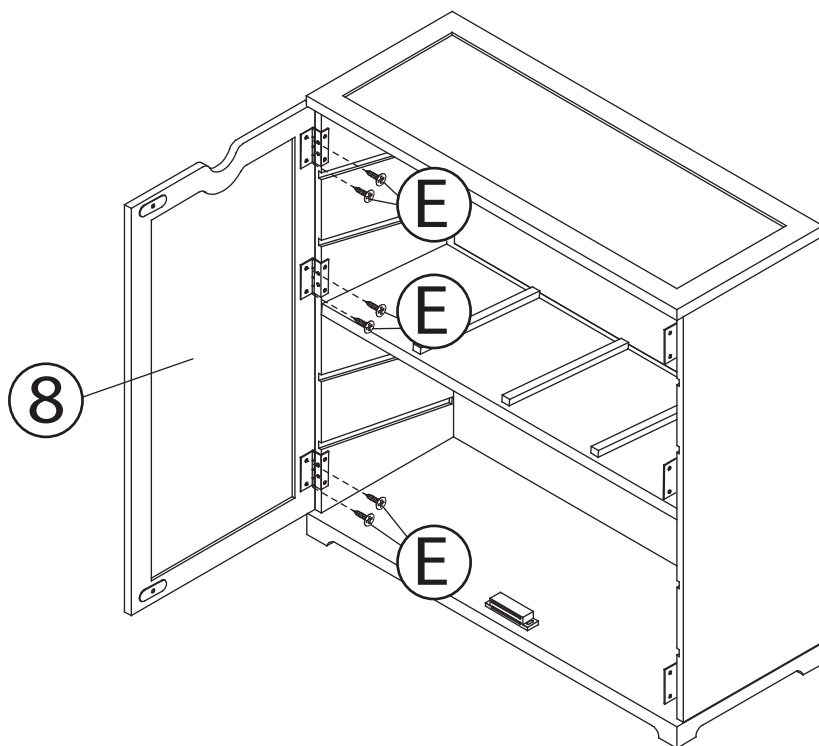


6

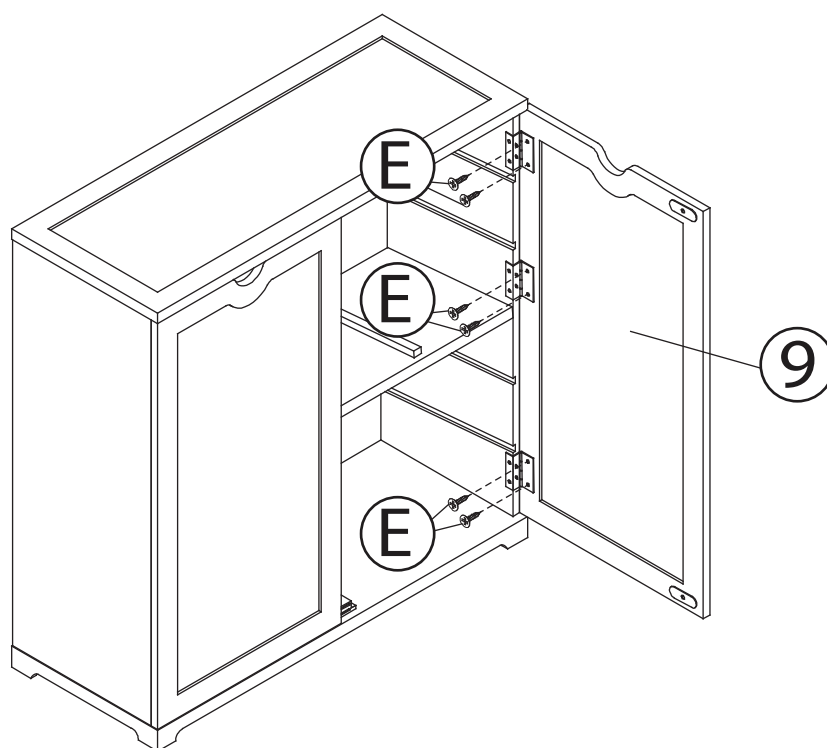 

NOTE: Please read all instructions carefully before starting assembly.
Also, we recommend that the unit is fully assembled on a level surface.
Two people are recommended to assemble this product.
DO NOT over torque screws and bolts.

  7

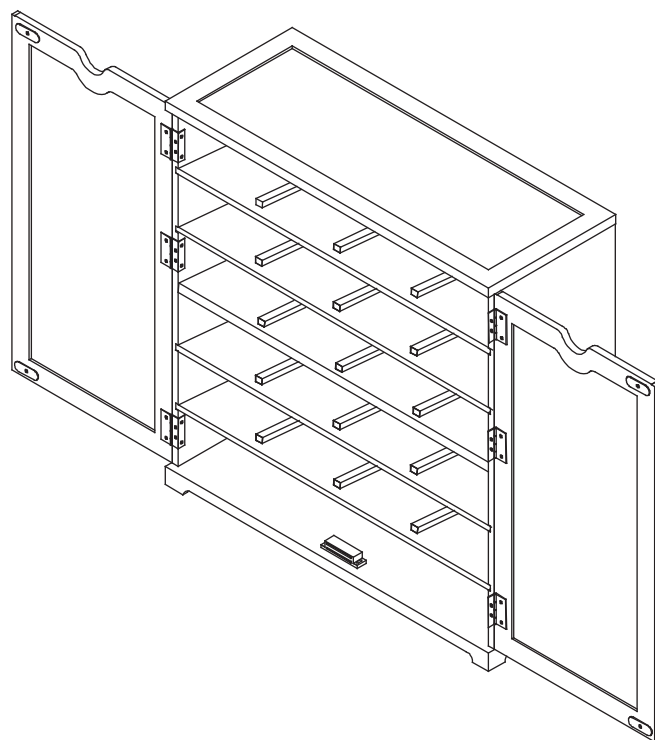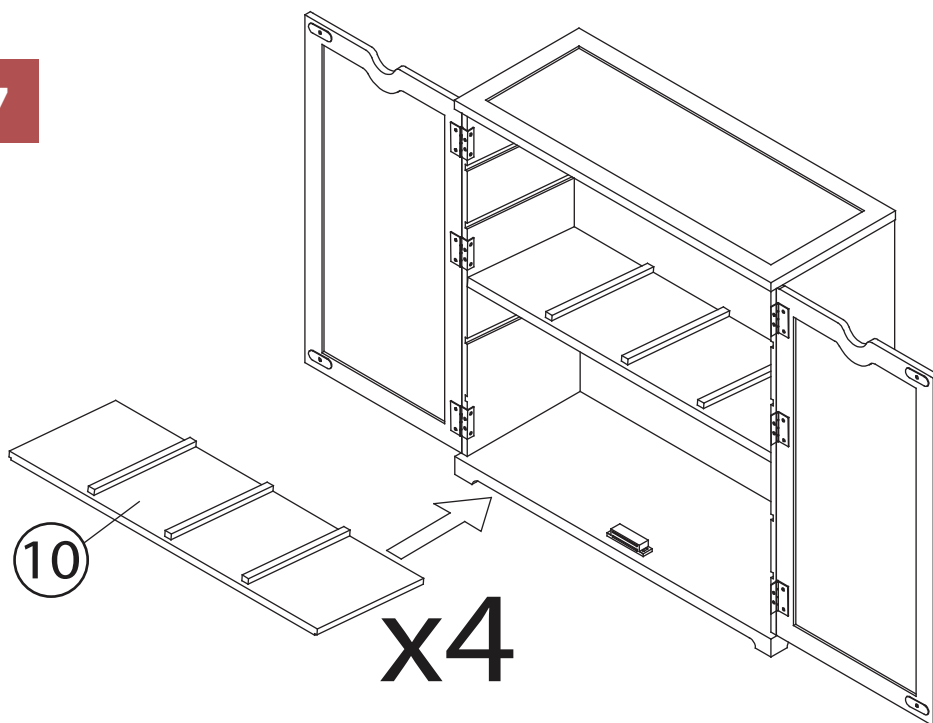

NOTE: Please read all instructions carefully before starting assembly. Also, we recommend that the unit is fully assembled on a level surface. Two people are recommended to assemble this product. DO NOT over torque screws and bolts.

Please check contents before assembly. If any items are missing or damaged, do not take the unit back to the store. Call (775) 629-5029 or email: service@merryproducts.com for customer service and we will save you time by correcting any problems directly for you.

NOTE: Please read all instructions carefully before starting assembly. Also, we recommend that the unit is fully assembled on a level surface. Two people are recommended to assemble this product. DO NOT over torque screws and bolts.