


CARE INSTRUCTIONS

 
Thank you for choosing turtleplay™ SANDBOX WITH CANOPY. With a little care and maintainance, the turtleplay™ SANDBOX WITH CANOPY will provide you with comfort and enjoyment for many years to come!

 
- Secure and cover the SANDBOX WITH CANOPY during harsh weather to keep from getting damaged.
- Rinse any panels with water to clean.
- When assembling turtleplay™ SANDBOX WITH CANOPY please handle all panels and/or hardware with care to avoid any possibilities of damage and/or injury.
- It is highly recommended that you treat the turtleplay™
 SANDBOX WITH CANOPY with a weatherproof coating of
 stain once a year, to increase life expectancy and maintain
 the look.
- · Adult assembly required.

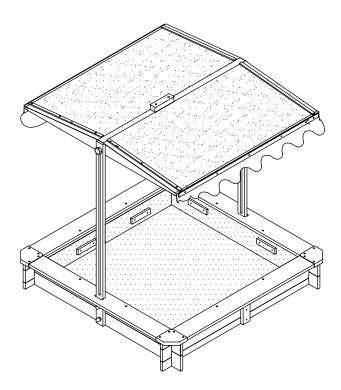


turtle play


PART LIST






  - 1 SANDBOX FRONT & BACK CAP X 4PCS
- 2 SANDBOX SIDE PANEL X 4PCS





 - 3 SANDBOX FRONT & BACK PANEL X 2PCS
- 4 SANDBOX F&B TOP FRAME X 2PCS






- 5 SANDBOX SIDE TOP FRAME X 2PCS
- 6 SANDBOX F&B SUPPORT X 2PCS

turtleplay

CANOPY F&B CROSS BAR

PART LIST

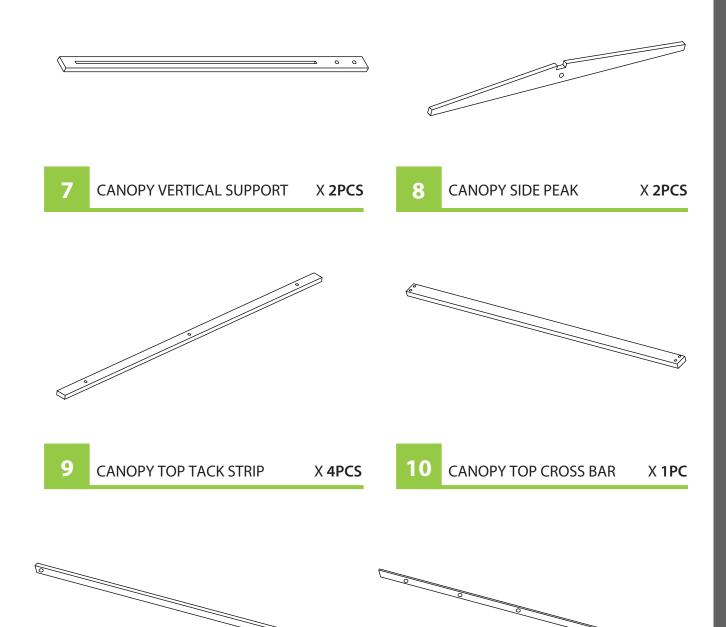

NOTE: Please read all instructions carefully before starting assembly. Also, we recommend that the unit is fully assembled on a level surface. Two people are recommended to assemble this product. DO NOT over torque screws and bolts.


X 2PCS

 
CANOPY F&B TACK STRIP

X 2PCS

turtle play

PART LIST

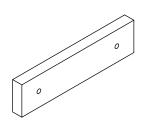





13 SANDBOX LINER TACK STRIP

X 8PCS

14 CANOPY TOP HANDLE

X 1PC

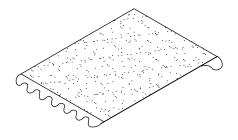

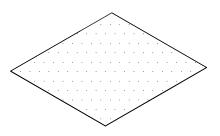

15 CANOPY FABRIC

X 1PC


16 SANDBOX LINER


X 1PC


Α	3.5X35	24PCS
В	3.5X35 3.5X30	2PCS
C	3X25	4PCS
D		62PCS
Ε	M8X43	6PCS
F	(O) 8X22	4PCS
G	M8	4PCS
Н		4PCS
I		2PCS

turtleplay


ASSEMBLY

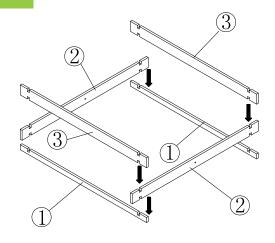


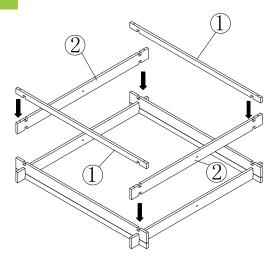

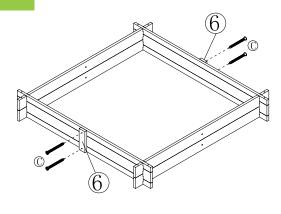



4

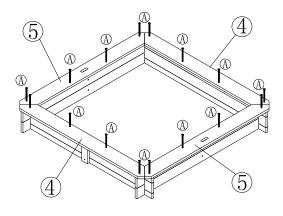


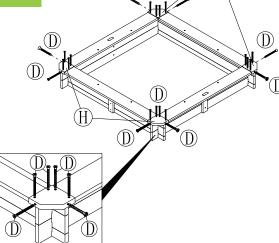



6

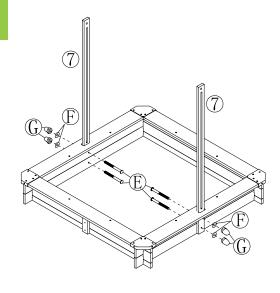

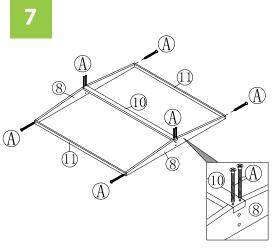

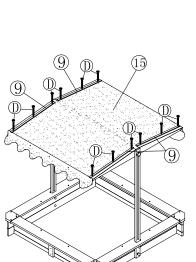


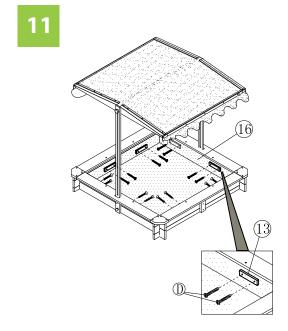


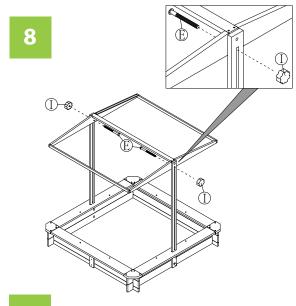



12

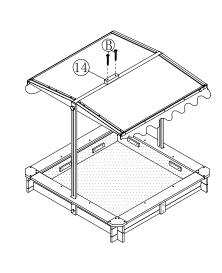

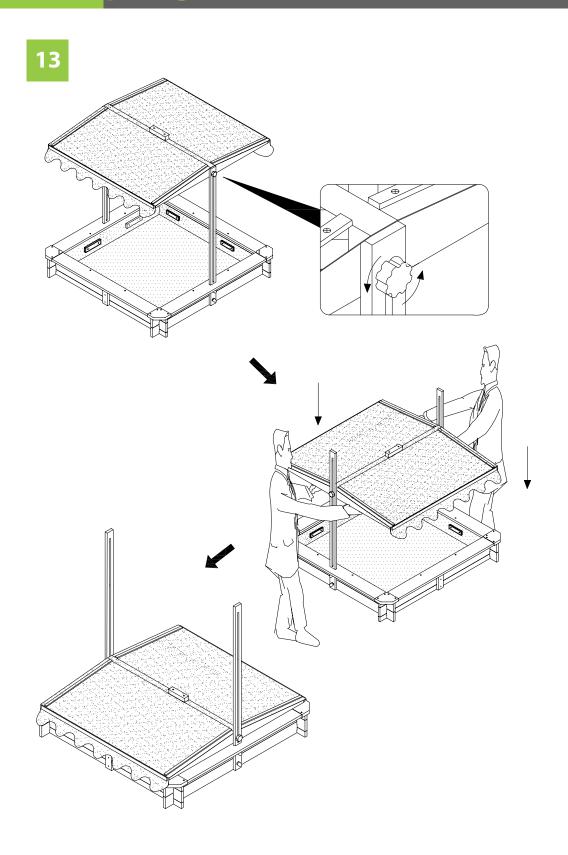



Please check contents before assembly. If any items are missing or damaged, do not take the unit back to the store. Call (775) 629-5029 or email: service@merryproducts.com for customer service and we will save you time by correcting any problems directly for you.