

USER SERVICING INSTRUCTIONS

Replace the lamp.

- (1) Grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling on cord.
- (2) Pull lamp and plastic base straight out of lampholder.
- (3) Replace lamp with 2.5 volt bulb only, which has been provided to you.

 


Grip the plastic part instead of glass.

Do not twist lamp
Pull straight out
Push straight in!!

Replace the fuse.


- (1) Grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling on cord.
- (2) Open fuse cover. Slide to open fuse access cover on top of attachment plug towards blades.
- (3) Remove burned fuse carefully. Then put a new fuse into fuse holder.
- (4) Risk of fire. Replace fuse only with 3Amp. 125Volt Fuse (provided with product).
- (5) Close fuse cover. Slide to close fuse access cover on top of attachment plug. Do not replace attached plug and make sure a safety device (fuse) won't be removed. Discard product if the attached plug is damaged.



Burned fuse



 New fuse




(2)

SAFETY INSTRUCTIONS FOR PRE-LIT CHRISTMAS TREE

ASSEMBLY

1. Before you start to assemble your tree. Please choose a location where nearby a wall outlet. Place the tree stand on a level ground.

 2. Carefully insert the bottom section into the stand. Make sure pole is firmly inserted into stand and tightened screws. Then insert middle section into bottom and top into middle.

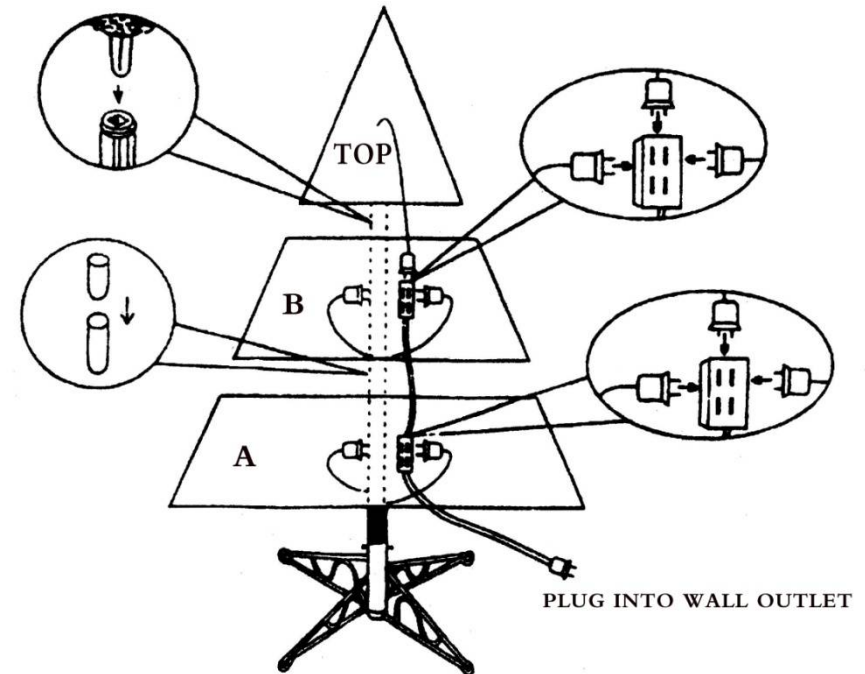

(3)

3. Allow branches to fall into place or gently pull up and out. When adjusting branches be sure that all wires are free of branches hinges.



4. Shape the branches. Start with tips farthest from the pole, one to the right, one to the left and one at the center of the main stem.



5. Follow the previous step after shaping the whole tree, step back and take an overall look at the tree, shift branches to fill any gaps. Slightly upswEEP all branch tips for a uniform look. Your tree is ready to decorate and enjoy.

6. Now locate the long extension cord and plug it into the wall outlet. Then plug the middle extension cord into the bottom extension cord. Lastly, plug the light set from the top into the middle. As shown in diagram, and now your tree showed be completed with all lights illuminated.

STORAGE

1. Unplug extension cord from the wall outlet.
2. Unplug each section of extension cord, keep each stack of light sets connected together.
3. Gently lift off the top and middle sections, and remove the bottom section from the tree stand.
4. Carefully replace the tree in its box and seal with tape, store box in a cool dry place where the temperature does not exceed 100°F.

IMPORTANT SAFETY INSTRUCTIONS

Basic precautions should be followed:

HOW TO RETECT THE PRODUCT.....

- (a) Read and follow all safety instructions, then save these instructions.
- (b) Should you discover any of this:
 1. Cut, damaged or frayed wire insulation.
 2. Cracks in the lamp holder or enclosures.
 3. Loose connections or exposed wires.Then return the product or contact the service agent.
- (c) Inspect product carefully before using or reusing.
- (d) When it is not in use, store neatly in a cool, dry place and avoid direct sunlight.
- (e) Do not close doors or windows while using product as this may damage the wire insulation.
- (f) Do not use this product for other than its intended propose, use it as indoor decoration.

WHEN YOU LEAVE.....

- (g) Pull the plug out when leaving the house, retiring for the night, or left it unattended for your safety.
- (h) Do not rest lamps on the cord or any wire.

DON'T LET ME NEAR.....

- (i) This is an electric product-not a toy! To avoid risk of fire, burns, personal injury and electric shock, it should not be played during set-up and take-down.
- (j) Do not mount or place near gas or electric heaters, fireplaces, candles or other similar source of heat.
- (k) Do not cover the product with clothes, papers or any material not part of the product when it is being used
- (l) Do not hang ornaments or other objects on cord, wire, or light string. Hang ornaments only on the tree itself.

IF PLUG DOES NOT FIT.....

- (m) The product has a polarized plug (one blade is wider than the other) as a feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, please reverse the plug. If it still doesn't work, please contact a qualified electrician. Do not use with an extension cord unless the plug can be fully inserted and do not replace the plug.

IF FUSE BLOWS.....

- (n) This product employs an overload protection (fuse). A blown fuse indicated an overload or short-circuit situation. If the fuse blows, please pull the plug out. Also unplug any additional strings or any parts come with the product. Replace the fuse as per the user servicing instructions (follow product marking for proper fuse rating) and check the product. If the replacement fuse blows, a short-circuit may be present and the product should be reviewed to determine the cause of this.