


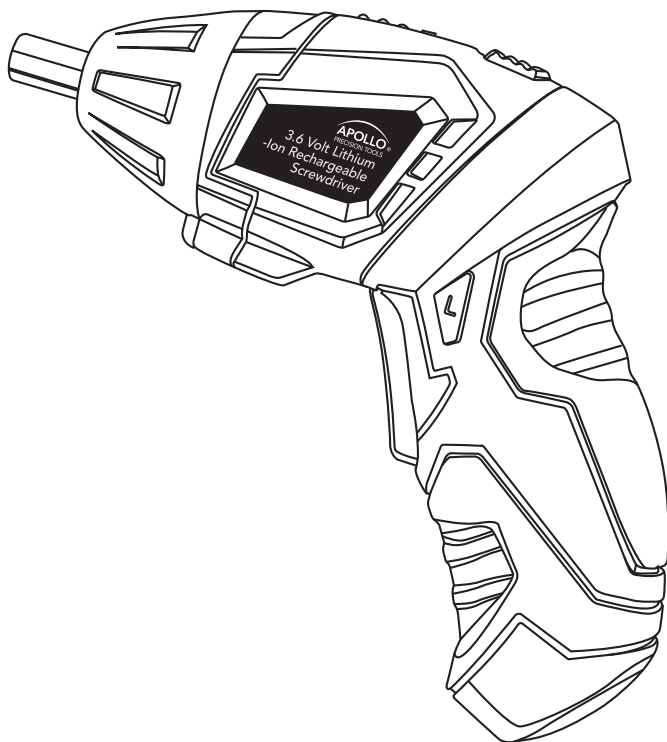

3.6 Volt Lithium-Ion Cordless Screwdriver Instruction Manual



Distributed By:
Apollo Tools, Ltd.
255 Clapp Road - Suite 200
Scituate, MA 02066



Visit our website at: www.ApolloTools.com
Contact us at: sales.usa@ApolloTools.com
Or phone us at: 1-866-591-4749
International Sales: sales@ApolloTools.com
Made in China

GENERAL SAFETY RULES



Warning! Read and understand all instructions.

Failure to follow all instructions listed below, may result in electric shock, fire and / or serious personal injury. Save all warnings and instructions for future reference.

WORK AREA

- * **Keep your work area clean and well lit.** Cluttered benches and dark areas invite accidents.
- * **Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases, or dust.** Power tools create sparks which may ignite the dust or fumes.
- * **Keep children, bystanders and visitors away while operating a power tool.**
Distractions can cause you to lose control.

ELECTRICAL SAFETY

- * **Power tools plug must match the outlet. Never modify the plug in any way. Do not use any adapter plugs with earthed (grounded) power tools.**
- * **Avoid body contact with earthed or grounded surfaces, such as pipes, radiators, ranges and refrigerators.**
- * **Do not expose power tools to rain or wet conditions.**
- * **Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts. Replace damaged cords immediately. Damaged cords may create a fire.**

PERSONAL SAFETY

- * **Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication.**
A moment of inattention while operating power tools may result in serious personal injury.
- * **Use safety equipment. Always wear eye protection.**
Dust mask, non-skid safety shoes, hard hat, or hearing protection must be used for appropriate conditions.
- * **Remove any adjusting key or wrench before turning the power tool on.**
- * **Do not overreach. Keep proper footing and balance at all times.**
Proper footing and balance enable better control of the tool in unexpected situations.
- * **Dress properly. Do not wear loose clothing or jewelry. Contain long hair. Keep your hair, clothing and gloves away from moving parts.** Loose clothes, jewelry, or long hair can be caught in moving parts.

POWER TOOL USE AND CARE

- * Do not force the power tool. Use the correct power tool for your application.
- * Do not use the power tool if the switch does not turn it on and off.
- * Disconnect the plug from the power source before making any adjustment, changing accessories, or storing power tools.
- * Store idle power tools out of the reach of children and other untrained persons. Tools are dangerous in the hands of untrained users.
- * Maintain power tools with care. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tools operation. If damaged, have the power tools repaired before use.

SERVICE

- * Tool service must be performed only by qualified repair personnel. Service or maintenance performed by unqualified personnel may result in a risk of injury.
- * When servicing a tool, use only identical replacement parts. Use unauthorized parts or failure to follow Maintenance Instructions may create a risk of shock or injury.

GENERAL SPECIFICATION

Voltage:	DC 3.6V
No Load speed:	200rpm
Charger:	Input 100~240VAC, 50Hz/60Hz Output DC 5V, 700mA
Charging time:	Approx. 3-5 hours
Battery type:	Li-ion 3.6V 1300 mAh

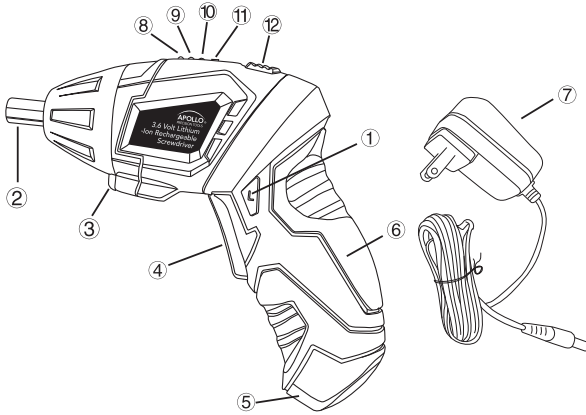


Figure 1

- ① Forward / Reverse rotation control
- ② Chuck
- ③ Work light
- ④ ON/OFF switch
- ⑤ Charging socket
- ⑥ Soft grip handle
- ⑦ Charger
- ⑧ Battery capacity indicator
- ⑨ Battery capacity indicator
- ⑩ Battery capacity indicator & Charging indicator
- ⑪ Battery capacity indicator switch
- ⑫ Handle release button



The screwdriver can be used extended or in "pistol grip" by adjusting the position of the handle. To change from straight to pistol grip, depress the handle release button ⑫ and rotate the handle of the unit anticlockwise until it clicks into position. To return to the straight position, reverse the process.



You can press the battery charge display switch to show the battery capacity. When the battery charge display lights up red, the battery has less than 30% of its capacity and should be charged.

Full power ----- Green + Yellow + Red

Full power but will require charging shortly ----- Yellow + Red

Needs charging ----- Red

SCREWDRIVER BIT INSERTION

Select the screwdriver tip that best fits the fastener to be removed or installed. Place the bit into the screwdriver collet and ensure it is in all the way. The cordless screwdriver **ONLY accepts** 1/4 in. **hex-shaft screwdriver bits**.

NOTE

The internal battery is not fully charged. Before first use, the battery requires 5-8 hours charge time to be fully charged. Subsequent recharging needs 3-5 hours for the battery to be fully charged.

Always recharge internal battery when tool performance begins to diminish. Severe heat is most destructive to a battery; the more heat generated, the faster the battery loses power. A battery that gets too hot can have a shorter life.

Never over-discharge a battery by using the tool even after tool performance has decreased. Do not attempt to discharge a tool's battery by continuing to pull on the tool trigger. When tool performance begins to diminish, stop the tool and recharge the battery for optimal performance.

Charge internal battery at ambient temperatures between +50°F (10°C) -95°F (35°C). Store tool and battery in locations where temperatures will not exceed 120°F. This is important to prevent serious damage to the battery cells.

CHARGER

⚠ WARNING: Before **using** the AC battery charger unit, please read carefully all instructions and cautionary markings on charger, battery and product using battery.

Use only the charger which accompanied your product or direct replacement as listed in this manual (Charger Model: XH0500-0700W.)

Do not substitute any other charger.

Do not disassemble charger. Do not use charger if it has been damaged, left outdoors in the rain, snow, wet or damp environments, or immersed in liquid.

When the battery requires recharging, a 3-5 hour charge allows the tool to operate at full power. A charging indicator light on the charger will illuminate to show that charging is taking place.

CHARGING THE SCREWDRIVER

1. Plug the output cord of the charger into the socket ⑤ as shown in Figure 1.
2. Plug the charger into standard electrical outlet.

OPERATING THE CORDLESS SCREWDRIVER

Push the forward / reverse control ① to the left, press the trigger to turn the screwdriver tip in a forward (to the right) motion to install the fastener.

Push the forward / reverse control ① to the right, press the trigger to turn the screwdriver tip in a reverse (to the left) motion to remove the fastener.

⚠ WARNING: Only use recommended accessories – use of unauthorized accessories can be hazardous and / or result in injury or damage.

Recycle, do not dispose of battery in trash or landfill.

APOLLO LIMITED WARRANTY:

The 3.6 V cordless screwdriver is intended for non-commercial use, with a one-year warranty. For questions or comments about this product or to obtain replacement parts, please call 1-866-591-4749. Register your product's warranty online at www.apollotools.com.

WARNING: Repairs should be made by an authorized repair center. Opening this tool could invalidate your warranty.



WARNING: Cancer and Reproductive Harm — www.P65Warnings.ca.gov