 




Product Manual

PTY00-16857
Peek-a-Bird™
Electronic
Cat Toy

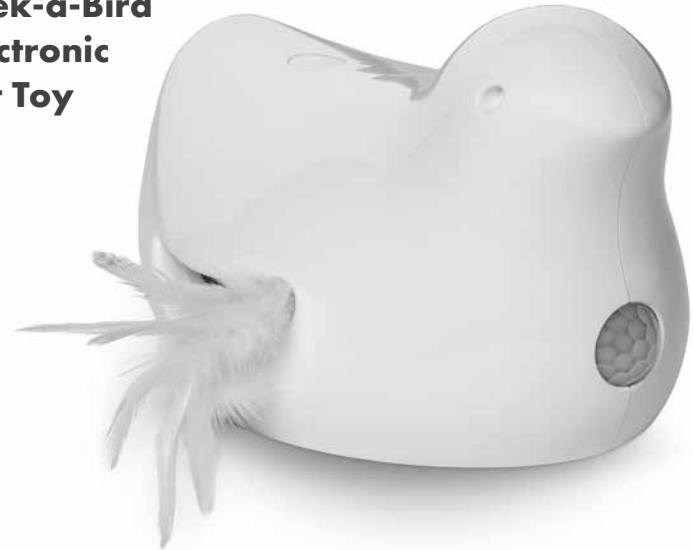

Please read the entire product manual before beginning.

Welcome

You and your pet were made for each other. Our aim is to help you have the best companionship and the most memorable moments together. Your new Peek-a-Bird™ Electronic Cat Toy is designed to keep your pet busy for hours.

We know that safe pets make happy owners. Before getting started, please take a moment to read through the important safety information. If you have any questions, please don't hesitate to contact us.

Hereinafter Radio Systems Corporation and any other affiliate or Brand of Radio Systems Corporation may be referred to collectively as "We" or "Us".

Hereinafter Radio Systems Corporation, Radio Systems PetSafe Europe Ltd., Radio Systems Australia Pty Ltd. and any other affiliate or Brand of Radio Systems Corporation may be referred to collectively as "We" or "Us".

IMPORTANT SAFETY INFORMATION

Explanation of Attention Words and Symbols used in this guide

! This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

CAUTION CAUTION, used with the safety alert symbol, indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.

CAUTION CAUTION, used without the safety alert symbol, indicates a hazardous situation which, if not avoided, could result in harm to your pet.

NOTICE NOTICE, is used to address safe use practices not related to personal injury.

CAUTION Keep away from children.

- Not intended as a Toy for children.
- Do not allow small children to use this product to play with your pet without adult supervision.
- Do not use this product until you have read the entire Product Manual.
- Do not use this product on an elevated surface such as a table or counter. Use on the floor only.
- This product should only be used in accordance with the instructions in the user guide.
- DO NOT USE RECHARGEABLE BATTERIES.

CAUTION

- Adult supervision is required around pets.
- Do not use play while away feature until you observe how your cat interacts with the toy. Only use play while away feature if you deem your cat uses product as intended.

NOTICE

- Inspect this product periodically for damage and discard product immediately if it appears worn or broken.
- Do not mix old and new batteries.
- Do not mix standard, alkaline or rechargeable batteries.
- Exhausted batteries should be removed immediately. Do not dispose of batteries with household waste.

These instructions must be retained and passed on with ownership. Toy Assembly

 
No assembly is required. To use, simply install batteries and follow the Operating Instructions. Do not place the toy on any surface other than a flat, level floor.

How it Works


The Peek-a-Bird™ Electronic Cat Toy is an automated, motion-activated cat toy that will encourage your cat to play. Simply insert batteries, choose which mode to use, and place it on the floor where the surface is flat. During One Time Play mode, the toy will play for 10 minutes, then turn off. During Play All Day mode, the toy will play every two hours, three times, for 10 minutes each. In between automatic play sessions, when the toy is resting,

the motion sensor on the front of the toy will detect nearby motion, within several feet, and turn on automatically. If no motion is detected, the toy will rest until the next automatic play session or motion is detected again.

Battery Installation

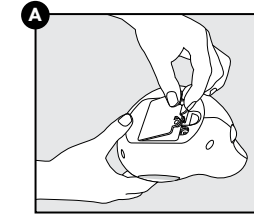

 
1. Locate battery door on bottom of the toy (A).

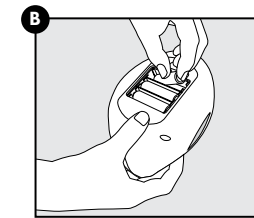

2. Insert 3 AA batteries into the battery compartment (B).

3. Replace the battery door and ensure it is closed properly. Tighten the screw to secure the battery door.

 Operating Instructions

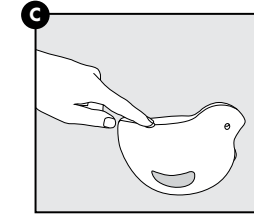

One Time Play:
Find the power button on the top of the toy. Press the button (C) and hold for one second, then release, to power on.

The toy will turn on and play for 10 minutes, then power off automatically.

To end the play session before 10 minutes, press the power button and hold for one second and release.

Play All Day:

Find the power button on the top of the toy. Press the button for 2-4 seconds, then release, to power on. The toy will beep three times to let you know when Play All Day mode is activated.

 
Play All Day mode lasts for a 6.5 hour time period. During this mode, the toy will:

- Play 10 minutes, rest for 2 hours. During rest time, motion sensor is on.
- Play 10 minutes, rest for 2 hours. During rest time, motion sensor is on.
- Play 10 minutes, rest for 2 hours, power off. During rest time, motion sensor is on.

During rest time in Play All Day mode, if motion is detected within 3-4 feet in front of the toy, it will turn on for 2 minutes. Once the cat walks away, the toy will rest again within 2 minutes. Note: motion has to be detected in front of the toy. Be sure to place the toy in a safe play area where the cat may walk by the front of it. There is a delay of 25 seconds after the 2 minutes of play before more motion is detected.


To power off while in Play All Day mode, press the power button on the top of the toy quickly once, then release.

To replace the feather cluster:

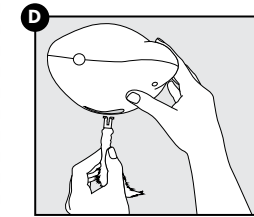

1. Press and hold the on/off button until you hear a total of five beeps, and release. Immediately press and release the button again. This will cause the feather cluster to stay in a fixed position for replacement.

 2. Pull the feather cluster firmly, until it pops off the retaining post (D). It will stretch a bit before it pops off. Take note of the orientation of the plastic clip end.

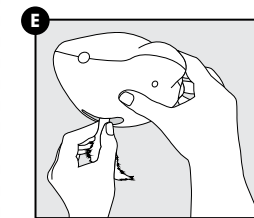

3. To replace, hold new feather cluster, being careful to orient the plastic clip end as pictured. Line it up with the retaining post, and push until you feel it clip back on (E). You should be able to gently pull on the feather to confirm it is firmly clipped onto retaining post.

To Ensure Proper Function

- Do not mix old and new batteries.
- Do not mix standard, alkaline or rechargeable batteries.
- Do not use rechargeable batteries.
- Exhausted batteries should be removed immediately. Do not dispose of batteries with household waste.

Advice for use

Apart from playing with this product, it is recommended that pet parents interact with their pets and provide a variety of play activities, opportunities for stimulation and appropriate amount of daily exercise as determined by their veterinarian.

Customer Care

USA & Canada – Tel: +1 800-732-2677, Monday–Friday 8 AM – 8 PM / Saturday 9 AM – 5 PM

Australia – Tel: 1800 786 608, Monday–Friday 0830 – 1700

New Zealand – Tel: 0800 543 054, Monday–Friday 1030 – 1900

Terms of Use and Limitation of Liability

1. Terms of Use

Use of this Product is subject to your acceptance without modification of the terms, conditions and notices contained herein. Use of this Product implies acceptance of all such terms, conditions and notices. If you do not wish to accept these terms, conditions, and notices, please return the Product, unused, in its original packaging and at your own cost and risk to the relevant Customer Care Center together with proof of purchase for a full refund.

2. Proper Use

If you are unsure whether this Product is appropriate for your pet, please consult your veterinarian or certified trainer prior to use. Proper use includes, without limitation, reviewing the entire Product Manual and any specific Caution statements.

3. No Unlawful or Prohibited Use

This Product is designed for use with pets only. Using this Product in a way that is not intended could result in violation of Federal, State or local laws.

4. Limitation of Liability

In no event shall Radio Systems Corporation or any of its associated companies be liable for (i) any indirect, punitive, incidental, special or consequential damage and/or (ii) any loss or damages whatsoever arising out of or connected with the misuse of this Product. The Purchaser assumes all risks and liability from the use of this Product to the fullest extent permissible by law.

5. Modification of Terms and Conditions

Radio Systems Corporation reserves the right to change the terms, conditions and notices governing this Product from time to time. If such changes have been notified to you prior to your use of this Product, they shall be binding on you as if incorporated herein.

Warranty

One Year Non-Transferable Limited Warranty

This Product has the benefit of a limited manufacturer’s warranty. Complete details of the warranty applicable to this Product and its terms can be found at petsafe.com and/or by contacting your local Customer Care Center.

Radio Systems Corporation, 10427 PetSafe Way, Knoxville, TN 37932 USA

Australia/New Zealand – In compliance with the Australian Consumer Law, Warranties Against Defects, effective January 1, 2012, warranty details of this Product are as follows: Radio Systems Australia Pty Ltd. (hereinafter referred to as “Radio Systems”) warrants to the original retail purchaser, and not any other purchaser or subsequent owner, that its Product, when subject to normal and proper residential use, will be free from defects in material or workmanship for a period of two (2) years from the purchase date. An “original retail consumer purchaser” is a person or entity who originally purchases the Product, or a gift recipient of a new Product that is unopened and in its original packaging. When serviced by Radio Systems Customer Service, Radio Systems covers labour and parts for the first two years of ownership; after the first two years, a service or upgrade charge will apply relative to replacement of the Product with new or refurbished items at Radio Systems’ sole discretion.

The limited warranty is non-transferable and shall automatically terminate if the original retail consumer purchaser resells the Radio Systems Product or transfers the property on which the Radio Systems Product is installed. This Limited Warranty excludes accidental damage due to dog chews; lightning damage; or neglect, alteration, and misuse. Consumers who purchase products outside of Australia, New Zealand, or from an unauthorised dealer will need to return the Product to the original place of purchase for any warranty issues.

Please note that Radio Systems does not provide refunds, replacements, or upgrades for change of mind, or for any other reason outside of these Warranty terms.

Claims Procedure: Any claim made under this Warranty should be made directly to Radio Systems Australia Pty Ltd. Customer Care Centre at:

Radio Systems Australia Pty Ltd.
PO Box 7266, Gold Coast Mail Centre QLD 9726, Australia
Australia Residents: 1800 786 608
New Zealand Residents: 0800 543 054
Email: aus-info@petsafe.net


To file a claim, a proof of purchase must be provided. Without a proof of purchase, Radio Systems will not repair or replace faulty components. Radio Systems requests the Consumer to contact the Radio Systems Customer Care Centre to obtain a Warranty Return number, prior to sending the Product. Failure to do so may delay in the repair or replacement of the Product.

If the Product is deemed to be faulty within 30 days from date of original purchase, Radio Systems will organise for a replacement to be sent in advance of returning the faulty Product. A Post Bag will be included with the replacement Product for the return of the faulty Product. The Product must be returned within 7 days of receiving the replacement. If the Product is deemed to be faulty after 30 days from the date of original purchase, the consumer will be required to return the Product to Radio Systems at the consumer’s own expense. Radio Systems will test and replace the faulty unit or its components and return to the consumer free of charge, provided the Product is within its said warranty period. This warranty is in addition to other rights and remedies available to you under the law. Radio Systems goods come with guarantees that cannot be excluded under the Australia Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled

to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Should you have any queries or require any further information, please contact our Customer Care Centre on 1800 786 608 (Australia) or 0800 543 054 (New Zealand).

Important Recycling Advice

 Please respect the Waste Electrical and Electronic Equipment regulations in your country. This equipment must be recycled. If you no longer require this equipment, do not place it in the normal municipal waste system. Please return it to where it was purchased in order that it can be placed in our recycling system. If this is not possible, please contact the Customer Care Center for further information. For a listing of Customer Care Center telephone numbers, visit our website at petsafe.com.

Compliance

FCC

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION: Modification or changes to this equipment not expressly approved by Radio Systems® Corporation may void the user’s authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a specific installation. If interference does occur to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult customer care, the dealer, or an experienced radio/TV technician for help.

ACMA

This device complies with the applicable EMC requirements specified by the ACMA (Australian Communications and Media Authority).

Radio Systems Corporation
10427 PetSafe Way
Knoxville, TN 37932
+1 (865) 777-5404

petsafe.com

AW400-2387

©2019 Radio Systems Corporation