



WARNING!

Before you use your DK2 trailer please make sure to apply grease. You can use the grease fitting on the rear side of the hub. This will prevent bearing failure. Bearings must be inspected every 500 km or 250 miles.

