

CROSLEY FURNITURE

Narrow Etagere CF6114

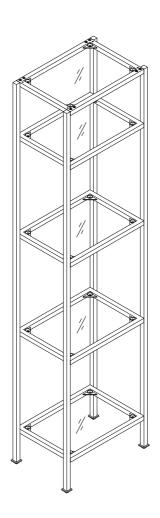


PART LIST

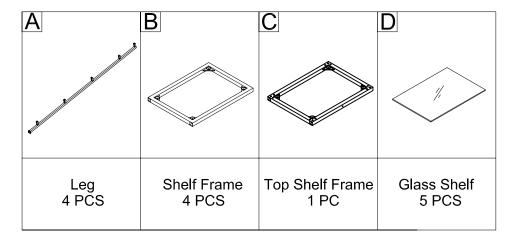

HARDWARE LIST


1	2	3	4
1/2"xØM6xD10			
Bolt 42 PCS (Extra 2)	Allen Wrench 1 PC	Safety Strap Kit 1 Set	Suction Cup Extra 2 PCS

Step 1. Carefully lay two legs (part A) down on a flat, soft surface, such as carpet as shown below. Attach top shelf frame (part C) and shelf frames (part B) to legs (part A) by inserting the U-shape brackets on legs (part A) into corner openings of top shelf frame (part C) and shelf frames (part B). Attach remaining two legs (part A) to assembled unit (parts A, B & C) using the same method mentioned earlier.

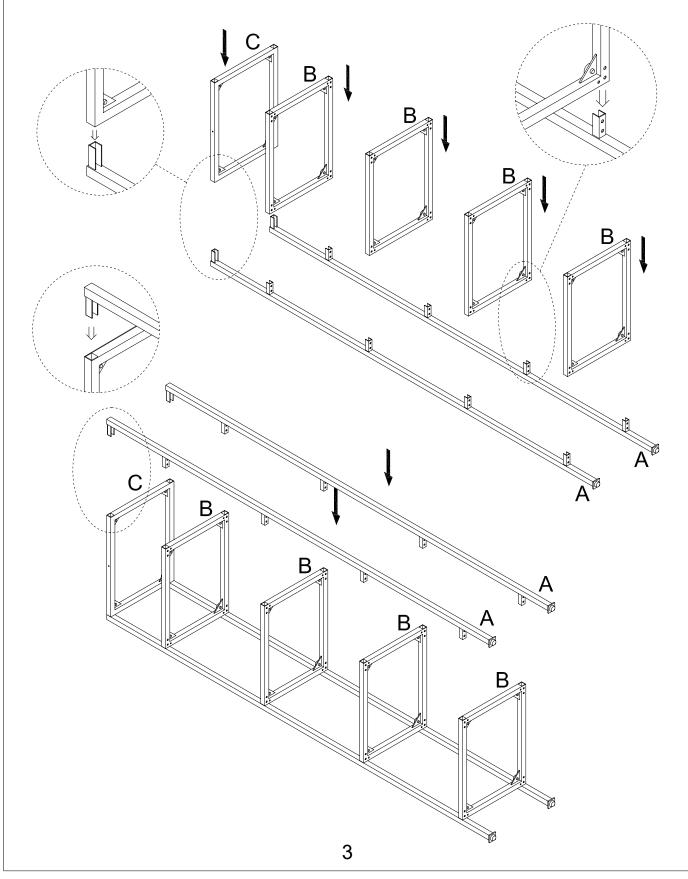

Step 2. Secure top shelf frame (part C) and shelf frames (part B) to the legs (part A) using bolts (part #1) and allen wrench (part #2). Bolts (part #1) will be inserted from the opposite direction for top shelf frame (part C) only.


Note: Please do not fully tighten bolts until all of them are in place.

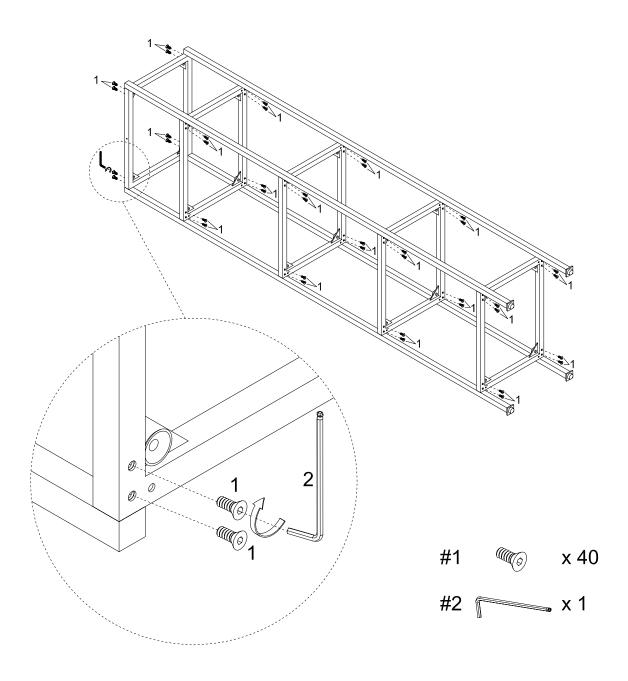


Step 3. Carefully turn the unit upright. Install glass shelves (part D) into the frame as shown.

Important: Safety strap kit (part #3) must be installed to prevent tipping, damage and / or injury. Note: It is important to adjust levelers once fully assembled and upright.

Extend adjustable levelers until it's firmly in contact with the floor. If relocating, adjust leveler as needed until it's firmly in contact with the floor in new location.

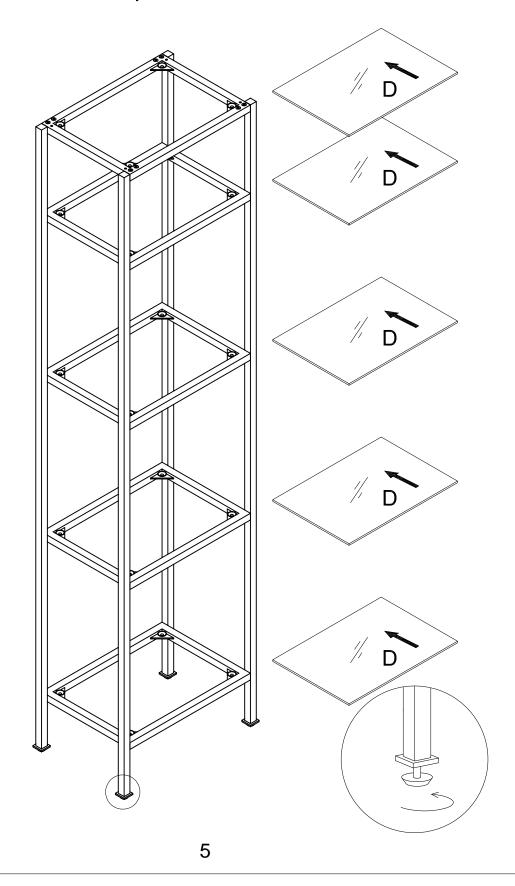

Step 4.

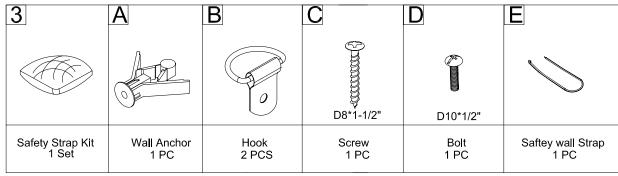


SAFETY WALL STRAP INSTALLATION


Note: It is highly recommended to install this safety strap kit to prevent tipping, damage and/or injury.

1) Attach hook (B) to top shelf frame (part C of etagere) using bolt (D) and philips head screwdriver. Attach it to the predrilled hole in the top shelf frame (part C of etagere).

- 2) Drill a 11/32" hole in the wall where this unit will be secured. The drilled hole will be at the same height as the hole in the top shelf frame (part C) where the hook (B) was attached. Tap wall anchor (A) into the drilled hole.
- 3) Attach hook (B) to wall anchor (A) using screw (C) and philips head screwdriver.
- 4) Insert safety wall strap (E) through both hooks (B) and tighten to secure.

Note: This item is not intended for clothing storage use.

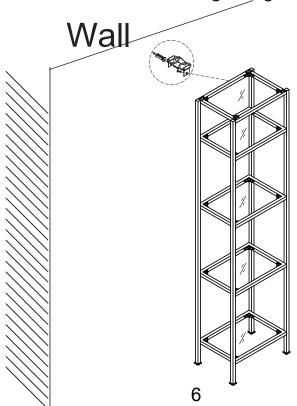

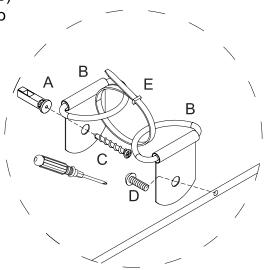

▲WARNING

WARNING

Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install tipover restraint provided.
- NEVER put a TV on this product
 NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
 Place heaviest items in the
 - Place heaviest items in the lowest drawers. This is a permanent label. Do not remove!