

treeline™ Deer Blind

WARNINGS

- For your safety be sure to read all instructions carefully.
- This hunting blind uses fire resistant material. This material is not flame proof.
- Do not allow open flames or other sources of ignition to come in contact with the material of this hunting blind.
- Do not use a heater in the blind. Unvented fumes can cause sickness or death.
- Do not shoot a firearm through the shoot through screens. The muzzle flash could ignite the screen material.
- Do not use expandable broadheads with shoot through screens. The blades may open prematurely. Use fixed blade broadheads only.
- Do not allow children to play with this blind without adult supervision.

WARNING:

KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC.

This tent is made with fabric that meets CPAI - 84 specifications for flame resistance. It is not fire proof. The fabric will burn if left in continuous contact with any flame source.
Manufacturer/Factory ID# 782780



CARE AND OTHER CAUTIONS:

In windy conditions you should stake down at least one bottom corner before beginning setup.

Be sure to stake down your blind to keep it securely in place.

Remove stakes before proceeding with takedown.

To prevent mildew, allow your blind to dry thoroughly before storing. Always store in a dry place.

SET-UP:

Carefully remove your Treeline Deer blind from backpack carry bag.

With both hands grasping the blind, pull coiled frame apart, slowly allowing blind to uncoil. Use CAUTION with this step to prevent sudden opening of blind.

Lay blind on ground and unfold panels. Open blind by lifting top section.

Set blind in upright position.

Locate interior corner webbing pockets and use shock-cord poles included to create domed shape of roof.

Secure poles at top with nylon tie-strap.



TAKE DOWN:

Take down of the Deluxe Ground blind is quick and easy. Start by removing stakes and shock-cord poles.

Fold panels together to create a flat section. Bend panel in half placing bottom edge against ground and folding down top edge until it meets bottom edge.

Hold top and bottom edges together by stepping on blind.

Hold intersection of two sides with one hand. Use other hand to release top edge from under foot. Push under overlapping sides towards center of blind. Blind will collapse into small circle.

Insert into carry bag.

