

treeline™ Deer Blind

WARNINGS

- For your safety be sure to read all instructions carefully.
- This hunting blind uses fire resistant material. This material is not flame proof.
- Do not allow open flames or other sources of ignition to come in contact with the material of this hunting blind.
- Do not use a heater in the blind. Unvented fumes can cause sickness or death.
- Do not shoot a firearm through the shoot through screens. The muzzle flash could ignite the screen material.
- Do not use expandable broadheads with shoot through screens. The blades may open prematurely. Use fixed blade broadheads only.
- Do not allow children to play with this blind without adult supervision.

WARNING:

KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC.

This tent is made with fabric that meets CPAI - 84 specifications for flame resistance. It is not fire proof. The fabric will burn if left in continuous contact with any flame source. Manufacturer/Factory ID# 782780



STEP 1



STEP 2



STEP 3



STEP 4



STEP 5

SETUP UP INSTRUCTIONS

STEP 1: Remove your blind from the carry bag and lay it on the ground.

STEP 2: Spread out the corners of the blind to locate the center hub on the ROOF of the blind.

STEP 3: Firmly pull the strap attached to the center hub ring until the ROOF pops out.

STEP 4: Locate the center hub on one of the WALLS and firmly pull the hub until the WALL pops out.

STEP 5: Continue around the blind, pulling the hubs one at a time until all four WALLS are set up. The blind is now ready for use. (Optional ground stakes are included to secure your blind to the ground.)

treeline™ Deer Blind

CARE

- Blind must never be packed while damp, as mildew will form within a few days.
- Allow to dry completely before collapsing and storing blind.

CONTENTS

- Blind Carry Bag
- Hunting Blind
- Instruction Sheet
- Ground Stake Bag
- (12) Ground Stakes
- (4) Tie Down Cords



STEP 3



STEP 5



STEP 6

TAKE DOWN INSTRUCTIONS

STEP 1: Close all the windows, but leave the door unzipped.

STEP 2: Remove any stakes and tie down ropes

STEP 3: Using your hand, push on the hub in the center of one of the WALLS until it disengages

STEP 4: Repeat step 4 on the remaining WALLS, and the blind will begin to collapse.

STEP 5: Once all the WALLS have collapsed, push on the center hub of the ROOF until the hub disengages.

STEP 6: With the blind laying on the ground, pick up the corners of the blind and fold inward. All the hubs will come together.

STEP 7: Place the blind in the carry bag with the hubs going into the bag first.

MADE IN CHINA