

 


# Crush User Manual

Read all instructions before use



## Interpupillary Distance Adjustment

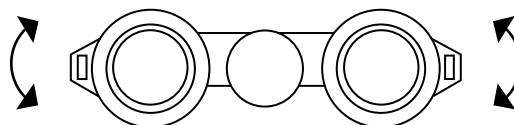

The distance between the eyes, called “interpupillary distance” (IPD), varies from person to person. To achieve perfect alignment of lens to eye, follow these steps.

1. Hold your binocular in the normal viewing position and look at an object in the distance.
2. Grasp each of the binocular barrels firmly. Move the barrels closer together or further apart until you see a single circular field.

## Focusing

After adjusting the interpupillary distance, follow steps below to focus the binoculars.

 
1. Close your right eye and look at an object in the distance through the left eyepiece with your left eye. Rotate the center focus until image is clear.
2. Close your left eye and look at the same object in the distance through the right eyepiece with your right eye. Rotate the right eye diopter until the image is clear.
3. Look through the binocular with both eyes and image should be clear, rotate the center focus for any further image adjustments.

## Eye Cups

The binocular is designed with twist up eye cups for your comfort. To exclude extraneous external light thus providing improved field of view.


### Eye Cups Down

Sunglasses / Eyeglasses Wearers



### Eye Cups Up

 Non Sunglasses / Eyeglasses Wearers

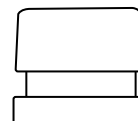

## Tripod Adapter Fitting

The binocular is equipped with a built in tripod adapter fitting. Carefully unscrew the cover screw located at the base of the binocular hinge to expose the threaded mounting socket for the tripod adapter to attach to. Tripod adapter NOT included.

## Care and Cleaning

### Care

If handled with care, this binocular will provide years of trouble-free service. Like any fine optical instrument your binocular should be given sensible care.

- Keep the lens covers on the lenses when binoculars are not in use.
- Store binoculars with the eye cups down.
- Avoid banging and dropping.
- Store in a cool, dry place.

### Cleaning

- Blow away any dust or debris on the lens (or use a soft lens brush)
- To remove dirt or fingerprints, clean with a soft cotton cloth rubbing in a circular motion. Use of a coarse cloth or unnecessary rubbing may scratch the lens surface and eventually cause permanent damage.
- For a more thorough cleaning, photographic lens tissue and photographic-type lens cleaning fluid or isopropyl alcohol may be used. Always apply the fluid to the cleaning cloth never directly on the lens.

NEVER attempt to clean your binocular internally or try to take it apart.

**DO NOT use this optical product to view the Sun or any light source. CAUTION: Viewing the Sun can cause permanent eye damage.**

## Parts Of The Binocular

- |                      |                             |
|----------------------|-----------------------------|
| A. Eyepiece          | E. Neck Strap Eyelet        |
| B. Right Eye Diopter | F. Objective Lens           |
| C. Center Focus      | G. Tripod Adaptable Fitting |
| D. Twist Up Eye Cups |                             |

\* Actual Model May Vary



### 3 YEAR LIMITED WARRANTY

#### **BINOCULARS / RIFLESCOPES / SPOTTING SCOPES**

BARSKA warrants this new precision optical product to be free of defects in material and/ or workmanship under normal use for a period of 3 years from the date product is purchased. This limited warranty is delimited to repair or replacement only. This warranty does not include damage caused by improper use or maintenance. BARSKA disclaims all liabilities for incidental or consequential damages such as misuse, abuse, accident (such as dropping), flood, service or repairs other than those performed by BARSKA, acts of nature, or arising out of any breach of this warranty. Altering the product under any circumstances will automatically void the warranty.

This warranty DOES NOT COVER ANY ACCESSORIES. Loss of the product or lens caps/covers, eyepieces, cases/pouches, or straps are not covered. Product normal wear and tear are not covered and the determination of such is at the sole discretion of BARSKA.

For service under this limited warranty, please have available the proof of purchase and the purchase date and location as well as a detailed description of the problem. This warranty is not transferable and only applies to the original purchaser with a proof of purchase from BARSKA or from an authorized dealer. This warranty applies only to products purchased within the United States, excludes Alaska, the Hawaiian Islands and all U.S. territories in the Caribbean and the Pacific.

BARSKA will examine and go through troubleshooting procedures, product repair or replacement of defective part(s) or units with new part(s) or provide a new unit if necessary during the warranty period. Shipping/handling charges may apply and are at Baraka's sole discretion. Purchaser shall be required to prepay Shipping/handling charges with a check or money order to BARSKA at time product is returned. The Return Merchandise Authorization Number (RMA#) and shipping/handling charge MUST be obtained from BARSKA in advance of return. BARSKA shall not be liable for damages or loss occurring during shipping. Please visit via [www.barska.com](http://www.barska.com) or call 909.445.8168 for more information.

BARSKA reserves the right to modify or discontinue, without prior notice to the purchaser, any model or style of the product. BARSKA will determine, at its sole discretion, whether a product will be repaired or replaced. BARSKA reserves the right to discontinue or change any feature of its products at any time. If an exact replacement or product is not available, BARSKA reserves the right to provide a part or product that matches as closely as possible.

#### **LIMITATION OF REMEDIES**

BARSKA disclaims any warranties, express or implied, whether of merchantability of fitness for a particular use, except as expressly set forth herein. The sole obligation of BARSKA under this limited warranty shall be to repair or replace the covered product, in accordance with the terms set forth herein. BARSKA expressly disclaims any lost profits, general, special, indirect or consequential damages which may result from breach of any warranty, or arising out of the use or inability to use any BARSKA product. Any warranties which are implied and which cannot be disclaimed shall be limited in duration to a term of three year from the date of original retail purchase. Some states do not allow the exclusion or limitation of incidental or consequential damages or limitation on how long an implied warranty lasts, so the above limitations and exclusions may not apply to you.

BARSKA 855 Towne Center Drive, Pomona, CA 91767

Note: All information, feature, and specification displayed herein are based on the data available at the time of publishing, thus they are subject to change without notice. All product pictures displayed herein are for illustration purposes only. The actual product may vary due to different circumstances.