


**ITEM No.: A301016900**

 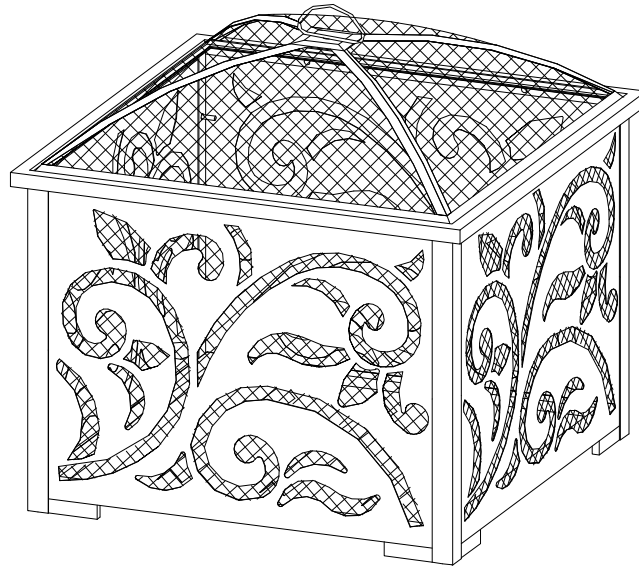


**WE HAVE YOU IN MIND, LET US SERVE YOU!**

Questions? Issues?

**CONTACT US**

24 hours / 7 days a week



**ONE YEAR WARRANTY**



[customer.care@sunjoygroup.com](mailto:customer.care@sunjoygroup.com)



**Toll Free**

**1-(866)-578-6569**

## Important Safety Instructions



**Warning!** Please read and understand this entire manual before attempting to assemble or operate this product.

**Caution!** Some parts may contain sharp edges. Please wear protective gloves during assembly

- This fire bowl is intended for outdoor use only. NEVER LEAVE A FIRE UNATTENDED.
- DO NOT use the fire bowl to cook food. The fire bowl is not designed for grilling food.
- DO NOT allow children or pets near the fire bowl without supervision.
- DO NOT touch the surface of the fire bowl while in use as it may cause burns.
- NEVER burn in vehicles, tents or indoors. CARBON MONOXIDE HAZARD.
- Use a poker and / or heat-resistant gloves to open / close the mesh cover while in use.
- DO NOT use water to extinguish as this is dangerous and can cause damage to the firepit.
- Burn only untreated wood or fire logs in this fire bowl.
- DO NOT use gasoline or kerosene to start the fire in this fire bowl.
- DO NOT use this fire bowl on a wood deck, long or dry grass and / or leaves, or on a combustible surface.
- DO NOT attempt to move the fire bowl while it is hot or in use.
- Place the fire bowl no closer than 8 ft. from walls or combustibles during use.
- Adequate fire extinguishing material should be readily available.
- The poker handle may become hot during and after use.
- The poker handle may become hot during and after use.
- Check local fire regulations and municipal by-laws for information regarding the safe use of this fire pit.




### Caution !








- Proper placement of your fire bowl is essential.
- Keep children away during assembly.  
This product contains small parts which can be swallowed by children.
- Keep fingers away from the places where they can be pinched or trapped. Please wear protective gloves during assembly.
- Do not attempt to assemble the fire bowl if any parts are missing.

 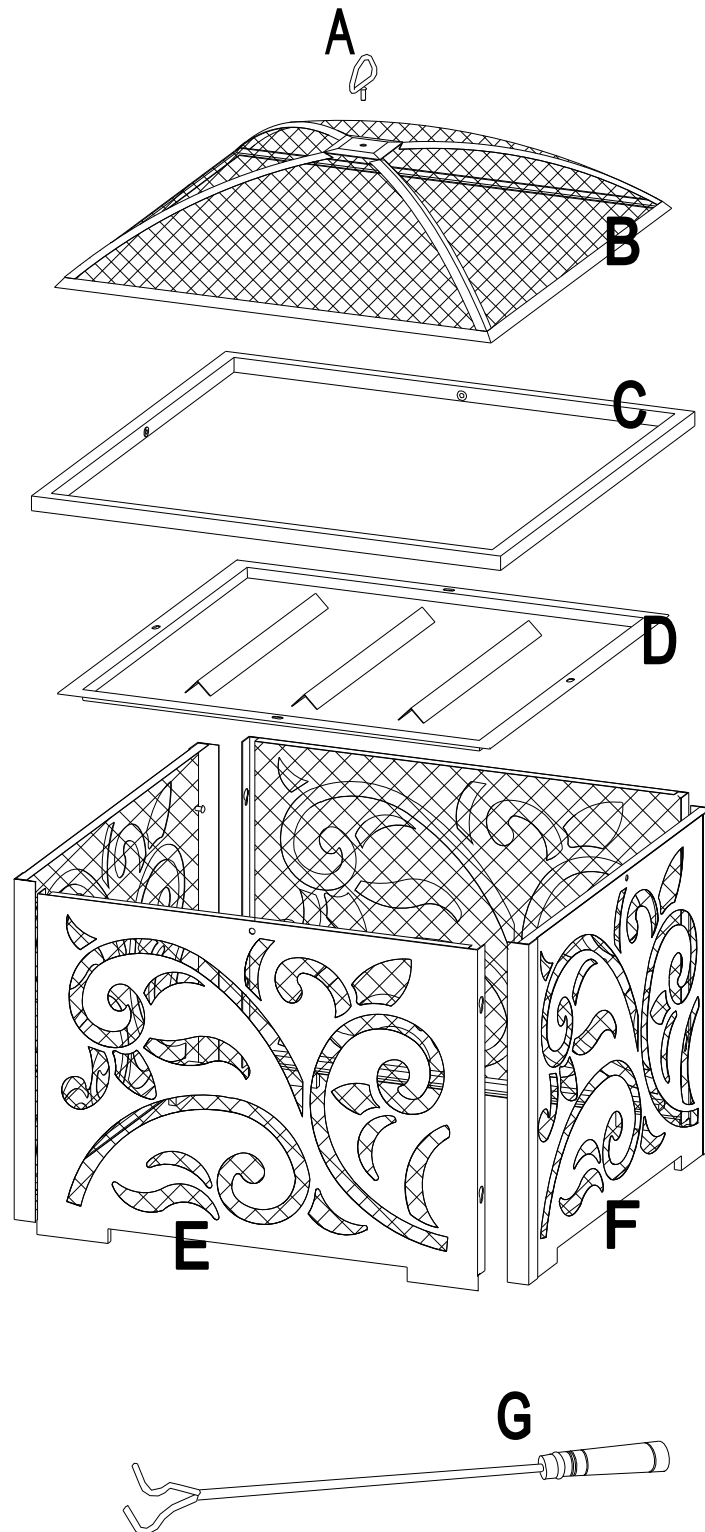Place all parts from the box in a cleared area and position them on the floor in front of you. Remove all packing materials and place them back into the box. Do not dispose of the packing materials until assembly is complete. Read each step carefully before beginning any assembly and make sure you understand each step.






# Exploded Drawing

 

## Parts List

  Label	Part Number	Description	Qty	Part Image
A	Handle	P005100124	1	
B	Spark guard	P002600050	1	
C	Top	P002200174	1	
D	Bowl	P002500110	1	
E	Front/back panel	P002400036	2	
F	Side panel with foot	P002400037	2	
G	Porker	P002700035	1	


## Hardware Pack

Label	Part Number	Description	Qty	Part Image
AA	H040020004	Nut M6	1	
BB	H010110016	Bolt M6*15	8	
CC	H050020011	Spring washer M6	8	
DD	H050010028	Flat washer M6	8	
EE	H090010002	Wrench M6	1	

## Hardware Pack


### Step1:

- 1 Insert handle(A) into Spark guard(B) and fasten by using Flange nut(AA).

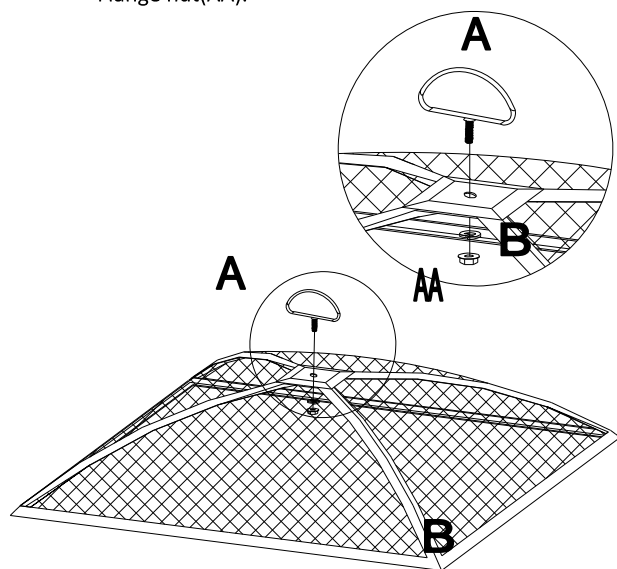


### Step2:

- 2 Attach front/back panel (E) to Bowl(D), by using bolt (BB), spring washer (CC) and flat washer (DD).

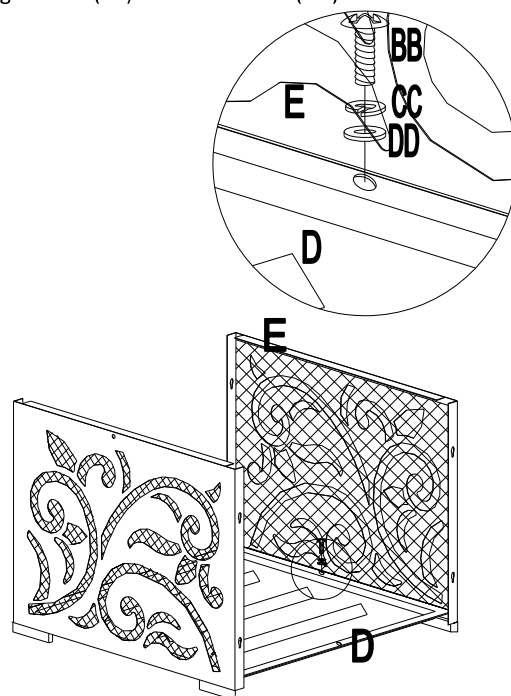


### Step 3:


- 3 Line up the side panel(F) to assembled panel (E), insert screws into holes as Fig3.1, then tighten them down as Fig3.2, fix Bolt (BB), Spring washer(CC) and flat washer (DD) not locking as Fig3.3

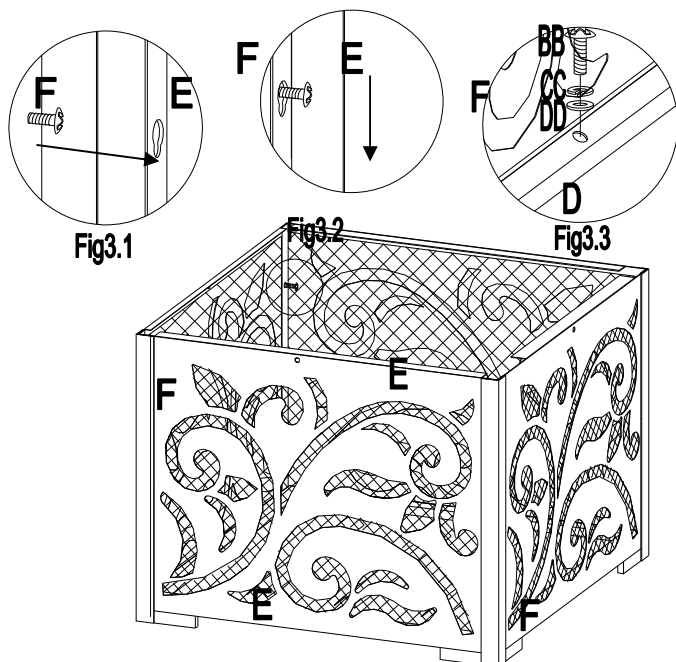

### Step 4:

4. Fix assembled panel(E&F), by using Bolt(BB), Spring washer(CC) and Flat washer(DD), then locking all screw.

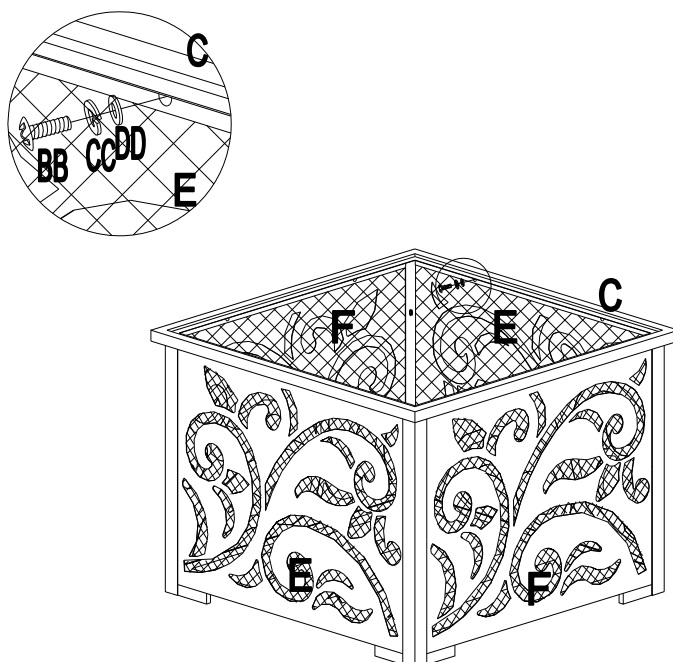

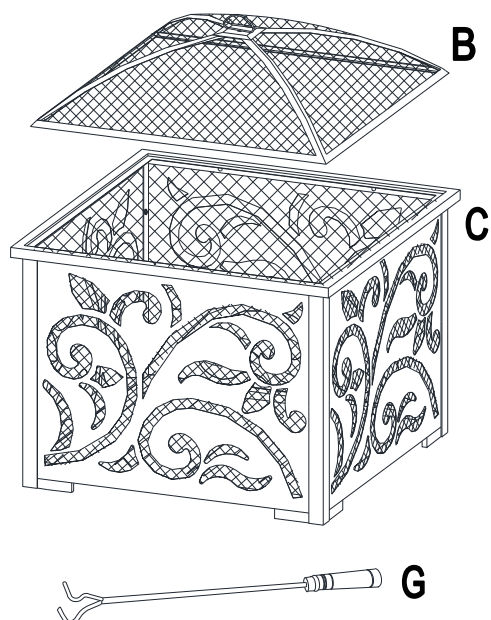

Step 5:

5 Put the spark Guard( B) on assembled top (C), keep poker (G) aside for use.

## Cleaning and Maintenance



### Caution!

- Check all screws and nuts periodically for tightness, fastening them again as required.

- **Lighting**
  - Make sure there is only a small amount of ash in the bottom of the bowl.
  - Place a layer of dry seasoned hardwood that covers no more than 3/4 of the bowl.
  - Use a match to light kindling or fire starter.
  - Use the poker that is provided to operate. Please wear heat-resistant gloves during use.
- **Extinguishing**
  - Allow fire to burn itself out.
  - DO NOT use water to extinguish as this is dangerous and can damage this fire bowl.
- **Cleaning**
  - This fire bowl should be cleaned on a regular basis to promote safer experience and long product life. - DO NOT attempt to clean this fire bowl until the fire is COMPLETELY out and cool to touch.
  - DO NOT use oven cleaner or abrasive cleaner as this will damage the fire bowl.
- **Storage**
  - DO NOT move or store this fire bowl until the fire is COMPLETELY out and cool to touch.
  - Store the fire bowl in a dry location to maximize product life.
  - Store assembled fire bowl in a location away from children and pets.

## SIX-MONTHS LIMITED WARRANTY

This limited warranty is extended to the original purchaser and applies to defects in material and workmanship of your item provided the item is maintained with care and used only for personal, residential purposes. The manufacturer warrants this item is free of defects in material and workmanship for a period of six months. If any defect is found, please call our customer service department at 1-866-578-6569 or email at [customer.care@sunjoygroup.com](mailto:customer.care@sunjoygroup.com) for help. The manufacturer will not cover transportation or delivery costs or compensate the individual or any outside party for